

Tile Roofing for Hurricane-Prone Areas



FEMA
www.fema.gov

HURRICANE RECOVERY ADVISORY

Recovery Advisory No. 3

Purpose: To provide recommended practices for designing and installing extruded concrete and clay tiles that will enhance wind resistance in hurricane-prone areas (both coastal and inland).

Key Issues

Missiles: Tile roofs are very vulnerable to breakage from wind-borne debris (missiles). Even when well attached, they can be easily broken by missiles. If a tile is broken, debris from a single tile can impact other tiles on the roof, which can lead to a progressive cascading failure. In addition, tile missiles can be blown a considerable distance and a substantial number have sufficient energy to penetrate shutters and glazing, and potentially cause injury. Where the basic wind speed is equal to or greater than 110 mph (3-second peak gust), the wind-borne debris issue is of greater concern than in lower wind speed regions. Note: There are currently no testing standards requiring roof tile systems to be debris impact resistant.

Attachment methods: Storm damage investigations revealed performance problems with mortar-set, mechanically-attached (screws or nails and supplementary clips when necessary) and foam-adhesive (adhesive-set) attachment methods. In many instances, the damage was due to poor installation. Investigations revealed that the mortar-set attachment method is typically much more susceptible to damage than are the other attachment methods. Therefore, in lieu of mortar-set, the mechanically-attached or foam-adhesive attachment methods in accordance with this Advisory are recommended.

To ensure quality installation, licensed contractors should be retained. This will help ensure proper permits are filed and local building code requirements are met. For foam-adhesive systems, it is highly recommended that installers be trained and certified by the foam manufacturer.



Uplift loads and resistance: Calculate uplift loads and resistance in accordance with the “Design and Construction Guidance” section below. Load and resistance calculations should be performed by a qualified person (i.e., someone who is familiar with the calculation procedures and code requirements).

Corner and perimeter enhancements: Uplift loads are greatest in corners, followed by the perimeter and then the field of the roof (see Figure 1). However, for simplicity of application on smaller roof areas (e.g., most residences and smaller commercial buildings), use the attachment designed for the corner area throughout the entire roof area.

Hips and ridges: Storm damage investigations have revealed that hip and ridge tiles attached with mortar are very susceptible to blow-off. Refer to the attachment guidance below for improved attachment methodology.

Quality control: During roof installation, installers should implement a quality control program in accordance with the “Quality Control” section below.

Design and Construction Guidance

1. Uplift Loads

In Florida, calculate loads and pressures on tiles in accordance with the current edition of the *Florida Building Code* (Section 1606.3.3). In other states, calculate loads in accordance with the current edition of the *International Building Code* (Section 1609.7.3).

As an alternate to calculating loads, design uplift pressures for the corner zones of Category II buildings are provided in tabular form in the Addendum to the Third Edition of the *Concrete and Clay Roof Tile Installation Manual* (see Tables 6, 6A, 7, and 7A).¹

Classification of Buildings

- | | |
|---------------------|---|
| Category I | - Buildings that represent a low hazard to human life in the event of a failure |
| Category II | - All other buildings not in Categories I, III, and IV |
| Category III | - Buildings that represent a substantial hazard to human life |
| Category IV | - Essential facilities |

Note: In addition to the tables referenced above, the *Concrete and Clay Roof Tile Installation Manual* contains other useful information pertaining to tile roofs. Accordingly, it is recommended that designers and installers of tile obtain a copy of the Manual and the Addendum. Hence, the tables are not incorporated in this Advisory.

2. Uplift Resistance

For mechanical attachment, the *Concrete and Clay Roof Tile Installation Manual* provides uplift resistance data for different types and numbers of fasteners and different deck thicknesses. For foam-adhesive-set systems, the Manual refers to the foam-adhesive manufacturers for uplift resistance data. Further, to improve performance where the basic wind speed is equal to or greater than 110 mph, it is recommended that a clip be installed on each tile in the first row of tiles at the eave for both mechanically-attached and foam-adhesive systems.

For tiles mechanically attached to battens, it is recommended that the tile fasteners be of sufficient length to penetrate the underside of the sheathing by $\frac{1}{4}$ " minimum. For tiles mechanically attached to counter battens, it is recommended that the tile fasteners be of sufficient length to penetrate the underside of the horizontal counter battens by $\frac{1}{4}$ " minimum. It is recommended that the batten-to-batten connections be engineered.

For roofs within 3,000 feet of the ocean, straps, fasteners, and clips should be fabricated from stainless steel to ensure durability from the corrosive effects of salt spray.

3. Hips and Ridges

The *Concrete and Clay Roof Tile Installation Manual* gives guidance on two attachment methods for hip and ridge tiles: mortar-set or attachment to a ridge board. Based on post-disaster field investigations, use of a ridge board is recommended. For attachment of the board, refer to Table 21 in the Addendum to the *Concrete and Clay Roof Tile Installation Manual*.

Fasten the tiles to the ridge board with screws (1" minimum penetration into the ridge board) and use both adhesive and clips at the overlaps.

For roofs within 3,000 feet of the ocean, straps, fasteners, and clips should be fabricated from stainless steel to ensure durability from the corrosive effects of salt spray.

4. Critical and Essential Buildings (Category III or IV)

Critical and essential buildings are buildings that are expected to remain operational during a severe wind event such as a hurricane. It is possible that people may be arriving or departing from the critical or essential facility during a hurricane. If a missile strikes a tile roof when people are outside the building, those people may be struck by tile debris dislodged by the missile strike. Tile debris may also damage the facility. It is for these reasons that tiles are not recommended on critical or essential buildings.


If it is decided to use tile on a critical or essential facility and if the tiles are mechanically attached, it is recommended that clips be installed at all tiles in the corner, ridge, perimeter, and hip zones (see ASCE 7-02 for the width of these zones). (See Figure 1)

5. Quality Control

It is recommended that the applicator designate an individual to perform quality control (QC) inspections. That person should be on the roof during the tile installation process (the QC person could be a working member of the crew). The QC person should understand the attachment requirements for the system being installed (e.g., the type and number of fasteners per tile for mechanically attached systems and the size and location of the adhesive for foam-adhesive systems) and have authority to correct noncompliant work. The QC person should ensure that the correct type, size, and quantity of fasteners are being installed.

For foam-adhesive systems, the QC person should ensure that the foam is being applied by properly trained applicators and that the work is in accordance with the foam manufacturer's application instructions. At least one tile per square (100 square feet) should be pulled up to confirm the foam provides the minimum required contact area and is correctly located.

If tile is installed on a critical or essential building, it is recommended that the owner retain a qualified architect, engineer, or roof consultant to provide full-time field observations during application.

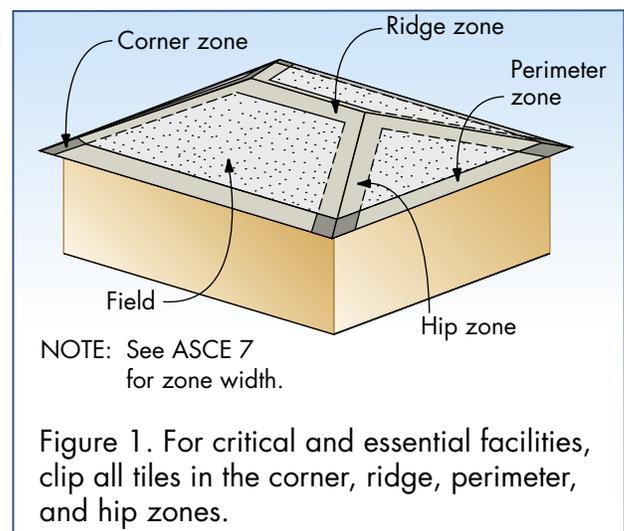

¹ The Manual can be purchased online from the Florida Roofing, Sheet Metal and Air Conditioning Contractor's Association, Inc. at www.floridarooft.com or by calling (407) 671-3772. Holders of the Third Edition of the Manual who do not have a copy of the Addendum can download it from this web site.