


NEHRP Handbook of Techniques for the Seismic Rehabilitation of Existing Buildings



Issued by FEMA in furtherance of the
Decade for Natural Disaster Reduction.

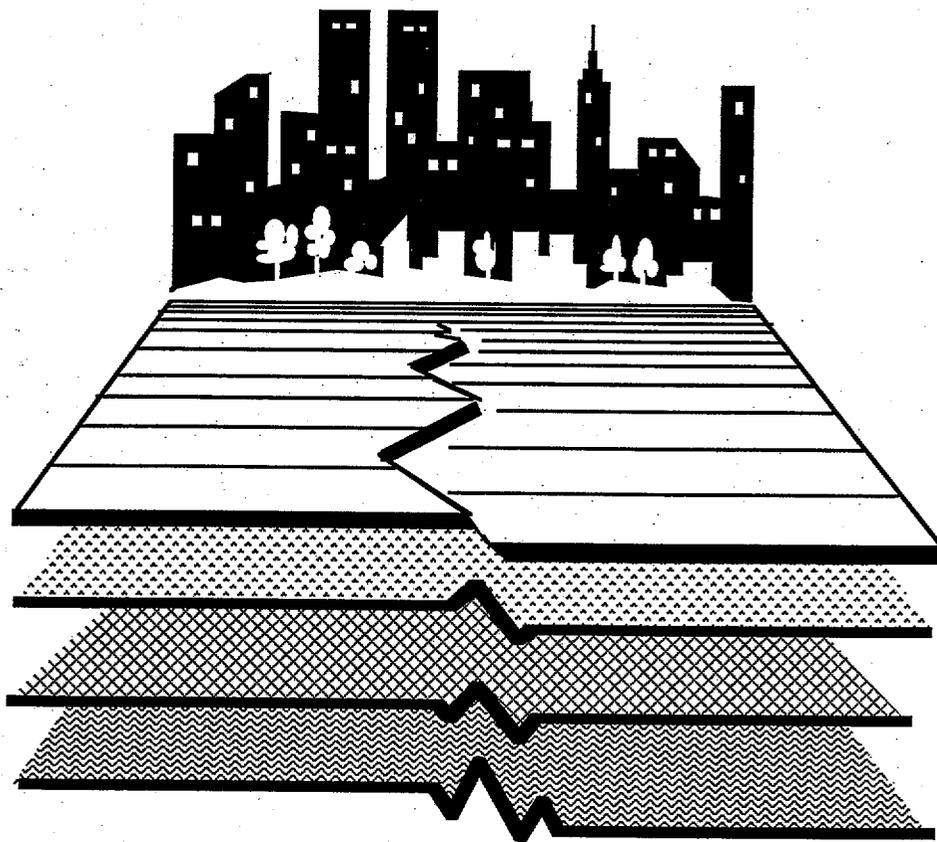

NEHRP Handbook of Techniques for the Seismic Rehabilitation of Existing Buildings



**Program
on
Improved
Seismic
Safety
Provisions**

A Council of the National Institute of Building Sciences

NEHRP HANDBOOK OF TECHNIQUES FOR THE SEISMIC REHABILITATION OF EXISTING BUILDINGS

THE BUILDING SEISMIC SAFETY COUNCIL AND ITS PURPOSE

The Building Seismic Safety Council (BSSC) was established in 1979 under the auspices of the National Institute of Building Sciences (NIBS) as an entirely new type of instrument for dealing with the complex regulatory, technical, social, and economic issues involved in developing and promulgating building earthquake hazard mitigation regulatory provisions that are national in scope. By bringing together in the BSSC all of the needed expertise and all relevant public and private interests, it was believed that issues related to the seismic safety of the built environment could be resolved and jurisdictional problems overcome through authoritative guidance and assistance backed by a broad consensus.

The BSSC is an independent, voluntary membership body representing a wide variety of building community interests. Its fundamental purpose is to enhance public safety by providing a national forum that fosters improved seismic safety provisions for use by the building community in the planning, design, construction, regulation, and utilization of buildings. To fulfill its purpose, the BSSC:

- Promotes the development of seismic safety provisions suitable for use throughout the United States;
- Recommends, encourages, and promotes the adoption of appropriate seismic safety provisions in voluntary standards and model codes;
- Assesses progress in the implementation of such provisions by federal, state, and local regulatory and construction agencies;
- Identifies opportunities for improving seismic safety regulations and practices and encourages public and private organizations to effect such improvements;
- Promotes the development of training and educational courses and materials for use by design professionals, builders, building regulatory officials, elected officials, industry representatives, other members of the building community, and the public;
- Advises government bodies on their programs of research, development, and implementation; and
- Periodically reviews and evaluates research findings, practices, and experience and makes recommendations for incorporation into seismic design practices.

The BSSC's area of interest encompasses all building types, structures, and related facilities and includes explicit consideration and assessment of the social, technical, administrative, political, legal, and economic implications of its deliberations and recommendations. The BSSC believes that the achievement of its purpose is a concern shared by all in the public and private sectors; therefore, its activities are structured to provide all interested entities (i.e., government bodies at all levels, voluntary organizations, business, industry, the design profession, the construction industry, the research community, and the general public) with the opportunity to participate. The BSSC also believes that the regional and local differences in the nature and magnitude of potentially hazardous earthquake events require a flexible approach to seismic safety that allows for consideration of the relative risk, resources, and capabilities of each community.

The BSSC is committed to continued technical improvement of seismic design provisions, assessment of advances in engineering knowledge and design experience, and evaluation of earthquake impacts. It recognizes that appropriate earthquake hazard reduction measures and initiatives should be adopted by existing organizations and institutions and incorporated, whenever possible, into their legislation, regulations, practices, rules, codes, relief procedures, and loan requirements so that these measures and initiatives become an integral part of established activities, not additional burdens. The BSSC itself assumes no standards-making and -promulgating role; rather, it advocates that code- and standards-formulation organizations consider BSSC recommendations for inclusion into their documents and standards.

BSSC Program on Improved Seismic Safety Provisions

**NEHRP HANDBOOK OF TECHNIQUES
FOR THE SEISMIC REHABILITATION OF
EXISTING BUILDINGS**

**Developed by the
Building Seismic Safety Council
for the
Federal Emergency Management Agency
Based on a Preliminary Version Prepared for FEMA by
the URS/John A. Blume and Associates, Engineers**

**BUILDING SEISMIC SAFETY COUNCIL
Washington, D.C.
1992**

NOTICE: Any opinions, findings, conclusions, or recommendations expressed in this publication do not necessarily reflect the views of the Federal Emergency Management Agency. Additionally, neither FEMA nor any of its employees make any warranty, expressed or implied, nor assume any legal liability or responsibility for the accuracy, completeness, or usefulness of any information, product, or process included in this publication.

This report was prepared under Contract EMW-88-C-2924 between the Federal Emergency Management Agency and the National Institute of Building Sciences.

Building Seismic Safety Council reports include the documents listed below; unless otherwise noted, single copies are available at no charge from the Council:

Abatement of Seismic Hazards to Lifelines: Proceedings of the Building Seismic Safety Council Workshop on Development of an Action Plan, 6 volumes, 1987

Action Plan for the Abatement of Seismic Hazards to New and Existing Lifelines, 1987

Guide to Use of the NEHRP Recommended Provisions in Earthquake-Resistant Design of Buildings, 1990

NEHRP (National Earthquake Hazards Reduction Program) Recommended Provisions for the Development of Seismic Regulations for New Buildings, 1988 and 1991 Editions, 2 volumes and maps, 1988 and 1991

NEHRP Handbook for the Seismic Evaluation of Existing Buildings, 1992

NEHRP Handbook of Techniques for the Seismic Rehabilitation of Existing Buildings, 1992

Non-Technical Explanation of the NEHRP Recommended Provisions, Revised Edition, 1990

Seismic Considerations for Communities at Risk, 1990*

Seismic Considerations: Elementary and Secondary Schools, Revised Edition, 1990

Seismic Considerations: Health Care Facilities, Revised Edition, 1990

Seismic Considerations: Hotels and Motels, Revised Edition, 1990

Seismic Considerations: Apartment Buildings, 1988

Seismic Considerations: Office Buildings, 1988

Societal Implications: Selected Readings, 1986.

Strategies and Approaches for Implementing a Comprehensive Program to Mitigate the Risk to Lifelines from Earthquakes and Other Natural Hazards, 1989 (available from the National Institute of Building Sciences for \$11)

For further information concerning any of these documents or the activities of the BSSC, contact the Executive Director, Building Seismic Safety Council, 1201 L St., N.W., Suite 400, Washington, D.C. 20005.

*An earlier version of this publication was entitled *Societal Implications: A Community Handbook*.

FOREWORD

The Federal Emergency Management Agency (FEMA) is pleased to have sponsored the preparation of this publication on seismic strengthening of existing buildings. The publication is one of a series that FEMA is sponsoring to encourage local decision makers, design professionals, and other interested groups to undertake a program of mitigating the risks posed by existing hazardous buildings in the event of an earthquake. Publications in this series are being prepared under the National Earthquake Hazards Reduction Program (NEHRP) and examine both the engineering/architectural aspects and societal impacts of seismic rehabilitation.

FEMA's existing buildings activities are structured to result in a coherent, cohesive, carefully selected and planned reinforcing set of documents designed for national applicability. The resulting publications (descriptive reports, handbooks, and supporting documentation) provide guidance primarily to local elected and appointed officials and design professionals on how to deal not only with earthquake engineering problems but also with the public policy issues and societal dislocations associated with major seismic events. It is a truly interdisciplinary set of documents that includes this handbook of techniques as well as a companion volume presenting a methodology for conducting an evaluation of the seismic safety of existing buildings.

With respect to this handbook, FEMA gratefully acknowledges the expertise and efforts of the Building Seismic Safety Council's Retrofit of Existing Buildings Committee, Board of Direction, member organizations, and staff and of the members of the Technical Advisory Panel and URS/John A. Blume and Associates management and staff.

Federal Emergency Management Agency

PREFACE

This handbook of techniques for solving a variety of seismic rehabilitation problems and its companion publication on the seismic evaluation of existing buildings reflect basic input provided by two organizations recognized for their retrofit evaluation and design experience as well as the results of a consensus development activity carried out by the Building Seismic Safety Council (BSSC). The preliminary version of this document, the *NEHRP Handbook of Techniques for the Seismic Rehabilitation of Existing Buildings*, was developed for FEMA by URS/John A. Blume and Associates, Engineers (URS/Blume). A companion volume, the *NEHRP Handbook for the Seismic Evaluation of Existing Buildings*, for which a preliminary version was developed for FEMA by the Applied Technology Council (ATC), provides a method for evaluating existing buildings to identify those that are likely to be seismically hazardous. The BSSC project, initiated at the request of FEMA in October 1988, has focused on identification and resolution of technical issues in and appropriate revision of the two handbooks by a 22-member Retrofit of Existing Buildings (REB) Committee composed of individuals possessing expertise in the various subjects needed to address seismic rehabilitation.

The balloting of the two handbooks was conducted on a chapter-by-chapter basis in September and October 1991. Although all parts of both handbooks passed the ballot by the required two-thirds majority, the Board, after reviewing the ballot results in November 1991, concluded that many of the comments were sufficiently serious to warrant further consideration and that the REB Committee should have the opportunity to review the ballot comments and propose changes for reballoting in response to those considered persuasive. The REB Committee members then were asked to review the ballot comments and forward the results of their review to a member of the REB Executive Committee. In turn, the Executive Committee met in early January 1992 to consider committee member suggestions and prepare responses to the ballot comments and proposals for revision of the handbooks. The Executive Committee recommendations for reballoting were presented to and accepted by the BSSC Board. The reballot proposals were developed and submitted to the BSSC member organizations for balloting in late January 1992. All the reballot proposals passed but several issues raised in comments were considered and resolved at a special meeting of the Council in February 1992.

The BSSC REB Committee and Board of Direction believe that these two handbooks will prove to be beneficial to those who are involved in or who need to begin exploring the seismic evaluation and rehabilitation of existing buildings, a topic of growing importance especially in the eastern and midwestern parts of the nation where little such work has been done. It is hoped that experience with the application of these handbooks will generate feedback that can serve as the foundation for the enhancement of future documents dealing with the seismic rehabilitation of existing buildings. To this end, a User Comment Form is included in the handbooks to stimulate those who work with the handbooks to report their experiences. In addition, since some of the issues raised by BSSC member organizations during the balloting of the handbooks bear on the need for future enhancement of the information presented, a summary of the results of the BSSC balloting including all comments received and committee decisions/responses to those comments is available to interested readers upon request to the BSSC.

The Board wishes to emphasize that these documents are intended to serve as informational "points of departure" for the professional involved in seismic evaluation and rehabilitation. They cannot yet be considered all inclusive nor are they intended to serve as the basis for regulation. Rather, it is hoped that both will prove to be of sufficient value to warrant expansion and refinement.

Considerable effort has gone into the development of this handbook. On behalf of the BSSC Board, I wish to acknowledge the organizations and individuals who have participated. The Board is particularly grateful for the extensive contribution of time and expertise from those serving on its Retrofit of Existing Buildings Committee of volunteer experts:

Daniel Shapiro, SOH and Associates, San Francisco, California (Committee Chairman)
M. Agabian, University of Southern California, Los Angeles, California
Christopher Arnold, Building Systems Development, San Mateo, California
Mohammad Ayub, U.S. Department of Labor, Washington, D.C.
John R. Battles, Southern Building Code Congress, International, Birmingham, Alabama

Pamalee Brady, U.S. Army Construction Engineering, Champaign, Illinois
Vincent R. Bush, Consulting Structural Engineer, Walnut, California
John Canestro, City of Orinda, Pleasanton, California
Arnaldo T. Derecho, Wiss, Janney, Elstner Associates, Incorporated, Northbrook, Illinois
Edward Diekmann, GFDS Structural Engineers, San Francisco, California
Ronald P. Gallagher, R. P. Gallagher Associates, Incorporated, San Francisco, California
James R. Harris, J. R. Harris and Company, Denver, Colorado
John Kariotis, Kariotis and Associates, South Pasadena, California
Franklin Lew, Contra Costa County, Martinez, California
Frank E. McClure, Consulting Structural Engineer, Orinda, California
Allan R. Porush, Dames and Moore, Los Angeles, California
Norton S. Remmer, Consulting Engineer, Worcester, Massachusetts
Ralph Rowland, Architectural Research, Cheshire, Connecticut
Earl Schwartz, Los Angeles City Department of Building and Safety, Los Angeles, California
William W. Stewart, William Stewart and Associates, Clayton, Missouri
Robert Voelz, Bentley Engineering Company, San Francisco, California
Loring A. Wyllie, H. J. Degenkolb Associates, San Francisco, California

Needless to say, the Council's project would not have been successful without the developmental work and cooperation of the URS/Blume project staff: **R. Martin Czarnecki, Principal-in-Charge; John F. Silva, Project Manager; David M. Bergman, Project Engineer; Joseph P. Nicoletti, Consultant; Walter N. Mestrovich; and Kit Wong.**

Further, the BSSC Board wishes to acknowledge the contribution of URS/Blume's Technical Advisory Panel: **Vitelmo V. Bertero, Robert D. Hanson, James O Jirsa, James M. Kelley, Stephen A. Mahin, Roger E. Scholl, and James K. Wight.**

Finally, I would be remiss if I did not acknowledge the effort of the BSSC staff: **James R. Smith, Executive Director; O. Allen Israelsen, Professional Engineer and Project Manager; Claret M. Heider, Technical Writer-Editor; and Karen E. Smith, Administrative Assistant.**

Gerald Jones
Chairman, BSSC Board of Direction

*Corresponding member.

USER COMMENT FORM

Please fill out and return this form to the BSSC at 1201 L Street, N.W., 4th Floor, Washington, D.C. 20005. Your cooperation is greatly appreciated.

1. Describe your experience in using this handbook.

What type of building was evaluated and proposed for rehabilitation?

How was the evaluation performed? Was the *NEHRP Handbook for the Seismic Evaluation of Existing Buildings* used?

Which techniques in this handbook were considered? What technique was selected? Was the rehabilitation completed?

Were problems encountered in using this handbook? If so, describe the problems and how they were solved.

2. Prior to your use of this handbook, were you familiar with the *NEHRP Recommended Provisions for the Development of Seismic Regulations for New Buildings*.
3. Do you have recommendations for improving this handbook.

Name _____ Title _____

Organization _____

Address _____

Telephone and FAX Numbers _____

CONTENTS

FOREWORD	iii
PREFACE	v
USER COMMENT FORM	vii
GLOSSARY	xv
1. INTRODUCTION	1
1.1 Background	1
1.2 Development of This Handbook	2
1.3 Purpose of This Handbook	2
1.4 Scope and Limitations	3
1.5 Organization of This Handbook	3
2. SEISMIC VULNERABILITY OF BUILDINGS	5
2.0 Introduction	5
2.1 General Attributes of Structures	5
2.1.1 Strength	5
2.1.2 Stiffness	5
2.1.3 Ductility	6
2.1.4 Damping	6
2.2 Adverse Design and Construction Features	6
2.2.1 Lack of Direct Load Path	6
2.2.2 Irregularities	7
2.2.3 Lack of Redundancy	13
2.2.4 Lack of Toughness	13
2.2.5 Adjacent Buildings	14
2.3 Deteriorated Condition of Structural Materials	14
3. SEISMIC STRENGTHENING OF EXISTING BUILDINGS	17
3.0 Introduction	17
3.0.1 Cost Considerations	17
3.0.2 Functional Considerations	17
3.0.3 Aesthetic Considerations	18
3.0.4 Seismic Zonation	18
3.1 Vertical-resisting Elements--Moment Resisting Systems	18
3.1.1 Steel Moment Frames	18
3.1.2 Concrete Moment Frames	22
3.1.3 Moment Frames with Infills	26
3.1.4 Precast Concrete Moment Frames	28
3.2 Vertical-resisting Elements--Shear Walls	28
3.2.1 Reinforced Concrete or Reinforced Masonry Shear Walls	28
3.2.2 Precast Concrete Shear Walls	34
3.2.3 Unreinforced Masonry Shear Walls	34
3.2.4 Shear Walls in Wood Frame Buildings	37

3.3	Vertical-resisting Elements--Braced Frames	38
3.3.1	Steel Concentric Braced Frames	38
3.3.2	Rod or Other Tension Bracing	41
3.3.3	Eccentric Bracing	42
3.4	Vertical-resisting Elements--Adding Supplemental Members	43
3.4.1	Relative Compatibility	44
3.4.2	Exterior Supplemental Elements	45
3.4.3	Interior Supplemental Elements	45
3.5	Diaphragms	46
3.5.1	Timber Diaphragms	47
3.5.2	Concrete Diaphragms	51
3.5.3	Poured Gypsum Diaphragms	56
3.5.4	Precast Concrete Diaphragms	56
3.5.5	Steel Deck Diaphragms	59
3.5.6	Horizontal Steel Bracing	64
3.6	Foundations	65
3.6.1	Continuous or Strip Wall Footings	66
3.6.2	Individual Pier or Column Footings	68
3.6.3	Piles or Drilled Piers	70
3.6.4	Mat Foundations	72
3.7	Diaphragm to Vertical Element Connections	72
3.7.1	Connections of Timber Diaphragms	72
3.7.2	Connections of Concrete Diaphragms	84
3.7.3	Connections of Poured Gypsum Diaphragms	86
3.7.4	Connections of Precast Concrete Diaphragms	86
3.7.5	Connections of Steel Deck Diaphragms Without Concrete Fill	87
3.7.6	Connections of Steel Deck Diaphragms with Concrete Fill	89
3.7.7	Connections of Horizontal Steel Bracing	90
3.8	Vertical Element to Foundation Connections	91
3.8.1	Connections of Wood Stud Shear Walls	91
3.8.2	Connections of Metal Stud Shear Walls	95
3.8.3	Connections of Precast Concrete Shear Walls	95
3.8.4	Connections of Braced Frames	97
3.8.5	Connections of Steel Moment Frames	98
3.9	Adding a New Supplemental System	98
3.9.1	Supplemental Braced Frame System	99
3.9.2	New Shear Wall System	99
3.9.3	Structural Additions	101
4.	DECREASING DEMAND ON EXISTING SYSTEMS	103
4.0	Introduction	103
4.1	Reducing the Weight of the Building	103
4.2	Increasing the Fundamental Period and the Energy Dissipating Capacity of the Structural System	104
4.3	Alternate Procedures	105
4.3.1	Seismic Isolation	105
4.3.2	Supplemental Damping	105
5.	REHABILITATION OF NONSTRUCTURAL ARCHITECTURAL COMPONENTS	107
5.0	Introduction	107
5.1	Exterior Curtain Walls	107
5.2	Appendages	108
5.3	Veneers	109

5.4	Partitions	109
5.5	Ceilings	113
5.6	Lighting Fixtures	113
5.7	Glass Doors and Windows	114
5.8	Raised Computer Access Floors	115
6.	REHABILITATION OF NONSTRUCTURAL MECHANICAL AND ELECTRICAL COMPONENTS	117
6.0	Introduction	117
6.1	Mechanical and Electrical Equipment	117
6.2	Ductwork and Piping	126
6.3	Elevators	133
6.4	Emergency Power Systems	133
6.5	Hazardous Material Storage Systems	135
6.6	Communication Systems	137
6.7	Computer Equipment	137
	BIBLIOGRAPHY	143
	APPENDICES	
A	Seismic-Force-Resisting Elements in Buildings	149
B	Summary of Strengthening Techniques	165
C	Rehabilitation Examples	185
	MINORITY OPINION	193
	BSSC BOARD OF DIRECTION AND MEMBER ORGANIZATIONS	195
	FIGURES	
	LEGEND FOR FIGURES: (E) = Existing, (L) = Left, (N) = New, (R) = Right	
2.2.2.1	Vertical irregularities--examples of in-plane and out-of-plane discontinuities	8
2.2.2.4a	Horizontal and plan irregularities--rehabilitating a structure to reduce torsional loads	10
2.2.2.4b	Horizontal and plan irregularities--examples of rehabilitating buildings with re-entrant corners	11
2.2.2.4c	Horizontal and plan irregularities--example of strengthening a split level diaphragm	12
2.2.2.4d	Horizontal and plan irregularities--example of rehabilitating building with nonparallel systems	12
3.1.1.2a	Modification of an existing simple beam to a moment connection	19
3.1.1.2b	Strengthening an existing column	20
3.1.1.2c	Strengthening an existing beam	21
3.1.2.2a	Encasing an existing beam in concrete	23
3.1.2.2b	Strengthening an existing concrete column	24-25
3.1.2.2c	Strengthening an existing concrete frame building with a reinforced concrete shear wall	26
3.2.1.2a	Strengthening an existing shear wall by filling in existing openings	29
3.2.1.2b	Example of details for enclosing an existing opening in a reinforced concrete or masonry wall	30
3.2.1.2c	Strengthening an existing reinforced concrete or masonry wall	31
3.2.1.4	Example of strengthening an existing coupling beam at an exterior wall	32
3.2.3.2	Example of center coring technique	35
3.3	Bracing types	38
3.3.1.2	Addition to or replacement of an existing X-brace	39
3.4	Examples of supplementary strengthening	44
3.4.2	Example of supplemental in-plane strengthening by the addition of an external buttress	45
3.4.3	Connection of a supplemental interior shear wall	46

3.5.1.3	Exterior sheathing and top plate chord in a wood frame building	49
3.5.1.4a	Reinforcement of an opening in an existing timber diaphragm	50
3.5.1.4b	New drag strut in an existing wood diaphragm	51
3.5.2.2	Strengthening an existing concrete diaphragm with a new topping slab and chord	52
3.5.2.3	Adding a new chord member to an existing concrete diaphragm (not recommended for precast elements)	53
3.5.2.4a	Reinforcement of an opening in an existing concrete diaphragm	54
3.5.2.4b	Strengthening openings in overlaid diaphragms	55
3.5.4.2	Strengthening an existing precast concrete diaphragm with a concrete overlay	57
3.5.4.3	Adding a new steel member to an existing precast concrete diaphragm	58
3.5.5.2a	Strengthening an existing steel deck diaphragm	60
3.5.5.2b	Strengthening an existing steel deck diaphragm	61
3.5.5.2c	Strengthening an existing building with steel decking and concrete or masonry walls	62
3.5.5.2d	Strengthening an existing building with steel decking and concrete or masonry walls	63
3.6.1.2a	Underpinning an existing footing	66
3.6.1.2b	Strengthening an existing wall footing by the addition of drilled piers	67
3.6.2.3	Upgrading an existing pile foundation	71
3.7.1.2a	Strengthening the connection of a diaphragm to an interior shear wall (wall parallel to floor joist)	73
3.7.1.2b	Strengthening the connection of a diaphragm to an interior shear wall (wall perpendicular to floor joist)	74
3.7.1.3	Strengthening an existing wood stud shear wall with a large opening	76
3.7.1.4a	Strengthening out-of-plane connections of a wood diaphragm	77
3.7.1.4b	Strengthening out-of-plane connections of a wood diaphragm	78
3.7.1.4c	Strengthening out-of-plane connections of a wood diaphragm	79
3.7.1.4d	Strengthening out-of-plane connections of a wood diaphragm	80
3.7.1.4e	Strengthening tensile capacity of an existing glulam beam connection	80
3.7.1.5a	Strengthening the connection between shear walls using a metal strap	81
3.7.1.5b	Strengthening the connection between shear walls using a hold-down	82
3.7.1.5c	Strengthening shear wall uplift capacity at a discontinuity	83
3.7.2.2	Use of a collector member to improve shear transfer from a concrete diaphragm	85
3.7.5.2	Strengthening the connection of steel deck diaphragm to a concrete or masonry wall	88
3.8.1.2a	Providing wall to foundation anchors	92
3.8.1.2b	Alternate detail for providing wall to foundation anchors	93
3.8.1.3	Strengthening a cripple stud wall	94
3.8.1.4	Strengthening the uplift capacity of a wall to foundation connection	95
3.8.3.2	Strengthening a precast concrete wall to foundation connection	96
3.9.1	Strengthening using a supplemental braced frame system	99
3.9.2	Strengthening by providing a new shear wall system	100
3.9.3	Strengthening with a new building addition	101
5.1a	Flexible connection for precast concrete cladding	107
5.1b	Detail for flexible connection for precast concrete cladding	108
5.2a	Strengthening a masonry parapet with a new concrete overlay	109
5.2b	Strengthening a masonry parapet with steel braces	109
5.4a	Bracing an interior masonry partition	111
5.4b	Bracing an interior masonry partition	112
5.5	Lateral bracing of a suspended ceiling	113
5.6	Providing safety wires for suspended lighting fixtures	114
5.8a	Access floor pedestals	115
5.8b	Strengthening of access floor pedestals	116

6.1a	Typical detail of equipment anchorage	118
6.1b	Alternate details for anchoring equipment	119-120
6.1c	Prefabricated vibration isolation assembly with lateral seismic stops	121
6.1d	Seismic restraints added to existing equipment with vibration isolation	122
6.1e	Multidirectional seismic restraint	123
6.1f	Typical bracing for suspended equipment	124
6.1g	Strapping of domestic water heater	125
6.2a	Lateral and longitudinal braces for large diameter ducting	127
6.2b	Lateral and longitudinal braces for small diameter ducting	128
6.2c	Lateral and longitudinal braces for rectangular ducting	129
6.2d	Lateral braces for piping	130
6.2e	Longitudinal pipe brace	131
6.2f	Lateral brace for multiple pipes	132
6.2g	Longitudinal brace for multiple pipes	132
6.4a	Bracing of existing battery racks	133
6.4b	Bracing of horizontal tank	134
6.5a	Protective measures for hazardous materials	135
6.5b	Anchorage detail for pressurized tanks	136
6.7a	Rigid anchorage of computer equipment	138
6.7b	Flexible anchorage of computer equipment	139
6.7c	Tether and opening guards for protection of computer equipment	140
6.7d	Strapping of electronic data processing units	141

GLOSSARY

BOUNDARY ELEMENT: An element at the edge of an opening or at the perimeter of a shear wall or diaphragm.

BRACED FRAME: An essentially vertical truss, or its equivalent, of the concentric or eccentric type that is provided in a building frame or dual system to resist lateral forces.

CHEVRON BRACING: Bracing where a pair of braces, located either both above or both below a beam, terminates at a single point within the clear beam span.

CHORD: See DIAPHRAGM CHORD.

COLLECTOR: A member or element provided to transfer lateral forces from a portion of a structure to vertical elements of the lateral-force-resisting system (also called a drag strut).

CONCENTRICALLY BRACED FRAME (CBF): A braced frame in which the members are subjected primarily to axial forces.

CONTINUITY TIES: Structural members and connections that provide a load path between diaphragm chords to distribute out-of-plane wall loads.

COUPLING BEAM: A structural element connecting adjacent shear walls.

DAMPING: The internal energy absorption characteristic of a structural system that acts to attenuate induced free vibration.

DEMAND: The prescribed design forces required to be resisted by a structural element, subsystem, or system.

DIAPHRAGM: A horizontal, or nearly horizontal, system designed to transmit lateral forces to the vertical elements of the lateral-force-resisting system. The term "diaphragm" includes horizontal bracing systems.

DIAPHRAGM CHORD: The boundary element of a diaphragm or shear wall that is assumed to take axial tension or compression.

DIAPHRAGM STRUT: The element of a diaphragm parallel to the applied load that collects and transfers diaphragm shear to vertical-resisting elements or distributes loads within the diaphragm. Such members may take axial tension or compression. Also refers to drag strut, tie, collector.

DRAG STRUT: See COLLECTOR.

DRIFT: See STORY DRIFT.

DUCTILITY: The ability of a structure or element to dissipate energy inelastically when displaced beyond its elastic limit without a significant loss in load carrying capacity.

ECCENTRICALLY BRACED FRAME (EBF): A diagonal braced frame in which at least one end of each brace frames into a beam a short distance from a beam-column joint or from another diagonal brace.

FUNDAMENTAL PERIOD OF VIBRATION: The time it takes the predominant mode of a structure to move back and forth when vibrating freely.

HOLD-DOWN: A prefabricated steel element consisting of a tension rod, end brackets and bolts or lags used to transfer tension across wood connections.

HORIZONTAL BRACING SYSTEM: A horizontal truss system that serves the same function as a diaphragm.

K-BRACING: Bracing where a pair of braces located on one side of a column terminates at a single point within the clear column height.

LATERAL-FORCE-RESISTING SYSTEM: That part of the structural system assigned to resist lateral forces.

LINK BEAM: That part or segment of a beam in an eccentrically braced frame that is designed to yield in shear and/or bending so that buckling or tension failure of the diagonal brace is prevented.

MOMENT RESISTING SPACE FRAME: A structural system with an essentially complete space frame providing support for vertical loads.

REDUNDANCY: A measure of the number of alternate load paths that exist for primary structural elements and/or connections such that if one element or connection fails, the capacity of alternate elements or connections are available to satisfactorily resist the demand loads.

RE-ENTRANT CORNER: A corner on the exterior of a building that is directed inward such as the inside corner of an L-shaped building.

SHEAR WALL: A wall, bearing or nonbearing, designed to resist lateral forces acting in the plane of the wall.

SHOTCRETE: Concrete that is pneumatically placed on vertical or near vertical surfaces typically with a minimum use of forms.

SOFT STORY: A story in which the lateral stiffness is less than 70 percent of the stiffness of the story above.

SOIL-STRUCTURE RESONANCE: The coincidence of the natural period of a structure with a dominant frequency in the ground motion.

STORY DRIFT: The displacement of one level relative to the level above or below.

STRUCTURE: An assemblage of framing members designed to support gravity loads and resist lateral forces. Structures may be categorized as building structures or nonbuilding structures.

SUBSYSTEMS: One of the following three principle lateral-force-resisting systems in a building: vertical-resisting elements, diaphragms, and foundations.

SUPPLEMENTAL ELEMENT: A new member added to an existing lateral-force-resisting subsystem that shares in resisting lateral loads with existing members of that subsystem.

V-BRACING: Chevron bracing that intersects a beam from above. Inverted V-bracing is that form of chevron bracing that intersects a beam from below.

VERTICAL-RESISTING ELEMENTS: That part of the structural system located in a vertical or near vertical plane that resists lateral loads (typically a moment frame, shear wall, or braced frame).

WEAK STORY: A story in which the lateral strength is less than 80 percent of that in the story above.

X-BRACING: Bracing where a pair of diagonal braces crosses near mid-length of the bracing members.

INTRODUCTION

The risks posed by buildings not designed for earthquake loads or by nonengineered buildings have been recognized for nearly a century. Advances in earthquake-related science and technology during the past few decades have led to a realization that earthquakes and the resulting risk to life are a national problem. Indeed, damaging earthquakes in the eastern United States, although occurring less frequently than in California, may pose an equal, if not greater, threat to the national economy and social fabric.

The benefits of applying earthquake-resistant design to reduce the hazards of new buildings were acknowledged in California following the 1906 San Francisco earthquake but appropriate design practices were not implemented to any degree until after the disastrous 1933 earthquake in Long Beach, California. Today, earthquake-resistant design in new construction is accepted practice in California but has been only recently achieved a significant degree of acceptance in other parts of the United States. Thus, a very large number of existing buildings in the country can be presumed to have inadequate earthquake resistance and to pose a serious risk.

Detailed post-earthquake investigations of building failures have provided engineers with considerable information concerning the details of building design and construction that enhance earthquake resistance. The 1971 earthquake in San Fernando, California, was particularly revealing in this regard and engendered a new wave of concern for seismic rehabilitation of existing buildings. Notable among the earthquake rehabilitation projects begun in the 1970s was the systematic seismic vulnerability evaluation, and strengthening as needed, of all Veterans Administration (VA) hospitals in the United States. Concurrently, other federal agencies such as the Department of Defense (DOD) and the General Services Administration (GSA) initiated programs to identify and mitigate seismic hazards in public buildings under their authority. These and similar projects have generated a substantial body of knowledge regarding earthquake rehabilitation of buildings. The Loma Prieta earthquake seems to have added impetus to seismic rehabilitation in the private sector. (Note that the greatest experience in seismic rehabilitation has been gained in high seismic zones; see Sec. 3.0.4 for guidance concerning the application of seismic rehabilitation techniques in areas of lower seismicity.)

1.1 BACKGROUND

One of the objectives of the *Earthquake Hazards Reduction Act of 1977* (P.L. 95-124 as amended) is ". . . the development of methods for . . . rehabilitation and utilization of man-made works so as to effectively resist the hazards imposed by earthquakes. . . ." The National Earthquake Hazards Reduction Program submitted to the Congress by the President on June 22, 1978, stresses that absent a reliable capability to predict earthquakes, "it is important that hazards be reduced from those (substandard) structures presenting the greatest risks in terms of occupancy and potential secondary impact."

In Fiscal Year 1984, FEMA started an extensive program to encourage the reduction of seismic hazards posed by existing buildings throughout the country. The first project in the program was the formulation of a comprehensive 5-year plan on what needed to be done and what the required resources would be. The plan was completed in Fiscal Year 1985. As resources have become available since that time, FEMA has used this plan as a basis for developing a multi-volume, self-reinforcing, cohesive, coherent set of nationally applicable publications on engineering measures and societal problems related to the seismic rehabilitation of existing buildings. These publications include reports presenting a method for rapid visual screening of buildings, an engineering methodology for a seismic safety evaluation of different types of buildings that is a companion to this document, seismic strengthening techniques for various types of buildings (this handbook), typical costs of seismic rehabilitation of existing buildings, an approach to establishing programs and priorities for seismic rehabilitation of existing buildings, potential financial incentives for establishing such programs and instructions

on the conduct of workshops to encourage local initiatives in this field and conclusions from a number of applications workshops held in various states, and a model to derive direct economic costs and benefits to owners and occupants of buildings in the private sector. Further, the preparation of a comprehensive set of guidelines for seismic rehabilitation (with commentary) has been initiated.

1.2 DEVELOPMENT OF THIS HANDBOOK

Recognizing that a large number of techniques currently are being utilized to mitigate seismic hazards in existing vulnerable buildings, the FEMA contracted with URS/John A. Blume and Associates, Engineers, (referred to herein as URS/Blume) in 1987 to identify and describe generally accepted rehabilitation techniques. This URS/Blume effort resulted in the preliminary version of this handbook published by FEMA in March 1989. It was based primarily on a review of existing literature and input from a panel of project consultants. The primary source documents and sources reviewed included *The Abstract Journal of Earthquake Engineering*, the Earthquake Engineering Research Center Library at the University of California at Berkeley, the proceedings of the World, U.S. National, and European Conferences on Earthquake Engineering, the U.S./Japan Seminars on Repair and Retrofit of Structures, the Dialogue Compendex, and the National Technical Information Service (NTIS).

The Building Seismic Safety Council (BSSC) project, initiated at the request of FEMA in October 1988, was structured to focus on identification and resolution of technical issues in the preliminary version of the handbook (as well as in a companion publication presenting a methodology for conducting an evaluation of the seismic safety of existing buildings) and appropriate revision by a 22-member Retrofit of Existing Buildings (REB) Committee composed of individuals possessing expertise in the various subjects needed to address seismic rehabilitation. Conduct of the BSSC project is discussed in the Preface (see page v).

1.3 PURPOSE OF THIS HANDBOOK

There is a variety of approaches to seismic rehabilitation, each with specific merits and limitations. The rehabilitation technique most appropriate for use with a particular building will depend on the unique characteristics of the building. Thus, this handbook is to provide those interested or involved in seismic rehabilitation with:

- A general understanding of the common deficiencies in the structural and nonstructural components of existing buildings that cause seismic performance problems,
- Descriptions of some of the techniques that might be used to correct deficiencies for various construction types, and
- Information on the relative merits of alternative techniques.

In short, this handbook is intended to stimulate understanding such that, when assessing the rehabilitation alternatives available, building owners and design professionals can make an informed decision concerning the best solution for a specific building, location, and occupancy.

This handbook is designed to be compatible with the *NEHRP Handbook for the Seismic Evaluation of Existing Building* (referred to herein as the *NEHRP Evaluation Handbook*), which provides a standard methodology for evaluating buildings of different types and occupancies in areas of different seismicity throughout the United States. Seismic deficiencies of buildings identified using the *NEHRP Evaluation Handbook* methodology can be further analyzed to determine the seismic resistance. The deficiencies identified then can be mitigated using accepted rehabilitation techniques described in this handbook or other sources of rehabilitation information.

1.4 SCOPE AND LIMITATIONS

The rehabilitation techniques identified and described in this handbook are intended to be consistent with the requirements for new construction prescribed in the 1988 Edition of the *NEHRP Recommended Provisions for the Development of Seismic Regulations for New Buildings* (FEMA Publications 95, 96, and maps).^{*} The intent of the rehabilitation is to provide life safety but not necessarily to upgrade the structure to meet modern standards of life safety and property protection.

Given the great number of potential seismic strength problems and solutions, it is not now possible to prepare a compendium of all available techniques for all existing building types in all areas of the nation at risk from earthquakes. In recognition of the broad variation in the details of design and construction used over the years, the design professional will need to consider a wide array of possible techniques for rehabilitation, and this handbook is intended to serve as an informational "point of departure."

This handbook is organized to permit a component-by-component consideration of deficiencies and rehabilitation techniques. The reader, however, is cautioned against selecting specific rehabilitation techniques without first identifying the overall deficiencies of the building and determining whether deficiencies are due to a combination of component deficiencies, inherent adverse design and construction features, or a weak link.

Furthermore, a building's design and construction characteristics as well as the condition of materials of its construction affect seismic performance. Therefore, in order to make an informed decision concerning appropriate cost-effective techniques for seismic strengthening of an existing building, the engineer must understand the structural system or combination of systems that resist the lateral loads; the advantages and disadvantages associated with the physical attributes of the systems; and any constraints on the optimum performance of the system due to adverse design or construction features or deteriorated materials.

It is hoped that experience with the application of this handbook and its companion document will generate feedback that can serve as the foundation for the enhancement of future documents dealing with seismic rehabilitation.

1.5 ORGANIZATION OF THIS HANDBOOK

Chapter 2 describes the physical attributes that affect the seismic performance of all structures. The general characteristics of all structural materials and systems (i.e., strength, stiffness, ductility, and damping) are addressed as are design and construction features that may impair a building's seismic performance. Techniques for strengthening vertical elements, diaphragms, foundations, and connections are addressed in Chapter 3. Techniques for decreasing the demand on existing structures are addressed in Chapter 4. Chapters 5 and 6 present techniques to mitigate damage to nonstructural architectural and mechanical and electrical components, respectively. Appendices include a listing of the seismic-force-resisting elements commonly found in 15 common building types, a matrix summary of rehabilitation techniques, and examples of rehabilitation.

As indicated above, this handbook is structured to be used with the *NEHRP Evaluation Handbook*. Both of these handbooks are organized to address the following building systems and components: vertical elements resisting horizontal loads (i.e., moment-resisting frames, shear walls, and braced frames); horizontal elements resisting lateral loads (i.e., diaphragms); foundations; and connections between subsystems. Table 1.5 shows the relationship between the handbooks.

^{*}The American Iron and Steel Institute has written a minority opinion concerning this statement; see page 193.

TABLE 1.5
Correlation of Contents Between the Evaluation and Techniques Handbooks

<i>NEHRP Handbook of Techniques for the Seismic Rehabilitation of Existing Buildings</i>	<i>NEHRP Handbook for the Seismic Evaluation of Existing Buildings</i>
Chapter 2, Seismic Vulnerability of Buildings Section 3.9, Adding a New Supplemental System Chapter 4, Decreasing Demand on Existing System	Chapter 3, Building Systems
Section 3.1, Moment Resisting Systems	Chapter 4, Moment Resisting Systems
Section 3.2, Shear Walls	Chapter 5, Shear Walls
Section 3.3, Braced Frames	Chapter 6, Braced Frames
Section 3.5, Diaphragms	Chapter 7, Diaphragms
Section 3.7, Diaphragm to Vertical Element Connections Section 3.8, Vertical Element to Foundation Connections	Chapter 8, Connections
Section 3.6, Foundations	Chapter 9, Foundations and Geologic Site Hazards
Chapter 5, Rehabilitation of Nonstructural Architectural Components Chapter 6, Rehabilitation of Nonstructural Mechanical and Electrical Components	Chapter 10, Elements Not a Part of the Lateral-Force-Resisting System

SEISMIC VULNERABILITY OF BUILDINGS

2.0 INTRODUCTION

This chapter describes the general characteristics of all structural materials and systems (i.e., strength, stiffness, ductility, and damping) and the design and construction features that may adversely affect the seismic performance of a structure. Since an informed decision regarding the most cost-effective techniques for rehabilitating an existing structure to resist seismic forces requires an understanding of the structural system or combination of systems that resist the lateral loads, the advantages or disadvantages associated with the physical attributes of the systems and the constraints on system performance due to adverse design or construction features, the emphasis here is on the complete structural system. Chapter 3 focuses on techniques to strengthen the three principal lateral-force-resisting subsystems (vertical-resisting elements, diaphragms, and foundations) and the connections between these subsystems. Chapter 4 identifies methods to rehabilitate structures by reducing demand.

2.1 GENERAL ATTRIBUTES OF STRUCTURES

Strength, stiffness, ductility, and damping govern the dynamic response of a structure to ground motion. An ideal structure would rate highly with respect to all of these attributes; however, this is seldom the case even in new construction and may be impossible to achieve when strengthening an existing structure. Fortunately, these attributes are interrelated, and it is usually possible to compensate for a deficiency in one by enhancing one or more of the others (e.g., additional strength and stiffness may compensate for low ductility and damping, a subject discussed in Chapter 4).

2.1.1 STRENGTH

The most obvious, although not necessarily the most important, consideration in seismic rehabilitation is strength. A seismically weak structure can be rehabilitated by strengthening existing members or by adding new members that increase the overall strength of the structure. Many of the rehabilitation techniques presented in this handbook are aimed at increasing strength, and informed identification of the building elements that should be strengthened can lead to significant cost savings in an upgrading scheme.

2.1.2 STIFFNESS

As indicated by the base shear formula in the 1988 *NEHRP Recommended Provisions*, structural stiffening that reduces the fundamental period of the building may result in higher seismic forces to be resisted by the building. Nonetheless, additional stiffening generally will reduce the potential for seismic damage. Drift limitations specified by most building codes are intended to provide for minimum structural stiffness.

Transfer of loads among the elements of a structure depends on the relative stiffness of those elements. To select the most appropriate technique for seismically rehabilitating a structure, it is important to evaluate the stiffness of both the existing elements and those to be added to ensure that the seismic load path is not altered in a way that creates new problems. To contribute effectively, an added element must be stiff enough relative to the existing lateral-force-resisting elements to attract sufficient load away from the existing system. The location of an added member and, therefore, the added stiffness it contributes also is important. The engineer

should attempt to locate new elements in such a way as to minimize eccentricities in the building and limit torsional responses.

2.1.3 DUCTILITY

The ductility of a structure or element (i.e., the ability of the structure or element to dissipate energy inelastically when displaced beyond its elastic limit without a significant loss in load carrying capacity) is an extremely important consideration in seismic rehabilitation. The structural properties of some materials have a post-elastic behavior that fits the classic definition of ductility (i.e., they have a near-plastic yield zone and this behavior is reasonably maintained under cyclic loading). Other materials such as reinforced concrete and masonry, nailed wood systems, braced frames, and floor diaphragms have stiffness degradation and may even exhibit a pinched load-displacement relationship when subjected to cyclic loading. The hysteretic damping of these materials may not increase as is common for the elastic-plastic behavior but the stiffness degradation has a beneficial influence similar to an increase in damping in that the base shear of the system is reduced. However, the interstory and total relative displacement of the stiffness degrading structure or element is significantly increased. Control of relative displacement of this class of structure or element is of prime importance.

2.1.4 DAMPING

During an earthquake, a structure will amplify the base ground motion. The ground motion at the base includes the amplification caused by soil profile type through the inclusion of a soil profile coefficient in the base shear formula. The degree of structural amplification of the ground motion at the base of the building is limited by structural damping or the ability of the structural system to dissipate the energy of the earthquake ground-shaking. The differences in the response modification coefficient (R) and the deflection amplification factor (C_d) of Table 3-2 of the 1988 *NEHRP Recommended Provisions* are partially due to an estimation of probable structural damping of greater than 5 percent of critical.

2.2 ADVERSE DESIGN AND CONSTRUCTION FEATURES

A number of design and construction features have an adverse impact on structural response by precluding the effective development of the capacity of the various structural components.

2.2.1 LACK OF DIRECT LOAD PATH

An adequate load path is the most essential requirement for seismic resistance in a building. There must be a lateral-force-resisting system that forms a direct load path between the foundation, the vertical elements, and all diaphragm levels and that ties all portions of the building together. The load path must be complete and sufficiently strong. The general path is as follows:

- Earthquake inertia forces, which originate in all elements of a building, are delivered through structural connections to horizontal diaphragms;
- The diaphragms distribute these forces to vertical components of the lateral-force-resisting system such as shear walls and frames;
- The vertical elements transfer the forces into the foundation; and
- The foundation transfers the forces into the ground.

The load path therefore consists of elements within and between the following subsystems: vertical-resisting elements, diaphragms, and foundations.

2.2.2 IRREGULARITIES

Most building codes prescribe seismic design forces that are only a fraction of the forces that would be imposed on a linearly elastic structure by a severe earthquake. These codes therefore imply that the inelastic response of the designed structures is required to fulfill the primary performance objective (i.e., preserve life safety by precluding structural collapse). The equivalent static lateral loads and design coefficients prescribed by the codes are necessarily imperfect approximations of the nonlinear dynamic response of code-designed regular structures. Vertical and plan irregularities can result in loads and deformations significantly different from those assumed by the equivalent static procedures. It is most important for the engineer to understand that severe irregularities can create uncertainties in the ability of the structure to meet the stated performance objectives. Irregular conditions exist, to some degree, in most buildings. Minor irregularities have little or no detrimental effect on structural response. Guidelines for the evaluation of the significance of the vertical and horizontal or plan irregularities are provided in the *NEHRP Evaluation Handbook*. If a significant irregular condition cannot be avoided or eliminated by design changes, the designer should both comply with any special provisions prescribed by the code and consider the ability of the structure to avoid collapse when subjected to relative displacements that may be several times greater than the anticipated nonlinear displacements.

2.2.2.1 Vertical Irregularities

The vertical irregularities that may adversely affect a building's seismic resistance are discussed briefly below.

Stiffness irregularity results when one or more stories are significantly softer (i.e., will be subject to larger deformations) than the stories directly above.

Weight or mass irregularity occurs when the effective mass (i.e., weight divided by the acceleration due to gravity) of any story is substantially greater than the effective mass of an adjacent story.

Vertical geometric irregularity results from building setbacks or elevational discontinuities (i.e., when the upper portions of a building are reduced in plan area with respect to the lower portions).

Vertical discontinuity in capacity occurs when the story strength in a story is significantly less than that in the story above. The story strength is defined as the total strength of all the seismic-resisting elements sharing the story shear for the direction under consideration.

Vertical discontinuity in load path is a condition where the elements resisting lateral forces (i.e., moment frames, shear walls, or braced frames) are not continuous from one floor to the next. Figure 2.2.2.1 shows two common examples. The upper sketch shows an "out-of-plane" vertical discontinuity that causes the vertical load path to be discontinuous. In the upper sketch, the shear walls of the second and third stories are exterior shear walls while the shear walls in the first floor are interior walls. The seismic forces from the top two stories must be transferred through the second floor diaphragm and then into the first floor shear wall. The discontinuity results in very high forces on the diaphragm. The lower sketch in Figure 2.2.2.1 is an example of an in-plane discontinuity with a potential for overturning forces in excess of the capacity of the column.

The usual deficiency in the diaphragm is inadequate shear capacity. Unlike typical floor diaphragms that need only transfer tributary seismic floor shears, the diaphragm at the base of a discontinuous shear wall must transfer the cumulative seismic shears in the shear wall from all of the levels above the discontinuity. A typical cause of distress in concrete columns at the ends of discontinuous shear walls is inadequate capacity to resist the overturning loads from the discontinuous wall above. For many years, seismic provisions in building codes have prescribed factored design loads for shear walls that were in excess of those required for columns. Thus, in a severe earthquake, the discontinuous shear wall was capable of generating overturning forces in excess of the capacity of the supporting columns. During the 1979 Imperial County Earthquake in California, the 6-story County Services Building was irreparably damaged when a number of the first story columns under discontinuous shear walls collapsed due to excessive overturning forces. As a result of that earthquake, current code provisions discourage vertical discontinuities and require special strengthening of columns if the discontinuities cannot be avoided.

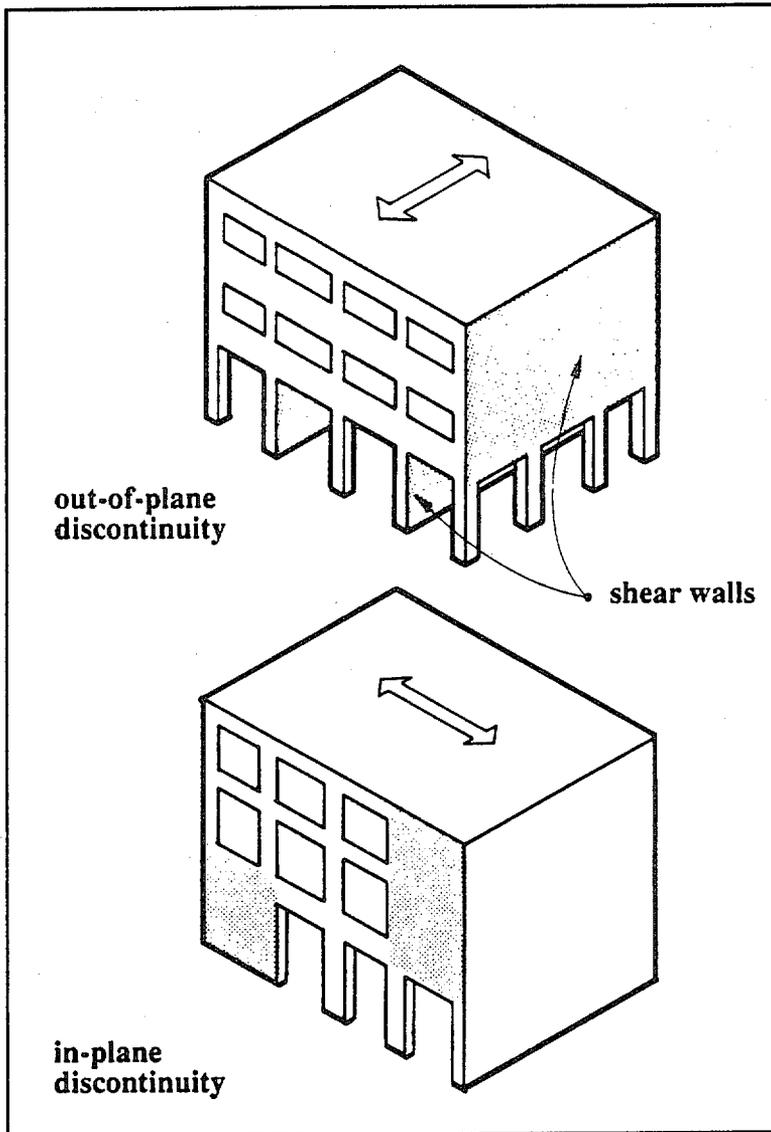


FIGURE 2.2.2.1 Vertical irregularities—examples of in-plane and out-of-plane discontinuities.

that will better represent the structural response may be required to identify the appropriate location for needed strengthening and its extent.

A common technique for improving the seismic performance of structures with vertical discontinuities in load path is to strengthen the columns below the discontinuity (with methods such as those discussed in Chapter 3) so that they can resist the vertical forces that can be imposed by overturning moments of the above walls. The diaphragm spanning between the discontinuous vertical-resisting elements also may require strengthening. Alternatively, the discontinuity can be eliminated or new vertical-resisting elements are built directly below the existing vertical-resisting elements; however, the effect the new members will have on the functional space of the building must be evaluated.

2.2.2.3 Horizontal or Plan Irregularities

Plan structural irregularities in buildings that may adversely affect a building's seismic resistance are discussed briefly below.

2.2.2.2 Rehabilitation Techniques for Vertical Irregularities

The obvious remedial technique for any irregularity is to modify the existing structural elements or add new structural elements to eliminate or significantly reduce the irregularity. The engineer must take special care to avoid creating greater or new problems in the existing elements. For example, if vertical bracing is used to increase the strength of a weak story, it is important to determine the effect that this modification will have on the story stiffness (i.e., whether it will create a soft story condition in the stories below), whether it will create significant torsional eccentricity (see Sec. 2.2.2.3), and/or whether the load path in the diaphragms above and below will be adequate for the revised distribution and transfer of the shear forces. If a new shear wall is added in a shear wall building to increase story strength or stiffness, the same concerns must be investigated. Extending the new shear wall to the foundation level is one way to avoid the vertical discontinuity. Vertical supports below the wall also should be investigated to determine their capacity to resist realistic overturning forces.

It may not be feasible to eliminate or reduce some weight or mass irregularities (e.g., a heavy boiler extending through several stories of an industrial building) or elevational irregularities (e.g., building setbacks). If the irregularity cannot be eliminated or significantly reduced, a dynamic analysis

Torsional irregularity occurs in buildings with rigid diaphragms when the center of mass in any story is eccentric with respect to the center of rigidity of the vertical lateral-load-resisting elements. Nominal eccentricity, or torsion, is common in most buildings and many building codes require that an accidental eccentricity (usually prescribed as 5 percent of the maximum plan dimension) be added to the actual computed eccentricity to determine the torsional forces. An exception occurs when a floor or roof diaphragm is relatively flexible with respect to the vertical lateral-load-resisting elements (e.g., a nailed wood diaphragm in a building with concrete or masonry shear walls). In this case, the vertical elements are assumed to resist only tributary seismic loads. Note that by making this assumption the effects of torsion may be neglected. In some cases (e.g., steel floor or roof decking in a building with steel moment frames), the relative rigidity of the diaphragm may be difficult to assess and the designer may elect to distribute the seismic loads on the basis of a rigid diaphragm and by tributary area and then to use the more conservative results from the two methods.

Re-entrant corners in the plan configuration of an existing structure (and its lateral-force-resisting system) create excessive shear stresses at the corner.

Diaphragm discontinuity occurs when a diaphragm has abrupt discontinuities or variations in stiffness. A common diaphragm discontinuity is split level floors. Unless proper members exist either to transfer the diaphragm forces between the split levels or to independently transfer the forces via vertical members to the foundation, damage is likely to occur at the interface. This condition also exists when diaphragms have large cutout or open areas or substantial changes in effective diaphragm stiffness from one story to the next.

Nonparallel systems is the condition that occurs when the vertical lateral-force-resisting elements are not parallel to or symmetric about the major orthogonal axes of the lateral-force-resisting system.

2.2.2.4 Rehabilitation Techniques for Horizontal Irregularities

The seismic rehabilitation of a structure with a large eccentricity, due either to the distribution of the vertical-resisting elements or the distribution of the mass in the building, is best accomplished by reducing the eccentricity. Locating stiff resisting elements that reduce the eccentricity (Figure 2.2.2.4a) reduces the forces and stresses due to torsion and increases the lateral-force-resisting capacity of the entire structure. The seismic deformations of the entire structure also are significantly reduced by strategically locating the new walls to minimize torsion. The most direct rehabilitation technique for excessive shear stresses at a re-entrant corner is to provide drag struts to distribute the local concentrated forces into the diaphragm (Figure 2.2.2.4b). Other alternatives include strengthening the diaphragm with overlays and reducing the loads on the diaphragm by providing additional vertical-resisting elements.

Diaphragm discontinuities due to abrupt changes in stiffness can be improved by developing a gradual transition through selective stiffening of the diaphragm segments adjacent to the stiff elements. Stress concentrations in the diaphragm at the corners of large openings can be reduced by providing collector members or drag struts to distribute the forces into the diaphragm.

Improving deficient conditions caused by diaphragm discontinuities (such as may be present in split level framing) can be accomplished by providing an adequate load path for the lateral forces. Figure 2.2.2.4c illustrates strengthening techniques for a split level floor diaphragm in typical residential construction. The figure shows two existing diaphragms at an interior cripple stud wall. The deficiency is the lack of a direct force path for diaphragm shears normal to the plane of the figure. The new construction provides vertical sheathing, blocking, and appropriate nailing to transfer the shears from both diaphragms to the foundation. For additional information and connection details for addressing split level conditions in wood frame construction see *The Home Builder's Guide for Earthquake Design* by (Shapiro, Okino, Hom and Associates, 1980).

Structures with nonparallel systems can be strengthened by ensuring that there is an adequate load path for the various force components resulting from the transfer of shears from the diaphragm to the vertical lateral-load-resisting systems. A structure with a nonparallel system is shown in Figure 2.2.2.4d. Providing a drag strut at the corner as indicated will distribute into the diaphragm the out-of-plane force component at the intersection of the two shear walls.

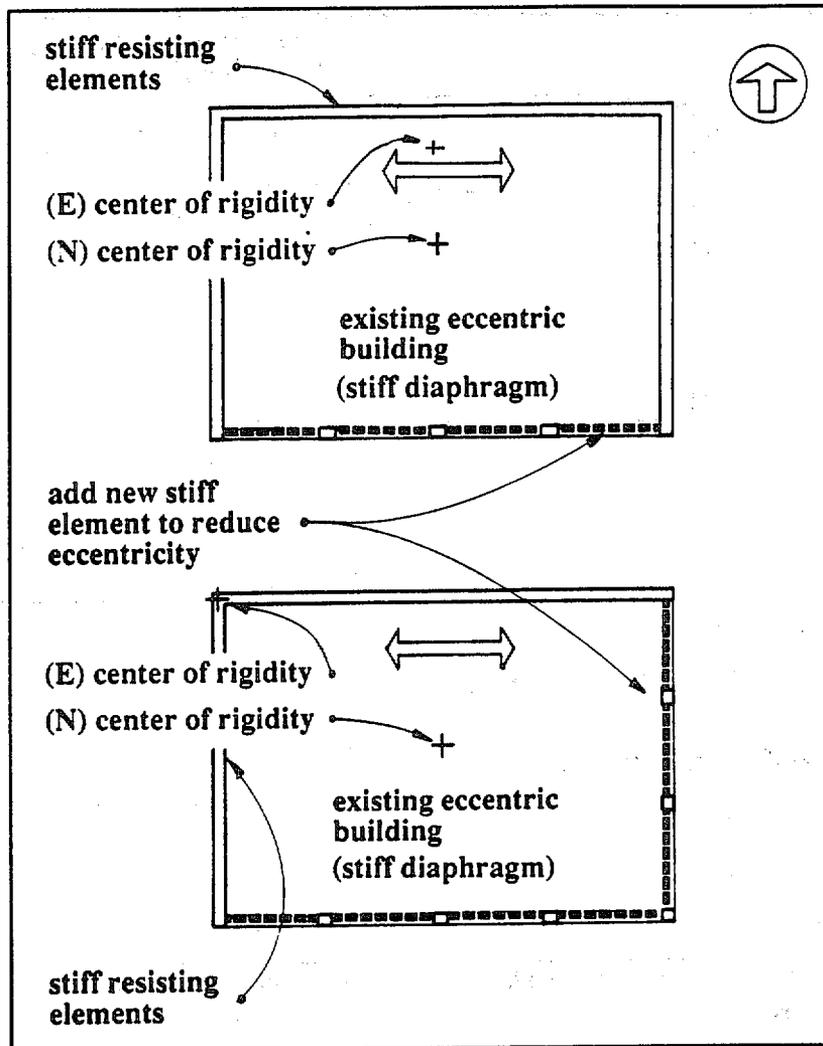


FIGURE 2.2.2.4a Horizontal or plan irregularities--rehabilitating a structure to reduce torsional loads.

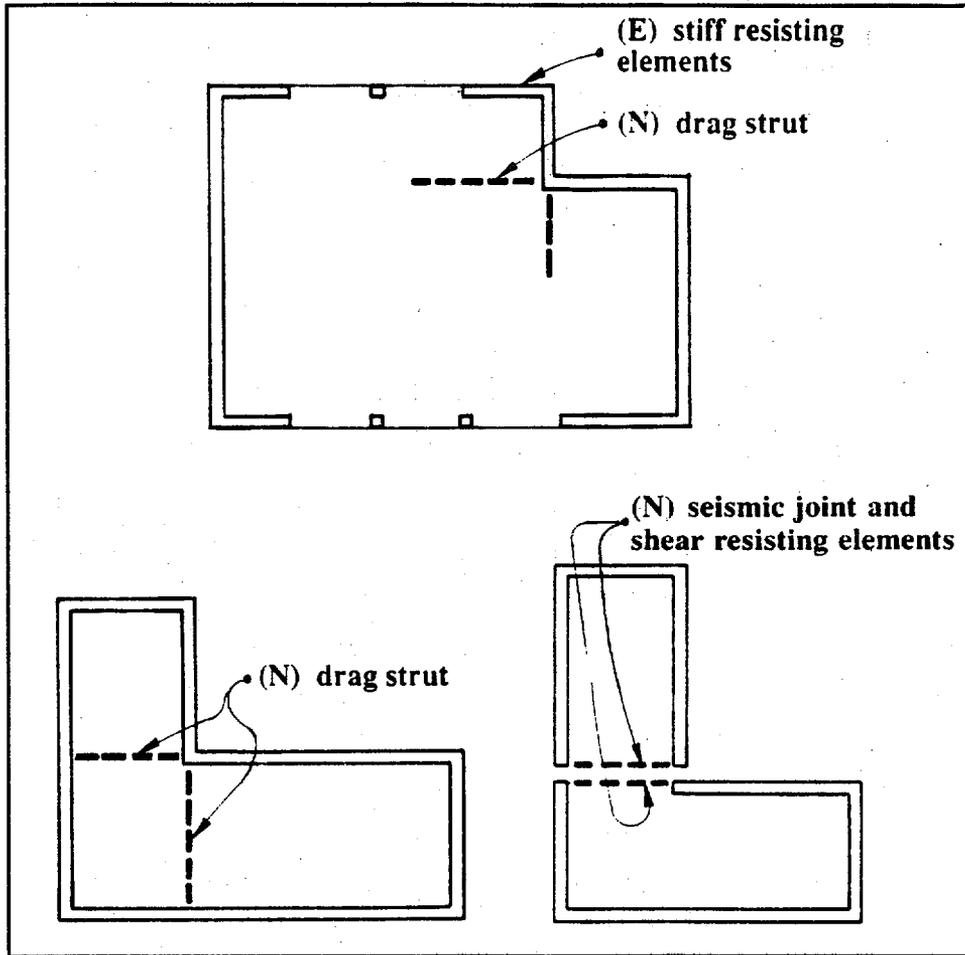


FIGURE 2.2.2.4b Horizontal or plan irregularities--rehabilitating buildings with re-entrant corners.

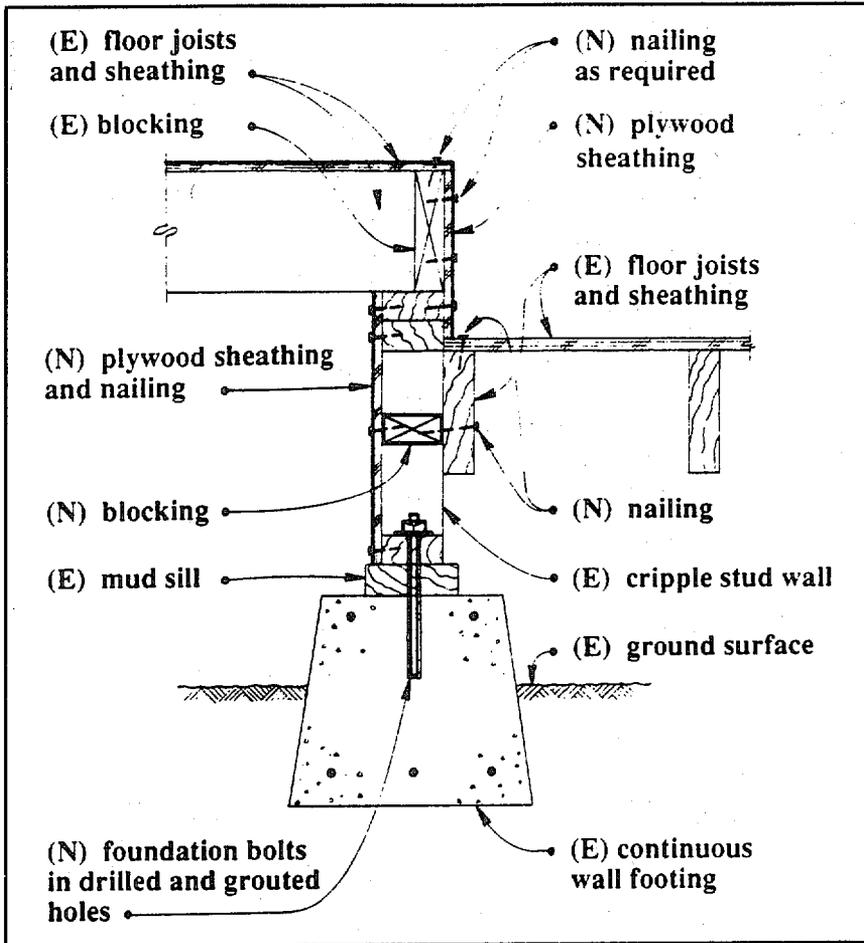


FIGURE 2.2.2.4c Horizontal or plan irregularities--example of strengthening a split level diaphragm.

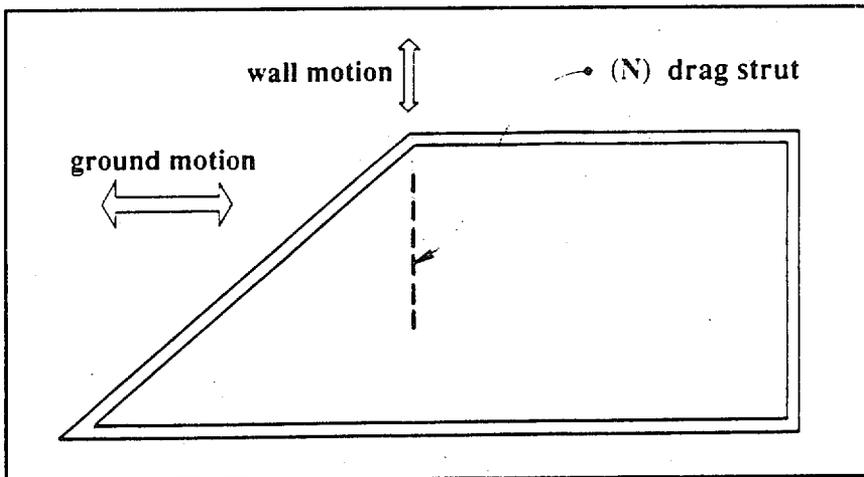


FIGURE 2.2.2.4d Horizontal or plan irregularities--rehabilitating building with nonparallel systems.

2.2.2.5 Reduction of Irregularities and Re-Analysis

The irregularities discussed above will affect the dynamic response of a structure to seismic ground motion and may invalidate the approximation made in the code-prescribed equivalent static lateral force analysis. The *NEHRP Evaluation Handbook* presents thresholds at which these effects may be considered significant but they are necessarily subjective and should be used with judgment, particularly when a structure has more than one of the above irregularities. Although a linear elastic dynamic analysis will help to identify the location and extent of the irregular responses, any analysis is subject to the validity of the model and, for an existing structure, there may be many uncertainties in the modeling assumptions. Also, as indicated above, the uncertainties associated with the extrapolation of results of linear elastic analyses to obtain estimates of nonlinear response increase greatly when the structure is highly irregular or asymmetrical. For these reasons, structural modifications associated with seismic upgrading of an irregular building should aim primarily to eliminate or significantly reduce the irregularity. The illustration in the lower portion of Figure 2.2.2.4b is an example of an irregular building divided into two separate, regular structures by providing a seismic separation joint. This concept requires careful structural and architectural detailing at the separation joint and may not be cost-effective as a retrofit measure except in cases where extensive alterations are planned for other reasons (e.g., an industrial structure being converted to light commercial or residential use).

Although the structural modifications described above to eliminate or reduce irregularities are intended to improve a structure's dynamic response and to increase its capacity to resist seismic forces, in some cases the modifications may shorten the building's period thereby increasing the seismic demand on the structure. For this reason, and also to evaluate the redistribution effects of any significant modifications, it is recommended a re-analysis be performed to identify the need for any additional modifications.

2.2.3 LACK OF REDUNDANCY

2.2.3.1 The Problem

Structures that feature multiple load paths are said to be redundant. Loads producing temporary seismic overstress of individual members or connections in a redundant structure may be redistributed to alternate load paths with the capacity to resist these seismic loads. The seismic capacity of structures that lack redundancy is dependent on adequate nonlinear behavior of the lateral-load-resisting elements. Engineering judgment should be used to ascertain the need for redundancy.

2.2.3.2 Rehabilitation Techniques for Lack of Redundancy

Rehabilitation techniques that enhance redundancy generally involve the addition of new lateral-load-resisting elements or new systems to supplement existing weak or brittle systems. For example, the addition of new steel braced frames or reinforced concrete shear walls in an existing concrete frame building will provide redundancy to the existing system. The relative rigidity of the new systems probably will dictate that little or none of the design lateral loads be resisted by the existing concrete frame, but if the new braced frames or shear walls are properly designed for ductile behavior as they yield in a severe earthquake, the lateral loads will be redistributed to take advantage of the capacity of the existing concrete frames. This example illustrates that ductility and an adequate load path are essential to the redistribution of loads in redundant systems.

2.2.4 LACK OF TOUGHNESS

2.2.4.1 The Problem

Toughness is defined here as the ability of a structure to maintain its integrity and preclude collapse during a severe earthquake that may cause significant structural damage.

2.2.4.2 Rehabilitation Techniques for Lack of Toughness

Existing connection details and those for new structural modifications should be evaluated for toughness. Although Chapter 3 identifies some techniques for strengthening connection deficiencies, the engineer must further evaluate these connections in terms of their performance under extreme structural loads and deformations. Codes may prescribe that some precautions be taken (e.g., oversizing connection requirements to avoid premature failure of bracing members and evaluating the deformation compatibility of vertical load-resisting members that are not part of the lateral-load-resisting system); however, other considerations (e.g., avoiding weld configurations that could lead to prying action or other stress concentrations) require engineering judgment. For some structural systems (e.g., steel moment frames), providing additional strength in the connections will increase the toughness of the system; however, in other systems (e.g., concrete moment frames), lack of toughness may require displacement control through the addition of stiffer elements or supplemental damping to protect the existing system.

2.2.5 ADJACENT BUILDINGS

2.2.5.1 The Problem

When the gap between buildings is insufficient to accommodate the combined seismic deformations of the buildings, both may be vulnerable to structural damage from the "pounding" action that results when the two collide. This condition is particularly severe when the floor levels of the two buildings do not match and the stiff floor framing of one building impacts on the more fragile walls or columns of the adjacent building.

2.2.5.2 Rehabilitation Techniques for Potential Impact from Adjacent Buildings

Since the gap between two buildings usually cannot be increased, increasing the stiffness of one or both buildings may reduce the seismic deformations to the point where impact is precluded with the existing gap. This technique, however, may not be feasible for stiff shear wall buildings of concrete or masonry and, for those cases, consideration should be given to providing alternative load paths for the vertical load-resisting members (i.e., bearing walls or columns) that may be damaged or destroyed by the impact. These alternative load paths would include supplementary columns or vertical shoring to support the floor or roof systems. These supplementary supports would be installed at sufficient distance from the vulnerable exterior walls or columns to be protected when the existing elements are damaged.

2.3 DETERIORATED CONDITION OF STRUCTURAL MATERIALS

2.3.1 THE PROBLEM

Structural materials that are damaged or seriously deteriorated may have an adverse effect on the seismic performance of an existing building during a severe earthquake. The significance of the damage or deterioration must be evaluated with respect to both the existing condition and the proposed seismic strengthening of the building.

2.3.1.1 Timber

Common problems with timber members that require rehabilitation include termite attack, fungus ("dry rot" or "damp rot"), warping, splitting, checking due to shrinkage, strength degradation of fire-retardant plywood in areas where high temperatures exist, or other causes.

2.3.1.2 Unreinforced Masonry

The weakest element in older masonry usually is the mortar joint, particularly if significant amounts of lime were used in the mortar and the lime was subsequently leached out by exposure to the weather. Thus, cracks in masonry walls caused by differential settlement of the foundations or other causes generally will occur in the joints; however, well-bonded masonry occasionally will crack through the masonry unit.

2.3.1.3 Unreinforced Concrete

Unreinforced concrete may be subject to cracking, spalling, and disintegration. Cracking may be due to excessive drying shrinkage during the curing of the concrete or differential settlement of the foundations. Spalling can be caused by exposure to extreme temperatures or the reactive aggregates used in some western states. Disintegration or raveling of the concrete usually is caused by dirty or contaminated aggregates, old or defective cement, or contaminated water (e.g., water with a high salt or mineral content).

2.3.1.4 Reinforced Concrete or Masonry

Reinforced concrete and masonry are subject to the same types of deterioration and damage as unreinforced concrete and masonry. In addition, poor or cracked concrete or masonry may allow moisture and oxygen to penetrate to the steel reinforcement and initiate corrosion. The expansive nature of the corrosion byproducts can fracture the concrete or masonry and extend and accelerate the corrosion process.

2.3.1.5 Structural Steel

Poorly designed structural steel members may trap moisture from rainfall or condensation under conditions that promote corrosion and subsequent loss of section for the steel member. Even well-designed steel members exposed to a moist environment require periodic maintenance (i.e., painting or other corrosion protection) to maintain their effective load-bearing capacity. Light structural steel members (e.g., small columns or bracing members) in some installations may be subject to damage from heavy equipment or vehicles. While such damage may have no apparent detrimental effect on the vertical-load-resisting capacity of the steel member, its reserve capacity for resisting seismic forces may be seriously impaired.

2.3.2 REHABILITATION TECHNIQUES FOR DETERIORATED CONDITION OF STRUCTURAL MATERIALS

Structural materials that exhibit evidence of damage or deterioration require careful evaluation. Even if affected structural elements are to be rehabilitated or replaced, it is important that the factors contributing to the damage or deterioration be eliminated or minimized. For example, vulnerable steel framing can be protected from heavy equipment or vehicles by concrete curbs or concrete encasement, poorly drained steel members and connections can be modified or replaced so as to provide positive drainage, and steel framing in moist environments can be painted or covered with other corrosion-resistant coatings.

If the deterioration is not severe and the apparent causes have been mitigated, the engineer may decide to assign a reduced capacity to the structural member and to perform a revised evaluation of the need for rehabilitation and/or strengthening.

SEISMIC STRENGTHENING OF EXISTING BUILDINGS

3.0 INTRODUCTION

The life-safety hazard posed a building found to be vulnerable to earthquake ground motion can be mitigated in several ways: the building can be condemned and demolished or strengthened or otherwise modified to increase its capacity or the seismic demand on the building can be reduced. Structural rehabilitation or strengthening of a building can be accomplished in a variety of ways, each with specific merits and limitations related to the unique characteristics of the building.

This chapter focuses on the structural considerations of seismic strengthening or upgrading; however, it must be remembered that other factors may influence or even dictate which technique is most appropriate for an individual building. Recommendations for enhancing the seismic resistance of existing structures by eliminating or reducing the adverse effects of design or construction features were presented in Chapter 2. Cost, function, aesthetic, and seismic zone considerations that also influence the selection of a strengthening technique are reviewed briefly below and are elaborated on in the remaining sections of this chapter. It should be noted, however, that seismic strengthening may trigger application of other building rehabilitation requirements such as those related to handicap access, asbestos, fire sprinklers, fire resistance, and egress.

3.0.1 COST CONSIDERATIONS

Cost is very important and often may be the only criterion applied when choosing among equivalent strengthening options. When using relative costs to evaluate two or more feasible strengthening or rehabilitation alternatives, it is important to consider all applicable costs. For example, an existing steel frame building, with steel floor and roof decking and vertical bracing in the exterior walls may have inadequate seismic shear capacity in the diaphragms and vertical bracing. Although it may be feasible to increase the capacity of the existing diaphragms and the bracing, it may be more cost-effective to add bracing to the interior frames to reduce the diaphragm shears to an allowable level. If additional bracing can be installed without additional foundations and without adverse effects on the functional use of the building, it may be significantly more economical than any of the diaphragm strengthening techniques.

3.0.2 FUNCTIONAL CONSIDERATIONS

Most buildings are intended to serve one or more functional purposes (e.g., to provide housing or to enclose a commercial or industrial activity). Since the functional requirements are essential to the effective use of the building, extreme care must be exercised in the planning and design of structural modifications to ensure that the modifications will not seriously impair the functional use. For example, if new shear walls or vertical concentrically braced frames are required, they must be located to minimize any adverse effect on access, egress, or functional circulation within the building. When considering alternative structural modifications for an existing building with an ongoing function, the degree to which construction of the proposed alternative will disrupt that function also must be considered in assessing cost-effectiveness.

3.0.3 AESTHETIC CONSIDERATIONS

In some cases, the preservation of aesthetic features can significantly influence the selection of a strengthening technique. Historical buildings, for example, may require inconspicuous strengthening designed to preserve historical structural or nonstructural features. Other buildings may have attractive or architecturally significant facades, entrances, fenestration, or ornamentation that require preservation.

A decrease in natural light caused by the filling in of window or skylight openings or the installation of bracing in front of these openings may have an adverse effect on the occupants of the building. Also, the need for preservation of existing architectural features may dictate the location and configuration of the new bracing system. In many such cases, the engineer may not be able to assign an appropriate value to these subjective considerations; however, any additional costs involved in preserving aesthetic features can be identified so that the building owner can make an informed decision.

3.0.4 SEISMIC RISK

The *NEHRP Recommended Provisions* contains seismic zonation maps that divide the United States into seven seismic zones ranging from effective seismic accelerations of 0.05g to 0.40g. Seismic strengthening may be required for older structures built before the advent of seismic codes or built under less stringent requirements (i.e., seismic force levels in most codes have escalated and the seismic zoning in many areas has been revised upward). However, since these structures were designed for and have been tested over time by vertical loads and wind forces, it is safe to assume that they have some inherent capacity for resisting seismic forces.* Obviously, older existing structures located in a lower seismic zone have a higher probability of requiring little or no strengthening than do similar structures in a higher zone. Further, some strengthening techniques for existing structures with moderate seismic deficiencies in the lower seismic zones are not appropriate for use in higher zones.

In lower seismic zones it sometimes can be demonstrated that a building does not require seismic strengthening because it can resist wind loads in excess of the code-prescribed seismic forces. For other buildings in low seismicity zones, more detailed structural evaluations may be warranted if there is a probability that the seismic adequacy of the structure can be demonstrated.

3.1 VERTICAL-RESISTING ELEMENTS--MOMENT RESISTING SYSTEMS*

Moment resisting systems are vertical elements that resist lateral loads primarily through flexure. There are four principal types of moment resisting systems: steel moment frames, concrete moment frames, precast concrete moment frames; and moment frames with infill walls.

3.1.1 STEEL MOMENT FRAMES

3.1.1.1 Deficiencies

The principal seismic deficiencies in steel moment frames are:

- Inadequate moment/shear capacity of beams, columns, or their connections;
- Inadequate beam/column panel zone capacity; and
- Excessive drift.

*The American Iron and Steel Institute has written a minority opinion concerning the footnoted sentence in Sec. 3.0.4 and the organization of Sec. 3.1 and the American Institute of Steel Construction has written a minority opinion concerning the first sentence in Sec. 3.1.1.1; see page 193.

3.1.1.2 Strengthening Techniques for Inadequate Moment/Shear Capacity of Beams, Columns, or Their Connections

Techniques. Deficient moment/shear capacity of the beams, columns, or the connections of steel moment frames can be improved by:

1. Increasing the moment capacity of the members and connections by adding cover plates or other steel sections to the flanges (Figure 3.1.1.2a) or by boxing members (Figure 3.1.1.2b).
2. Increasing the moment/shear capacity of the members and connections by providing steel gusset plates or knee braces.
3. Reducing the stresses in the existing frames by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4.
4. Providing lateral bracing of unsupported flanges to increase capacity limited by tendency for lateral/torsional buckling.
5. Encasing the columns in concrete.

Relative Merits. If the existing steel frame members are inaccessible (e.g., they are covered with architectural cladding), Techniques 1 and 2 usually are not cost-effective. The majority of the columns, beams, and connections would need to be exposed; significant reinforcement of the connections and members would be required, and the architectural cladding would have to be repaired. Reducing the moment stresses by providing supplemental resisting elements (Technique 3) usually will be the most cost-effective approach. Providing additional moment frames (e.g., in a building with moment frames only at the perimeter, selected interior frames can be modified to become moment frames as indicated in Figure 3.1.1.2a) reduces stresses on the existing moment frames. Providing supplemental bracing or shear walls also can reduce frame stresses. Concentric frames and bracing may pose relative rigidity problems where a rigid diaphragm is present. Shear walls have the additional disadvantage of requiring additions to or modifications of the existing foundations. The addition of eccentric bracing may be an efficient and cost-effective technique to increase the lateral load capacity of the deficient frame provided existing beam sizes are appropriate. In addition to being compatible with the rigidity of the moment

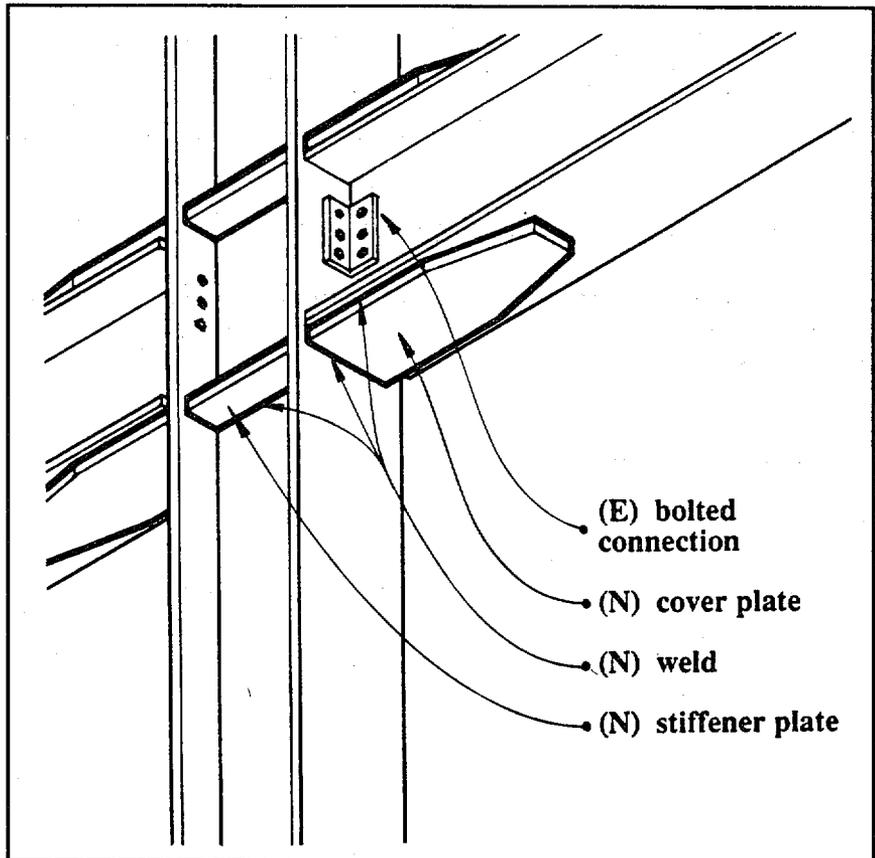


FIGURE 3.1.1.2a Modification of an existing simple beam to a moment connection.

frames, eccentric bracing has the advantage of being more adaptable than concentric bracing or shear walls in avoiding the obstruction of existing door and window openings.

If architectural cladding is not a concern, reinforcement of existing members (Technique 1) may be practical. The addition of cover plates to beam flanges (Figure 3.1.1.2a) can increase the moment capacity of the existing connection, and the capacity of columns can be increased by boxing (Figure 3.1.1.2b). Since the capacity of a column is determined by the interaction of axial plus bending stresses, the addition of box plates increases the axial capacity, thus permitting the column a greater bending capacity. Cover or box plates also may increase the moment capacity of the columns at the base and thereby require that the foundation capacity also be increased.

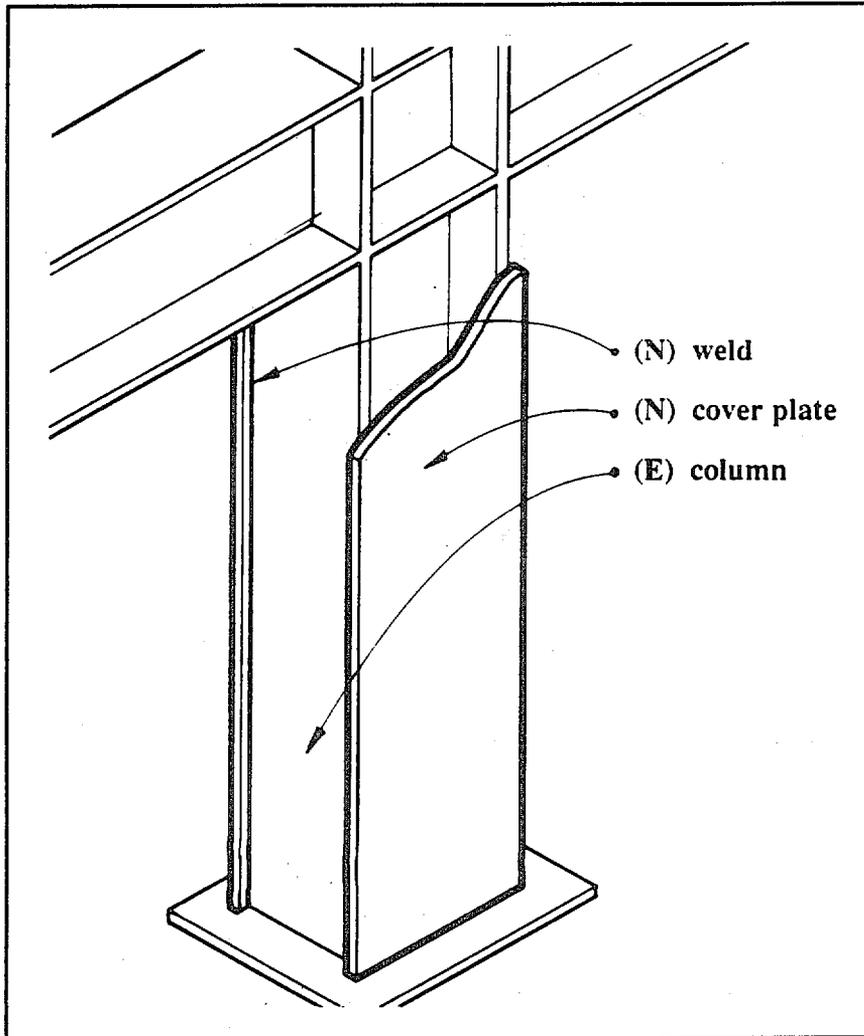


FIGURE 3.1.1.2b Strengthening an existing column.

Increasing the moment capacity of columns with cover plates at the beam/column connection usually is not feasible because of the interference of the connecting beams. The addition of flanged gussets to form haunches below and/or above the beam or the use of knee braces (Technique 2) may be effective for increasing the moment capacity of a deficient moment frame. The effects of the haunches or knee braces will require a re-analysis of the frame and the designer must investigate the stresses and the need for lateral bracing at the interface between the gusset or brace and the beam or column.

In many cases, it may not be feasible to increase the capacity of existing beams by providing cover plates on the top flange because of interference with the floor beams, slabs, or metal decking. (Note that for a bare steel beam, a cover plate on only the lower flange may not significantly reduce the stress in the upper flange.) However, if an existing concrete slab is adequately reinforced and detailed for composite action at the end of the beam, it may be economi-

cally feasible to increase the moment capacity by providing cover plates on the lower flanges at each end of the beam. Cover plates should be tapered as shown in Figure 3.1.1.2c to avoid an abrupt change in section modulus beyond the point where the additional section modulus is required. Where composite action is not an alternative, increasing the top flange thickness can be achieved by adding tapered plates to the sides of the top flange and butt-welding these plates to the beam and column flanges.

In some cases the capacity of steel beams in rigid frames may be governed by lateral stability considerations. Although the upper flange may be supported for positive moments by the floor or roof system, the lower flange must be checked for compression stability in regions of negative moments. If required, the necessary lateral support may be provided by diagonal braces to the floor system.

Encasing the columns in concrete (Technique 5) can increase column shear capacity in addition to increasing stiffness. This alternative may be cost-effective when both excessive drift and inadequate column shear capacity need to be addressed.

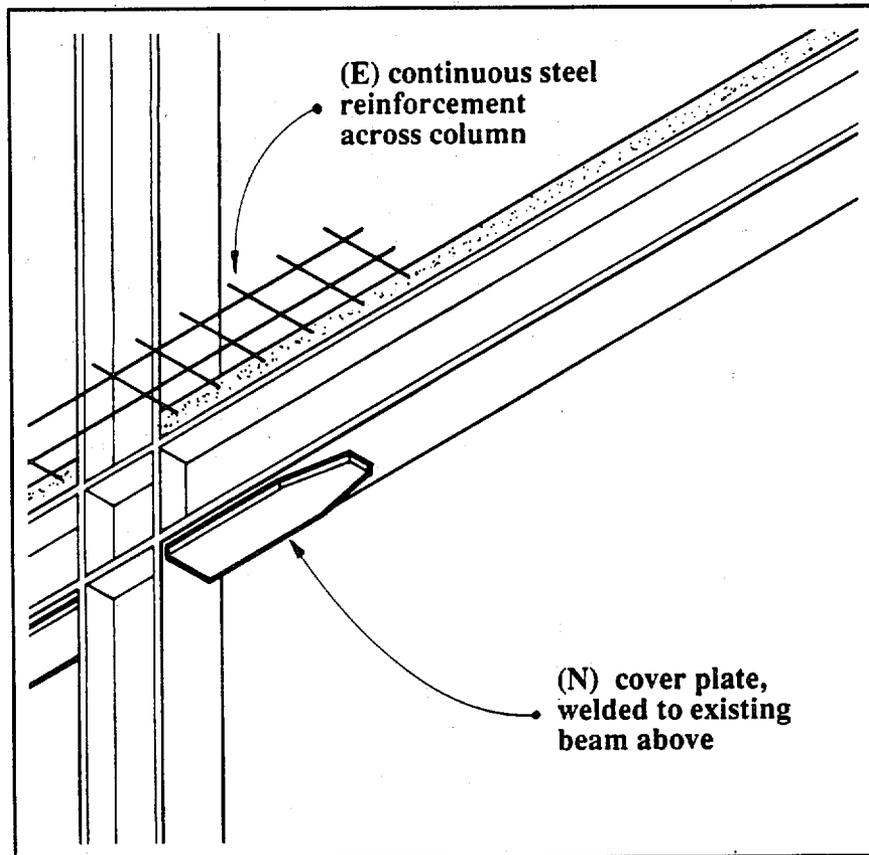


FIGURE 3.1.1.2c Strengthening an existing beam.

3.1.1.3 Strengthening Techniques for Inadequate Panel Zone Capacity

Techniques. Beam/column panel zones can be overstressed due to seismic forces if the tensile capacity in the column web opposite the beam flange connection is inadequate (i.e., tearing of the column web), if the stiffness of the column flange where beam flange or moment plate weld occurs is inadequate (i.e., lateral bowing of the column flange), if the capacity for compressive forces in the column web is inadequate (i.e., web crippling or buckling of the column web opposite the compression flange of the connecting beam), or if there is inadequate shear capacity in the column flange (i.e., shear yielding or buckling of the column web). Deficient panel zones can be improved by:

1. Providing welded continuity plates between the column flanges.
2. Providing stiffener plates welded to the column flanges and web.
3. Providing web doubler plates at the column web.
4. Reducing the stresses in the panel zone by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4.

Relative Merits. Technique 2 (i.e., adding stiffener plates to the panel zone) usually is the most cost-effective alternative. It should be noted that this technique corrects three of the four deficiencies identified above. Also, by confining the column web in the panel zone, shear buckling is precluded and shear yielding in the confined zone may be beneficial by providing supplemental damping. The cost for removal and replacement of existing architectural cladding and fireproofing associated with these alternatives needs to be considered in assessing cost-effectiveness.

3.1.1.4 Techniques for Reducing Drift

Techniques. Drift of steel moment frames can be reduced by:

1. Increasing the capacity and, hence, the stiffness of the existing moment frame by cover plates or boxing.
2. Increasing the stiffness of the beams and columns at their connections by providing steel gusset plates to form haunches.
3. Reducing the drift by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4.
4. Increasing the stiffness by encasing columns in reinforced concrete.
5. Reducing the drift by adding supplemental damping as discussed in Sec. 4.

Relative Merits. Excessive drift generally is a concern in the control of seismic damage; however, for steel frames, there also may be cause for concern regarding overall frame stability. If the concern is excessive drift and not frame capacity, the most cost-effective alternative typically is increasing the rigidity of the frame by the addition of bracing or shear walls. However, increasing the rigidity of the frame also may increase the demand load by lowering the fundamental period of vibration of the structure, and this potential adverse effect must be assessed.

Providing steel gusset plates (Technique 2) to increase stiffness and reduce drift may be cost-effective in some cases. This technique however, must be used with caution since new members may increase column bending stresses and increase the chance for a nonductile failure. Thus, column and beam stresses must be checked where beams and columns interface with gussets and column stability under a lateral displacement associated with the design earthquake should be verified.

Increasing the stiffness of steel columns by encasement in concrete (Technique 4) may be an alternative for reducing drift in certain cases. The principal contributing element to excessive story drift typically is beam flexibility; hence, column concrete encasement will be only partially effective and is therefore only cost-effective when a building has relatively stiff beams and flexible columns.

Reducing drift by adding supplemental damping is an alternative that is now being considered in some seismic rehabilitation projects. Typically, bracing elements need to be installed in the moment frame so that discrete dampers can be located between the flexible moment frame elements and the stiff bracing elements. This alternative is further discussed in Sec. 4.3.2.

3.1.2 CONCRETE MOMENT FRAMES

3.1.2.1 Deficiency

The principal deficiency in concrete moment frames is inadequate ductile bending or shear capacity in the beams or columns and lack of confinement, frequently in the joints.

3.1.2.2 Strengthening Techniques for Deficiency in Concrete Moment Frames

Techniques. Deficient bending and shear capacity of concrete moment frames can be improved by:

1. Increasing the ductility and capacity by jacketing the beam and column joints or increasing the beam or column capacities (Figures 3.1.2.2a and 3.1.2.2b).
2. Reducing the seismic stresses in the existing frames by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4.
3. Changing the system to a shear wall system by infilling the reinforced concrete frames with reinforced concrete (Figure 3.1.2.2c).

Relative Merits. Improving the ductility and strength of concrete frames by jacketing (Technique 1) generally is not cost-effective because of the difficulty associated with providing the necessary confinement and shear reinforcement in the beams, columns, and beam-column connection zones. When deficiencies are identified in these frames, it will probably be more cost-effective to consider adding reinforced concrete shear walls (Technique 2) or filling in the frames with reinforced concrete (Technique 3). Either of these alternatives will tend to make the frames ineffective for lateral loads. This is because the greater rigidity of the walls will increase the percentage of the lateral load to be resisted by the walls, (i.e., lateral forces will be attracted away from the relatively flexible moment frames and into the more rigid walls). This is especially true for buildings with rigid diaphragms. These alternatives also typically will require upgrading of the foundations, which may be costly. The decision regarding whether the new walls should be in the interior of the building or at its perimeter or exterior buttresses usually will depend on nonstructural considerations such as aesthetics and disruption or obstruction of the functional use of the building.

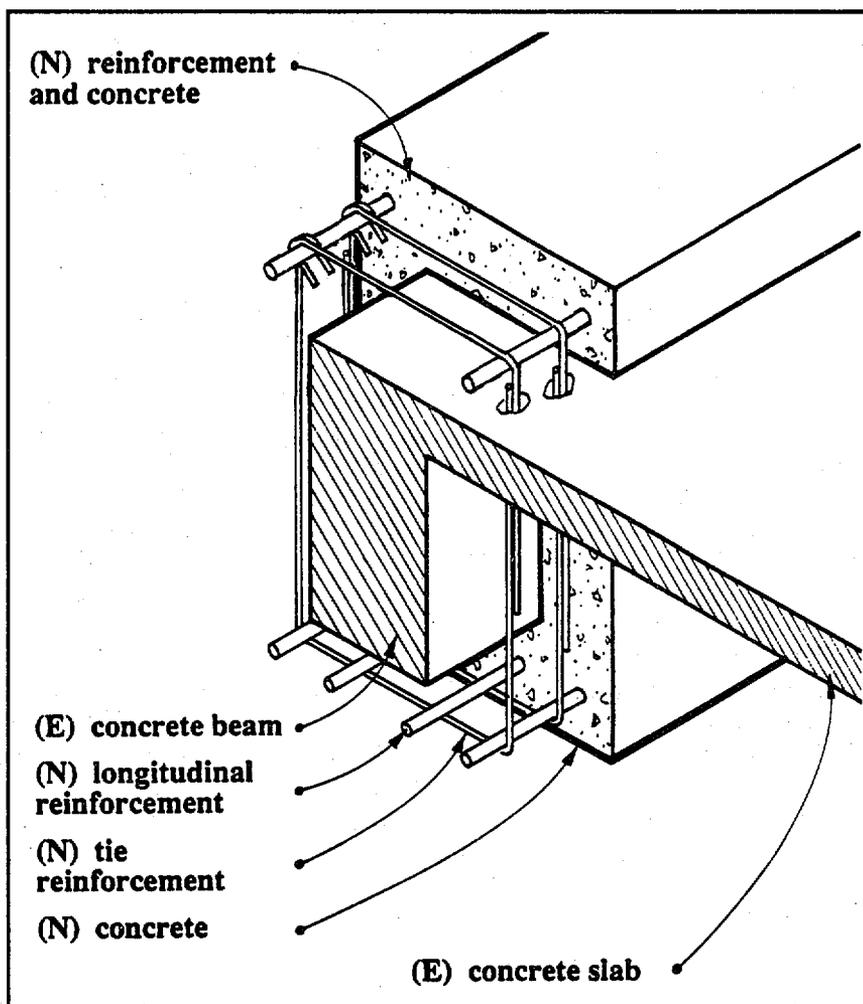


FIGURE 3.1.2.2a Encasing an existing beam in concrete.

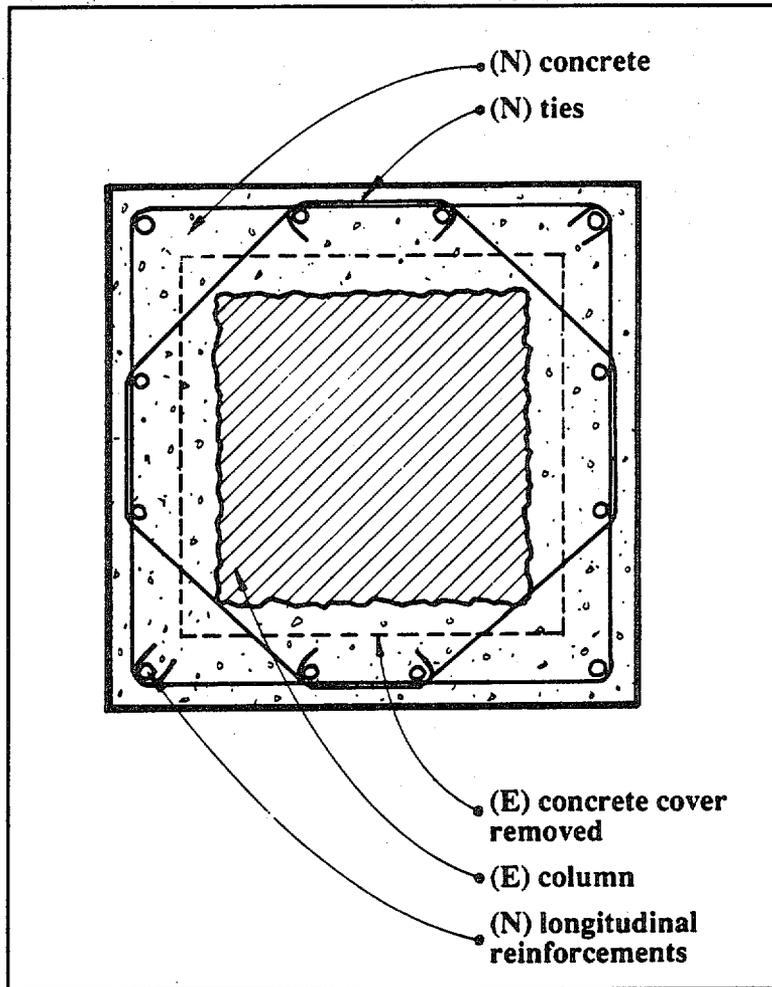


Figure 3.1.2.2b Strengthening an existing concrete column.

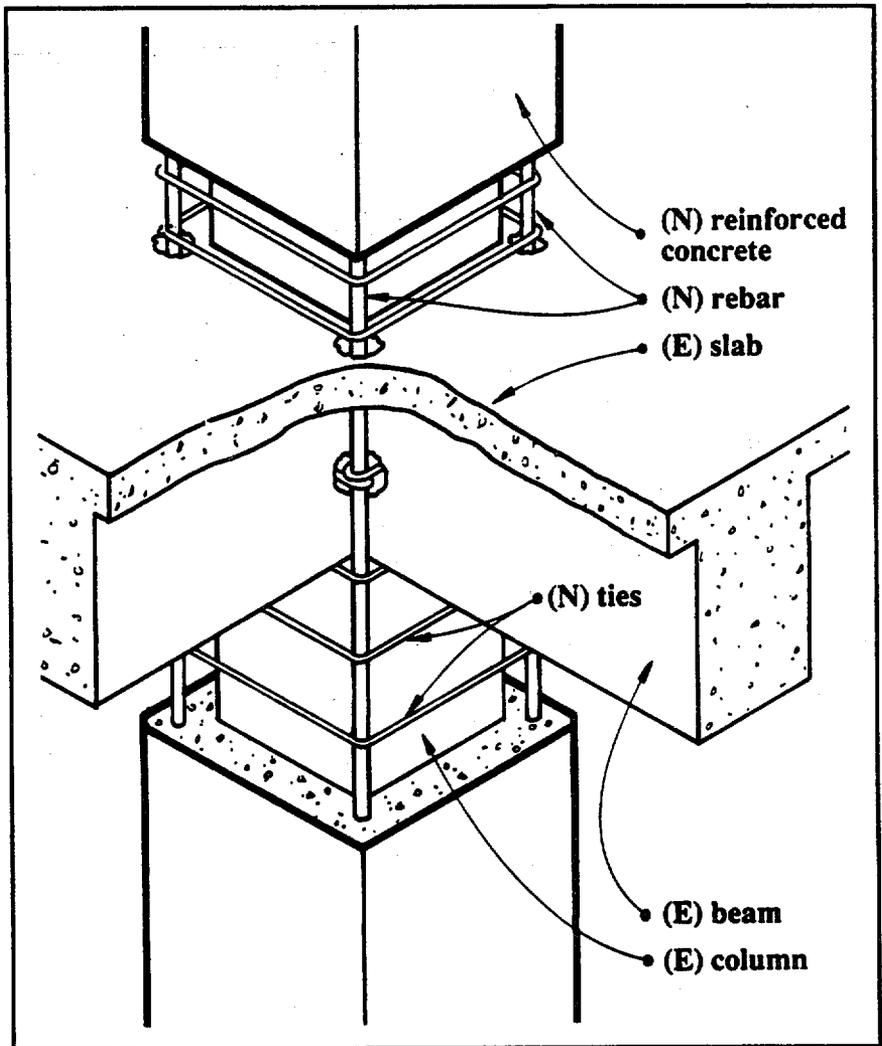


FIGURE 3.1.2b continued.

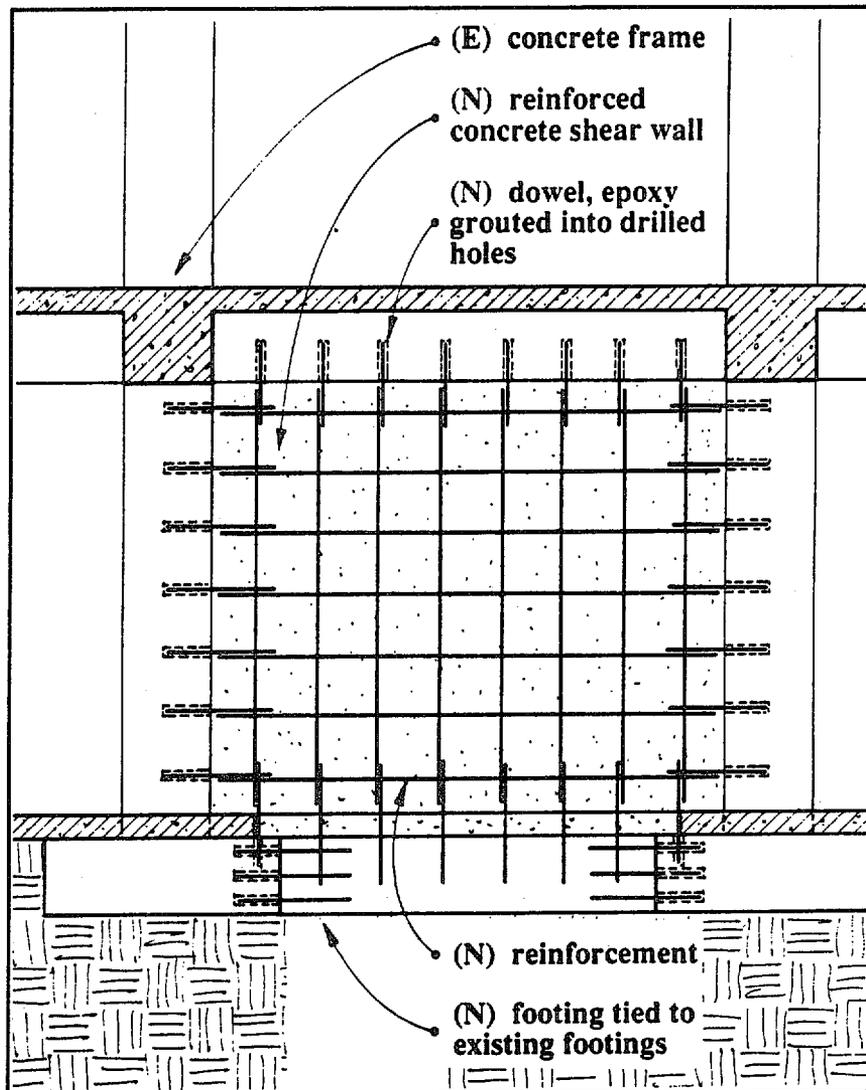


FIGURE 3.1.2.2c Strengthening an existing concrete frame building with a reinforced concrete shear wall.

3.1.3 MOMENT FRAMES WITH INFILLS

3.1.3.1 Deficiencies

When reinforced concrete or steel moment frames are completely infilled, the frame action may be inhibited by the rigidity of the infill wall. Rigid infill walls (e.g., reinforced concrete, reinforced masonry, or clay tile) will resist lateral forces predominantly as shear walls and the frames will be relatively ineffective. Reinforced concrete or steel frames completely infilled with less rigid walls (e.g., unreinforced masonry) will tend to resist lateral forces as braced frames with a diagonal compression "strut" forming in the infill. The principal deficiencies in moment frames with infill walls are:

- Crushing of the infill at the upper and lower corners due to the diagonal compression strut type action of the infill wall,
- Shear failure of the beam/column connection in the steel frames or direct shear transfer failure of the beam or column in concrete frames,

- Tensile failure of the columns or their connections due to the uplift forces resulting from the braced frame action induced by the infill,
- Splitting of the infill due to the orthogonal tensile stresses developed in the diagonal compressive strut, and
- Loss of infill by out-of-plane forces due to loss of anchorage or excessive slenderness of the infill wall.

If the infill walls have inadequate capacity to resist the prescribed forces, the deficiencies may be corrected as described below for shear walls.

Partial height infills or infills with door or window openings also will tend to brace concrete or steel frames, but the system will resist lateral forces in a manner similar to that of a knee-braced frame. The lateral stiffness of the shortened columns is increased so that, for a given lateral displacement, a larger shear force is developed in the shortened column compared to that in a full height column. If the column is not designed for this condition, shear or flexural failure of the column could occur in addition to the other potential deficiencies indicated above for completely infilled frames.

Falling debris resulting from the failure of an existing infill wall also poses a life-safety hazard. Frames may be infilled with concrete or various types of masonry such as solid masonry, hollow clay tile, or gypsum masonry. These infills may be reinforced, partially reinforced, or unreinforced. Infills (particularly brittle unreinforced infills such as hollow clay tile or gypsum masonry) often become dislodged upon failure of the wall in shear. Once dislodged, the broken infill may fall and become a life-safety hazard. Mitigation of this hazard can be accomplished by removing the infill and replacing it with a nonstructural wall as described above. The infill can also be "basketed" by adding a constraining member such as a wire mesh. Basketing will not prevent the infill from failing but will prevent debris from falling.

In some cases, the exterior face of the infill may extend beyond the edge of the concrete or steel frame columns or beams. For example, an unreinforced brick infill in a steel frame may have one wythe of brick beyond the edge of the column or beam flange to form a uniform exterior surface. This exterior wythe is particularly vulnerable to delamination or splitting at the collar joint (i.e., the vertical mortar joint between the wythes of brick) as the infilled frame deforms in response to lateral loads. Because the in-plane deformation of completely infilled frames is very small, the potential for delamination is greater for partial infills or those with significant openings. The potential life-safety hazard for this condition should be evaluated and may be mitigated as described in the preceding paragraph.

3.1.3.2 Rehabilitation Techniques for the Infill Walls of Moment Frames

Techniques. Inadequate shear transfer of the infill walls of moment frames can be improved by:

1. Eliminating the hazardous effects of the infill by providing a gap between the infill and the frame and providing out-of-plane support.
2. Treating the infill frame as a shear wall and correcting the deficiencies as described in Sec. 3.2.

Relative Merits. If the frame, without the infill wall, has adequate capacity for the prescribed forces, the most expedient correction is to provide a resilient joint between the column, upper beam, and wall to allow the elastic deformation of the column to take place without restraint (Technique 1). This may be accomplished by cutting a gap between the wall and the column and the upper beam and filling it with resilient material (out-of-plane restraint of the infill still must be provided) or by removing the infill wall and replacing it with a nonstructural wall that will not restrain the column.

If the frame has insufficient capacity for the prescribed forces without the infill, then proper connection of the infill to the frame may result in an adequate shear wall. The relative rigidities of the shear wall and moment frames in other bays must be considered when distributing the lateral loads and evaluating the wall and frame stresses.

3.1.4 PRECAST CONCRETE MOMENT FRAMES

3.1.4.1 Deficiency

The principal deficiency of precast concrete moment frames is inadequate capacity and/or ductility of the joints between the precast units.

3.1.4.2 Strengthening Techniques for the Precast Concrete Moment Frames

Techniques. Deficient capacity and ductility of the precast concrete moment frame connections can be improved by:

1. Removing existing concrete in the precast elements to expose the existing reinforcing steel, providing additional reinforcing steel welded to the existing steel (or drilled and grouted), and replacing the removed concrete with cast-in-place concrete.
2. Reducing the forces on the connections by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4.

Relative Merits. Reinforcing the existing connections as indicated in Technique 1 generally is not cost-effective because of the difficulty associated with providing the necessary confinement and shear reinforcement in the connections. Providing supplemental frames or shear walls (Technique 2) generally is more cost-effective; however, the two alternatives may be utilized in combination.

3.2 VERTICAL-RESISTING ELEMENTS--SHEAR WALLS

Shear walls are structural walls designed to resist lateral forces parallel to the plane of the wall. There are four principal types of shear walls: cast-in-place reinforced concrete or masonry shear walls; precast concrete shear walls; unreinforced masonry shear walls; and shear walls in wood frame buildings.

3.2.1 REINFORCED CONCRETE OR REINFORCED MASONRY SHEAR WALLS

3.2.1.1 Deficiencies

The principal deficiencies of reinforced concrete or masonry shear walls are:

- Inadequate shear capacity,
- Inadequate flexural capacity, and
- Inadequate shear or flexural capacity in the coupling beams between shear walls or piers.

3.2.1.2 Strengthening Techniques for Shear Capacity

Techniques. Deficient shear capacity of existing reinforced concrete or reinforced masonry shear walls can be improved by:

1. Increasing the effectiveness of the existing walls by filling in door or window openings with reinforced concrete or masonry (Figures 3.2.1.2a and 3.2.1.2b).

2. Providing additional thickness to the existing walls with a poured-in-place or pneumatically applied (i.e., shotcrete) reinforced concrete overlay anchored to the inside or outside face of the existing walls (Figure 3.2.1.2c).
3. Reducing the shear or flexural stresses in the existing walls by providing supplemental vertical-resisting elements (i.e., shear walls, bracing, or external buttresses) as discussed in Sec. 3.4.

Relative Merits. Techniques 1 and 2 generally will be more economical than Technique 3, particularly if they can be accomplished without increasing existing foundations. If adequate additional capacity can be obtained by filling in selected window or door openings without impairing the functional or aesthetic aspects of the building, this alternative probably will be the most economical. If this is not feasible, Technique 3 should be considered.

The optimum application of this alternative would be when adequate additional capacity could be obtained by a reinforced concrete overlay on a selected portion of the outside face of the perimeter walls without unduly impairing the functional or aesthetic qualities of the building and without the need to increase the footing. In some cases, restrictions may preclude any change in the exterior appearance of the building (e.g., a building with historical significance). In these cases, it will be necessary to consider overlays to the inside face of the exterior shear walls or to either face of interior shear walls. Obviously this is more disruptive and, thus, more costly than restricting the work to the exterior of the building. However, if the functional activities within the building are to be temporarily relocated because of other interior alterations, the cost difference between the concrete overlay to the inside face and the outside face of the building walls is reduced. In some cases, for example, when deficiencies exist in the capacity of the diaphragm chords or in the shear transfer from the diaphragm to the shear walls, there may be compelling reasons to place the overlay on the inside face and concurrently solve other problems.

Technique 3 (i.e., providing supplemental vertical-resisting elements) usually involves construction of additional interior shear walls or exterior buttresses. This alternative generally is more expensive than the other two because of the need for new foundations and for new drag struts or other connections to collect the diaphragm shears for transfer to the new shear walls or buttresses. The foundation required to resist overturning forces

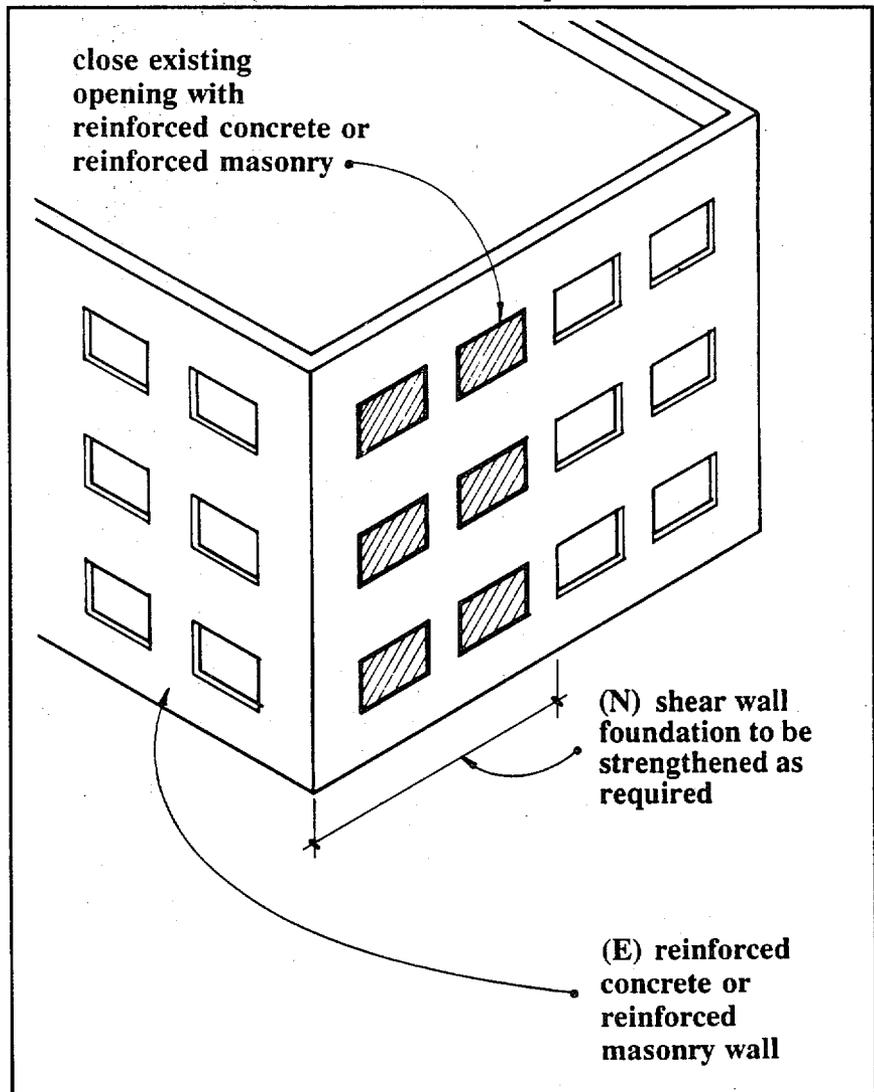


FIGURE 3.2.1.2a Strengthening an existing shear wall by filling in existing openings.

for an exterior buttress usually is significant because the dead weight of the building cannot be mobilized to resist the overturning forces. Piles or drilled piers may be required to provide tensile hold-down capacity for the footings. Buttresses located on both ends of the wall can be designed to take compression only, minimizing the foundation problems. Buttresses frequently are not feasible due to adjacent buildings or property lines. The advantages of the buttress over a new interior shear wall is that the work can be accomplished with minimal interference to ongoing building functions.

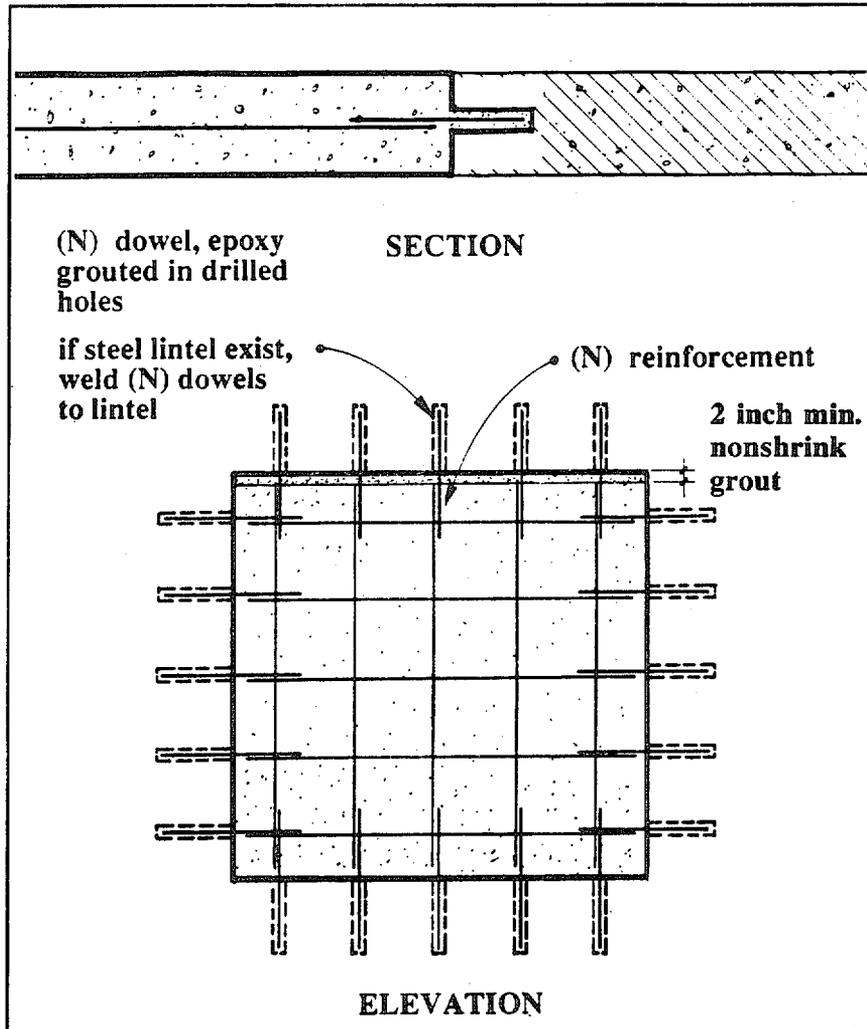


FIGURE 3.2.1.2b Example of details for enclosing an existing opening in a reinforced concrete or masonry wall.

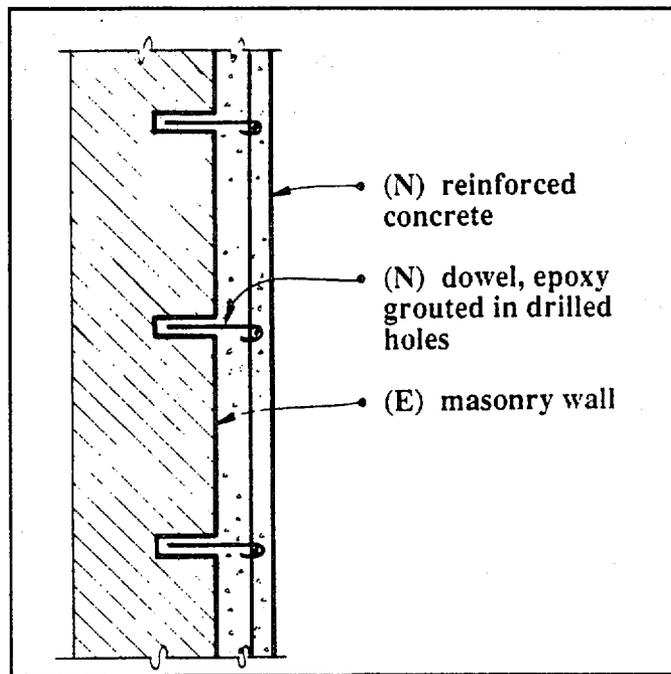


FIGURE 3.2.1.2c Strengthening an existing reinforced concrete or masonry wall.

3.2.1.3 Strengthening Technique For Flexural Capacity

Deficient flexural capacity of existing reinforced concrete or masonry shear walls can be improved using the same techniques identified to improve shear capacity, ensuring that flexural steel has adequate connection capacities into existing walls and foundations. Shear walls that yield in flexure are more ductile than those that yield in shear. Shear walls that are heavily reinforced (i.e., with a reinforcement ratio greater than about 0.005) also are more susceptible to brittle failure; therefore, care must be taken not to overdesign the flexural capacity of rehabilitated shear walls.

3.2.1.4 Rehabilitation Technique for Coupling Beams

Deficient shear or flexural capacity in coupling beams of reinforced concrete or reinforced masonry shear walls can be improved by:

1. Eliminating the coupling beams by filling in openings with reinforced concrete (Figure 3.2.1.2b).
2. Removing the existing beams and replacing with new stronger reinforced beams (Figure 3.2.1.4).
3. Adding reinforced concrete to one or both faces of the wall and providing an additional thickness to the existing wall (Figure 3.2.1.2c).
4. Reducing the shear or flexural stresses in the connecting beams by providing additional vertical-resisting elements (i.e., shear walls, bracing, or external buttresses) as discussed in Sec. 3.4.

Relative Merits. If the deficiency is in both the piers and the connecting beams, the most economical solution is likely to be the Technique 3 (i.e., adding reinforced concrete on one or both sides of the existing wall). Shallow, highly stressed connecting beams may have to be replaced with properly reinforced concrete as part of

the additional wall section. The new concrete may be formed and poured in place or may be placed by the pneumatic method.

If the identified deficiency exists only in the connecting beams, consideration should be given to acceptance of some minor damage in the form of cracking or spalling by repeating the structural evaluation with the deficient beams modeled as pin-ended links between the piers. If this condition is unacceptable, Technique 2 may be the most economical and the beams should be removed and replaced with properly designed reinforced concrete.

Depending on functional and architectural as well as structural considerations, Technique 1 (i.e., filling in selected openings) may be practical. If Techniques 1 through 3 are not feasible or adequate to ensure the proper performance of the wall, reducing the stresses by adding supplemental new structural elements (Technique 4) should be considered. This alternative is likely to be the most costly because of the need for new foundations, vertical members, and collectors.

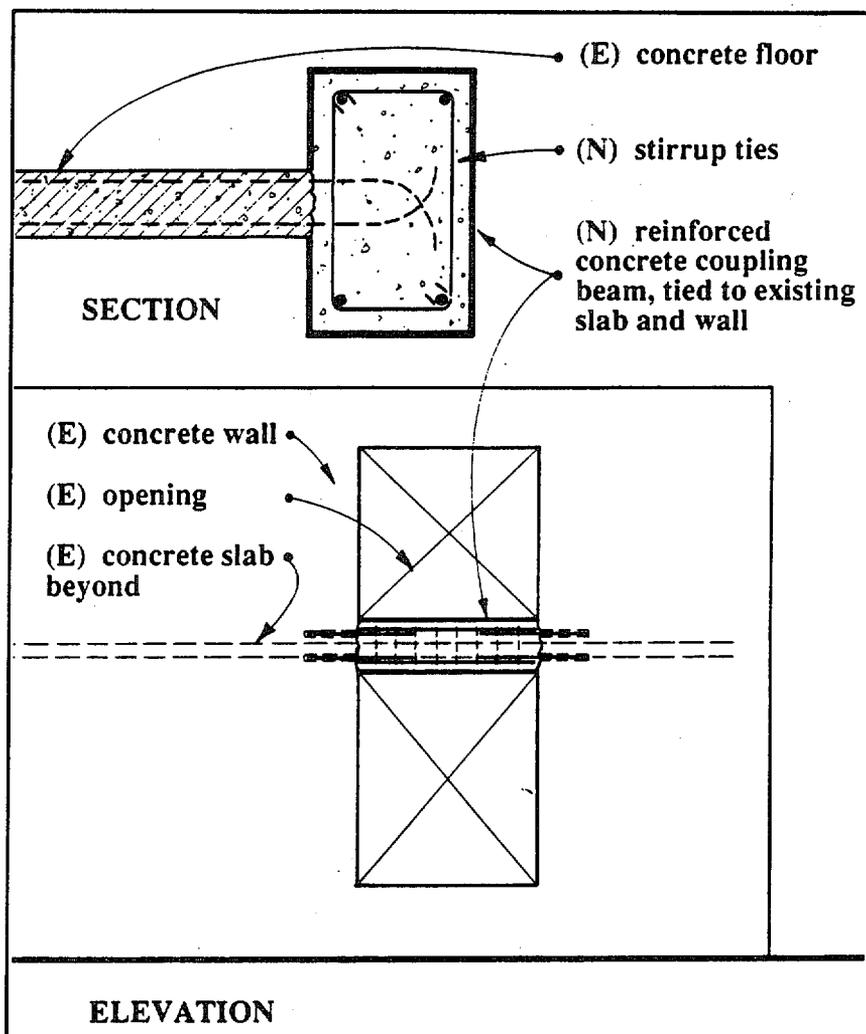


FIGURE 3.2.1.4 Example of strengthening an existing coupling beam at an exterior wall.

3.2.2 PRECAST CONCRETE SHEAR WALLS

3.2.2.1 Deficiencies

The principal deficiencies of precast concrete shear walls are:

- Inadequate shear or flexural capacity in the wall panels,
- Inadequate interpanel shear or flexural capacity,
- Inadequate out-of-plane flexural capacity, and
- Inadequate shear or flexural capacity in coupling beams.

3.2.2.2 Strengthening Techniques for Inadequate Shear or Flexural Capacity

Techniques. Deficient in-plane shear or flexural capacity of precast concrete panel walls can be improved by:

1. Increasing the shear and flexural capacity of walls with significant openings for doors or windows by infilling the existing openings with reinforced concrete.
2. Increasing the shear or flexural capacity by adding reinforced concrete (poured-in-place or shotcrete) at the inside or outside face of the existing walls.
3. Adding interior shear walls to reduce the flexural or shear stress in the existing precast panels.

Relative Merits. Precast concrete shear walls generally only have high in-plane shear or flexure stress when there are large openings in the wall and the entire shear force tributary to the wall is carried by a few panels. The most cost-effective solution generally is to infill some of the openings with reinforced concrete (Technique 1). In the case of inadequate interpanel shear capacity, the panels will act independently and can have inadequate flexural capacity. Improving the connection capacity between panels can improve the overall wall capacity. Techniques 2 and 3 generally not cost-effective unless a significant overstress condition exists.

3.2.2.3 Strengthening Techniques for Inadequate Interpanel Capacity

Techniques. Deficient interpanel shear connection capacity of precast concrete wall panels can be improved by:

1. Making each panel act as a cantilever to resist in-plane forces (this may be accomplished by adding or strengthening tie-downs, edge reinforcement, footings, etc.).
2. Providing a continuous wall by exposing the reinforcing steel in the edges of adjacent units, adding ties, and repairing with concrete.

Relative Merits. The two techniques can be equally effective. Where operational and aesthetic requirements for the space can accommodate the installation of tie-downs and possibly surface-mounted wall edge reinforcement that will make each panel act as a cantilever is a cost-effective way to compensate for inadequate interpanel capacity. Where this is not acceptable, creating a continuous wall by exposing horizontal reinforcing steel and weld-splicing them across panel joints is a viable, although more costly, option. A commonly used technique to increase interpanel capacity is to bolt steel plates across panel joints; however, observations of earthquake damage indicate this technique may not perform acceptably due to insufficient ductility and its use is not recommended.

3.2.2.4 Strengthening Techniques for Inadequate Out-of-Plane Flexural Capacity

Techniques. Deficient out-of-plane flexural capacity of precast concrete shear walls can be by:

1. Providing pilasters at and/or in-between the interpanel joints.
2. Adding horizontal beams between the columns or pilasters at mid-height of the wall.

Relative Merits. The reinforcing in some precast concrete wall panels may be placed to handle lifting stresses without concern for seismic out-of-plane flexural stresses. A single layer of reinforcing steel, for example, may be placed adjacent to one face of the wall. If this condition exists, new and/or additional pilasters can be provided between the diaphragm and the foundation at a spacing such that the wall will adequately span horizontally between pilasters. Also, horizontal beams can be provided between the pilasters at a vertical spacing such that the wall spans vertically between the diaphragm and the horizontal beam or between the horizontal

beam and the foundation. It should be noted that the problem of inadequate out-of-plane flexural capacity often is caused by wind design, particularly in the lower seismic zones.

3.2.2.5 Strengthening Techniques for Inadequate Shear or Flexural Capacity in Coupling Beams

Techniques. Deficient shear or flexural capacity in coupling beams in precast concrete walls can be improved using the techniques identified for correcting the same condition in concrete shear walls.

Relative Merits. The relative merits of the alternatives for improving the shear or flexural capacity of connecting beams in precast concrete coupling beams are similar to those discussed in Sec. 3.2.1.4 for concrete shear walls.

3.2.3 UNREINFORCED MASONRY SHEAR WALLS

3.2.3.1 Deficiencies

Masonry walls include those constructed of solid or hollow units of brick or concrete. Hollow clay tile also is typically classified as masonry. The use of hollow tile generally has been limited to nonstructural partitions and is discussed in Sec. 5.4. Unreinforced concrete, although not classified as masonry, may be strengthened by techniques similar to those described below for masonry.

The principal deficiencies of unreinforced masonry shear walls are:

- Inadequate in-plane shear and
- Inadequate out-of-plane flexural capacity of the walls.

A secondary deficiency is inadequate shear or flexural capacity of the coupling beam.

3.2.3.2 Strengthening Techniques for Inadequate In-plane Shear and Out-of-Plane Flexural Capacity of the Walls

Techniques. Deficient in-plane shear and out-of-plane flexural capacity of unreinforced masonry walls can be improved by:

1. Providing additional shear capacity by placing reinforcing steel on the inside or outside face of the wall and applying new reinforced concrete (Figure 3.2.1.2c).
2. Providing additional capacity for only out-of-plane lateral forces by adding reinforcing steel to the wall utilizing the center coring technique (Figure 3.2.3.2).
3. Providing additional capacity for out-of-plane lateral forces by adding thin surface treatments (e.g., plaster with wire mesh and portland cement mortar) at the inside and outside face of existing walls.
4. Filling in existing window or door openings with reinforced concrete or masonry (Figures 3.2.1.2a and 3.2.1.2b).
5. Providing additional shear walls at the interior or perimeter of the building or providing external buttresses.

Relative Merits. Strengthening techniques for inadequate in-plane shear capacity are similar to those discussed above for reinforced concrete or masonry walls, but there is an important difference because of the very low allowable stresses normally permitted for unreinforced masonry. These stresses generally are based on the

ultimate strength of the masonry determined from core tests or in-situ testing. A very large safety factor commonly is used in establishing allowable shear stress because of the potential variation in workmanship and materials, particularly in masonry joints.

Research indicates that it is difficult to maintain strain compatibility between uncracked masonry and cracked reinforced concrete. As a result, when there is a significant deficiency in the in-plane shear capacity of unreinforced masonry walls, some structural engineers prefer to ignore the participation of the existing masonry, to provide out-of-plane support for the masonry, and to design the concrete overlay to resist the total in-plane shear. However, reinforced concrete shear walls may be provided in an existing building to reduce the in-plane shear stresses in the unreinforced masonry walls by redistributing the seismic forces by relative rigidities. It should be noted that this redistribution is most effective when the walls are in the same line of force and connected by a competent spandrel beam or drag strut. When the new concrete walls are not in the same line of force and when the diaphragm is relatively flexible with respect to the wall,

the redistribution may be by tributary area rather than by relative rigidity and the benefit of the additional shear wall may not be entirely realized. Since new concrete shear walls can delaminate from the masonry substrate, such walls should have adequate height to thickness ratios (h/t) independent of the masonry wall.

Unreinforced masonry buildings often lack adequate wall anchorage and diaphragm chords. To correct these deficiencies as well as inadequate in-plane shear capacity, it may be desirable to place the concrete overlay on the inside face of the exterior walls (Figure 3.2.1.2c). Foundations, however, may be inadequate to carry the additional weight of the concrete overlay; see the *NEHRP Evaluation Handbook* for further discussion of this subject.

Because unreinforced masonry has minimal tensile strength, these walls are very susceptible to flexural failure caused by out-of-plane forces. A common strengthening technique for this deficiency is to construct reinforced concrete pilasters or steel columns anchored to the masonry wall and spanning between the floor diaphragms. The spacing of the pilasters or columns is such that the masonry wall can resist the seismic inertia forces by spanning as a horizontal beam between the pilasters or columns.

A recent innovation that has been used on several California projects is the seismic strengthening of unreinforced masonry walls by the center coring technique (Technique 2). This technique consists of removing 4 inch (\pm) diameter vertical cores from the center of the wall at regular intervals (about 3 to 5 feet apart) and placing reinforcing steel and grout in the cored holes. Polymer cement grout has been used because of its workability, low shrinkage, and penetrating characteristics. The reinforcement has been used with and without post-tensioning. This technique provides a reinforced vertical beam to resist flexural stresses, and the infusion

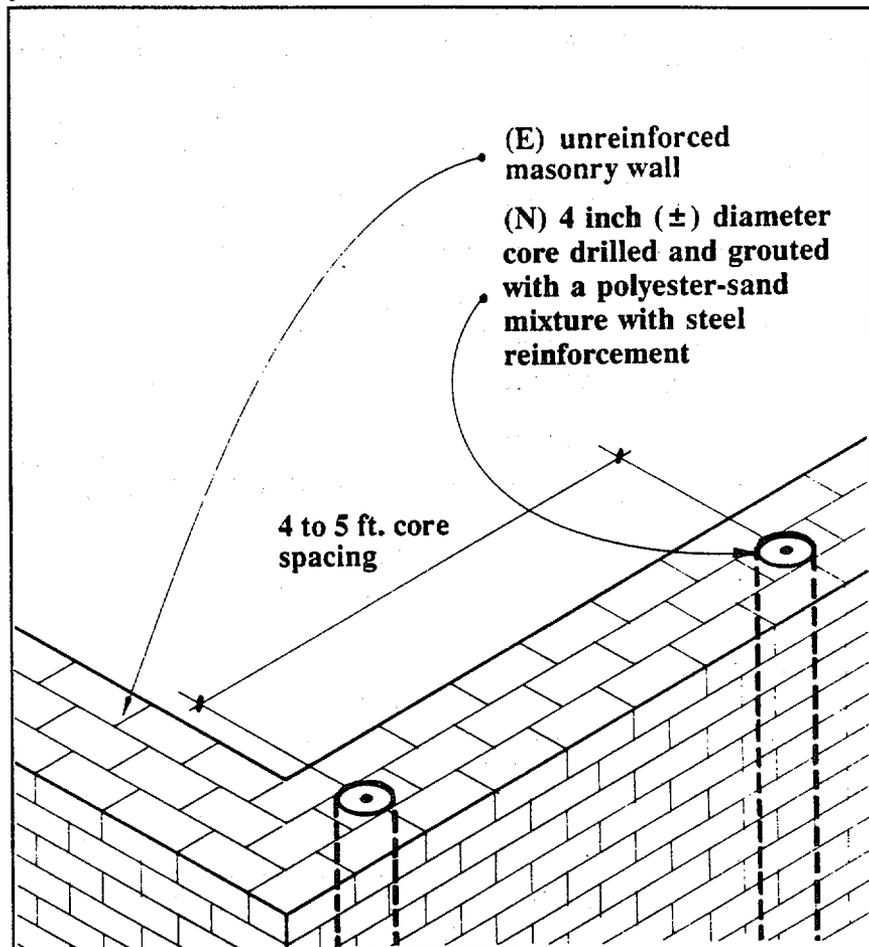


FIGURE 3.2.3.2 Example of center coring technique.

of the polymer grout strengthens the mortar joint in the existing masonry, particularly in the vertical collar joints that generally have been found to be inadequate. This method is a developing technology and designers contemplating its use should obtain the most current information on materials and installation techniques.

Technique 3 for strengthening the out-of-plane capacity of existing walls is to apply thin surface treatments of plaster or portland cement over welded wire mesh. These treatments should be applied on both faces of existing walls.

Filling in existing window and/or door openings (Technique 4) can be a cost-effective means of increasing in-plane shear capacity if the architectural and functional aspects of the building can be accommodated. To maintain strain compatibility around the perimeter of the opening, it is desirable that the infill material have physical properties similar to those of the masonry wall.

3.2.3.3 Alternative Methodology for Evaluation and Design of Unreinforced Masonry Bearing Wall Buildings

An alternative methodology has been developed for the evaluation and design of unreinforced masonry bearing wall buildings with flexible wood diaphragms. Initially designated as the "ABK Methodology," it is based on research funded by the National Science Foundation and performed by Agbabian Associates, S. B. Barnes and Associates, and Kariotis and Associates. The ABK methodology was the basis for the City of Los Angeles' Rule of General Application (RGA) that was developed in cooperation with the Hazardous Buildings Committee of the Structural Engineers Association of Southern California and approved in 1987 as an alternate to the conventional design method in Division 88 of the *Los Angeles City Building Code*. Code provisions for the "ABK Methodology" now have been developed jointly by the Structural Engineers Association of California (SEAOC) and the California Building Officials (CALBO) and are published in the 1991 Edition of the Uniform Code for Building Conservation (available from the International Conference of Building Officials). The procedure for evaluation of unreinforced masonry (URM) bearing wall buildings presented in Appendix C of the *NEHRP Evaluation Handbook* is based on this methodology.

Some of the principal differences between the new methodology and conventional code provisions are as follows:

1. The in-plane masonry walls are assumed to be rigid (i.e., there is no dynamic amplification of the ground motion in walls above ground level).
2. The diaphragms and the tributary masses of the out-of-plane walls respond to ground motion through their attachments to the in-plane walls.
3. The maximum seismic force transmitted to the in-plane walls by the diaphragm is limited by the shear strength of the diaphragms.
4. The diaphragm response is controlled within prescribed limits by cross walls (i.e., existing or new wood sheathed stud walls) or shear walls.
5. Maximum height to thickness (h/t) ratios are specified in lieu of flexural calculations for the out-of-plane response of the walls.

The ABK Methodology and the more conventional evaluation and design methods, prescribed in building codes such as the City of Los Angeles' Division 88 for unreinforced masonry have been prescribed in California with the objective of preservation of life safety rather than prevention of damage. Several moderate earthquakes in Southern California have provided limited testing of the methodology and, although the results are not conclusive, very few of the retrofitted buildings suffered total or partial collapse and the degree of structural damage was less than occurred in nonretrofitted buildings.

3.2.4 SHEAR WALLS IN WOOD FRAME BUILDINGS

3.2.4.1 Deficiencies

The principal deficiencies of wood or metal stud shear wall buildings are:

- Inadequate shear capacity of the wall and
- Inadequate uplift or hold-down capacity of the wall.

3.2.4.2 Strengthening Techniques for Inadequate Shear Capacity

Techniques. Deficient shear capacity of the wood or metal stud walls can be improved by:

1. Increasing the shear capacity by providing additional nailing to the existing finish material.
2. Increasing the shear capacity by adding plywood sheathing to one or both sides of the wall.
3. Reducing the loads on the wall by providing supplemental shear walls to the interior or perimeter of the building.

Relative Merits. Seismic forces in existing wood frame buildings generally are moderate and, in many cases, the existing walls may be adequate. Tabulated allowable shear values are available for existing finishes such as lath and plaster and gypsum wallboard. In the latter case, existing nailing may dictate the allowable shear value and higher allowable values may be obtained by additional nailing. Similarly, the allowable shear value for walls with existing plywood sheathing may be increased within limits by additional nailing. New plywood sheathing may be nailed onto existing gypsum wallboard. Longer nails are required and the allowable shear values are comparable to plywood nailed directly to the studs, but the existing finish need not be removed.

Existing metal stud shear walls may be evaluated like wood stud walls. The fasteners generally are self-threading sheet metal screws and corresponding allowable shear values are available for the finishes discussed in the preceding paragraph.

Where the shear capacity of an existing wall is increased, the shear transfer capacity at the foundation and the capacity of the foundation connection to resist overturning forces must be checked. Techniques for increasing the foundation shear connection and overturning capacities are discussed in Sec. 3.8.1.

As with other shear wall strengthening techniques, the most economical scheme will be the one that minimizes the total cost, including removal and replacement of finishes and other nonstructural items, disruption of the functional use of the building, and any necessary strengthening of foundations or other structural supports. Under normal circumstances, sheathing the exterior face of the perimeter walls should have the lowest cost, but in some circumstances (e.g., if extensive interior alterations are planned) strengthening existing interior shear walls or adding new interior shear walls will be more economical.

If the loads are so large that the above alternatives are not practical, it may be possible to reduce the forces on the wall by strengthening other existing shear walls or by adding supplemental walls (Technique 3).

3.2.4.3 Strengthening Techniques for Inadequate Uplift or Hold-Down Capacity

Techniques. Strengthening techniques for inadequate uplift or hold-down capacity are discussed in Sec. 3.7.1.5 and are illustrated in Figures 3.7.1.5 (a, b, c, and d).

3.3 VERTICAL-RESISTING ELEMENTS--BRACED FRAMES

Braced frames are vertical elements that resist lateral loads through tension and/or compression braces. There are two principal types of braced frames: concentric bracing consisting of diagonals, chevrons, K-bracing, or tension rods and eccentric bracing (Figure 3.3).

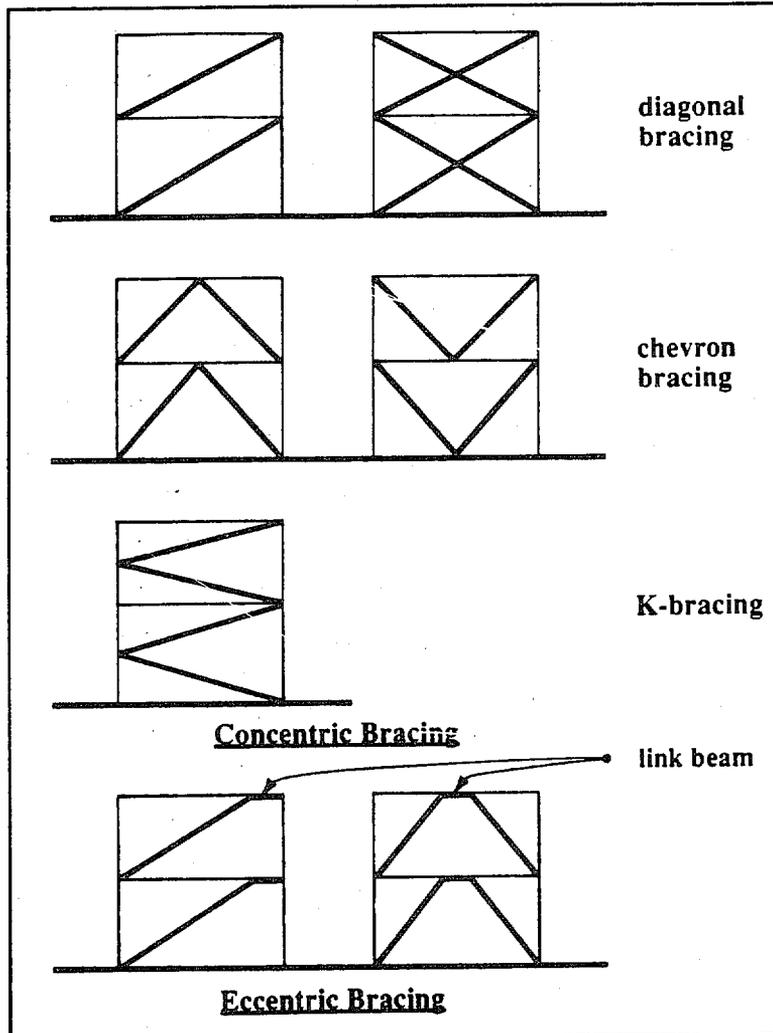


FIGURE 3.3 Bracing types.

K-bracing has undesirable performance characteristics for seismic loads in that buckling of the compression brace results in an unbalanced horizontal force on the column from the remaining tension brace. Some building codes permit K-bracing only in low seismic zones where there is only a small probability of exceedance for the design seismic forces. In the higher seismic zones, these braces should be removed and the system modified to one of the other bracing configurations; further, this should be done in all other seismic zones if at all possible. Chevron bracing has similar characteristics in that buckling of one brace in compression results in an unbalanced tensile force from the remaining brace. With chevron bracing, the unbalanced force occurs on the beam rather than the column. Nonetheless, the unbalanced tensile brace reaction should be considered in the rehabilitation, particularly in the case of the inverted V configuration in which the unbalanced force is additive to the gravity loads supported by the beam. Braced frames are typically of steel construction, however, concrete braced frames are occasionally constructed.

3.3.1 STEEL CONCENTRICALLY BRACED FRAMES

3.3.1.1 Deficiencies

The principal deficiencies of steel concentrically braced frames are:

- Inadequate lateral force capacity of the bracing system governed by buckling of the compression brace,
- Inadequate capacity of the brace connection,

*The American Institute of Steel Construction has written a minority opinion regarding this sentence; see page 193.

- Inadequate axial load capacity in the columns or beams of the bracing system, and
- Brace configuration that results in unbalanced tensile forces, causing bending in the beam or column when the compression brace buckles.

3.3.1.2 Strengthening Techniques for Inadequate Brace Capacity

Techniques. Deficient brace compression capacity can be improved by:

1. Increasing the capacity of the braces by adding new members thus increasing the area and reducing the radius of gyration of the braces.
2. Increasing the capacity of the member by reducing the unbraced length of the existing member by providing secondary bracing.
3. Providing greater capacity by removing and replacing the existing members with new members of greater capacity (Figure 3.3.1.2).
4. Reducing the loads on the braces by providing supplemental vertical-resisting elements (i.e., shear walls, bracing, or eccentric bracing) as discussed in Sec. 3.4.

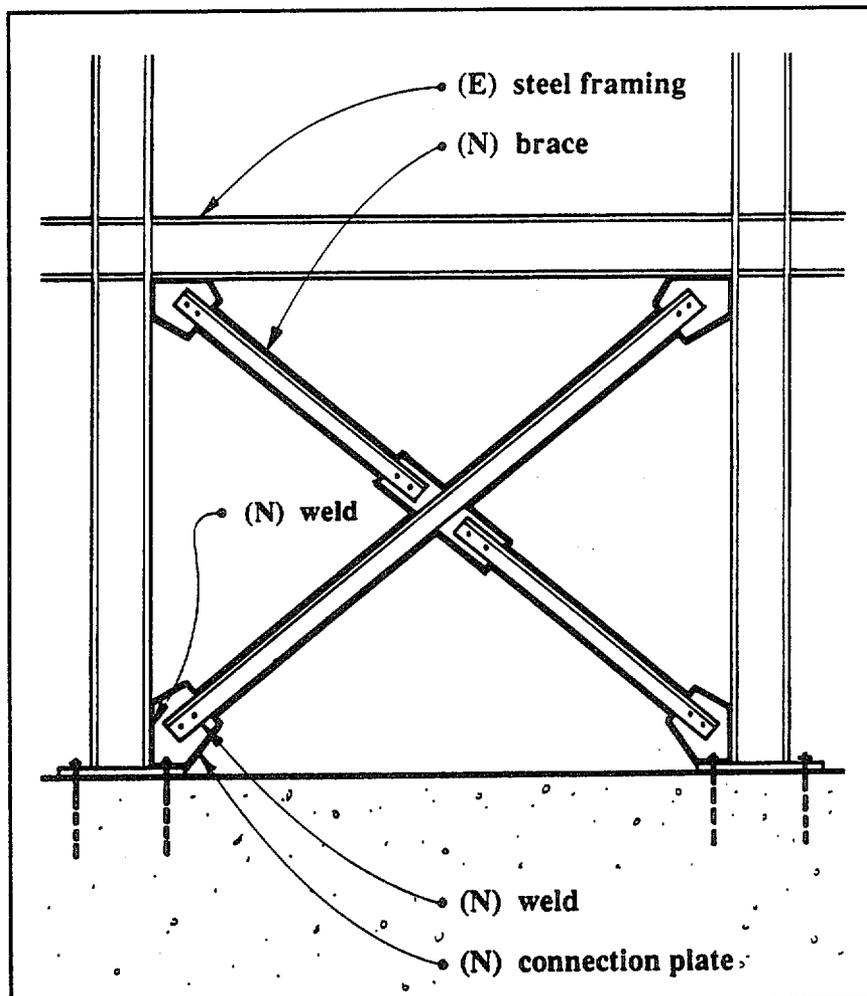


FIGURE 3.3.1.2 Addition to or replacement of an existing X-brace.

Relative Merits. A brace member is designed to resist both tension and compression forces, but its capacity for compression stresses is limited by potential buckling and is therefore less than the capacity for tensile stresses. Since the design of the system generally is based on the compression capacity of the brace, some additional capacity may be obtained by simply reducing the unsupported length of the brace by means of secondary bracing (Technique 3) provided the connections have adequate reserve capacity or can be strengthened for the additional loads.

If significant additional bracing capacity is required, it will be necessary to consider strengthening (Technique 1) or replacement (Technique 3) of the brace. Single-angle bracing can be doubled; double-angle bracing can be "starred"; channels can be doubled; and other rolled sections can be cover plated. New sections should be designed to be compact if possible since they will perform with significantly more ductility than noncompact sections. These modifications probably will require strengthening or redesign of the connections. The other members of the bracing system (i.e., columns and beams) must be checked for adequacy with the new bracing loads. Strengthening of existing K- or chevron bracing should be undertaken only after careful evaluation of the additional bending forces following the buckling of the compression bracing. Where the existing bracing in these systems is found to have inadequate capacity, the preferred solution is to replace it with a diagonal or cross-bracing configuration.

It usually is a good idea to limit the strengthening of the existing bracing to the capacity of the other members of the bracing system and the foundations and to provide additional bracing if required. An alternative would be to provide new shear walls or eccentric bracing. Construction of supplemental shear walls may be disruptive and probably will require new foundations. The greater rigidity of the shear walls as compared with that of the bracing also may tend to make the existing bracing relatively ineffective. The rigidity of eccentric bracing, however, can be "tuned" to be compatible with that of the existing concentric bracing, but the advantages of the eccentric bracing may be offset by its greater construction cost. Thus, strengthening the existing bracing or providing additional concentric bracing are considered to be the most cost-effective alternatives.

3.3.13 Strengthening Techniques for Inadequate Capacity of the Brace Connection

Techniques. Deficient brace connection capacity can be improved by:

1. Increasing the capacity of the connections by additional bolting or welding.
2. Increasing the capacity of the connections by removing and replacing the connection with members of greater capacity.
3. Reducing the loads on the braces and their connections by providing supplemental vertical-resisting elements (i.e., shear walls, bracing, or eccentric bracing) as discussed in Sec. 3.4.

Relative Merits. Adequate capacity of brace connections is essential to the proper performance of the brace. The capacity of the brace is limited by its compression capacity and the connection may have been designed for this load. When the brace is loaded in tension, however, the brace may transmit significantly higher forces to the connection. If the existing connection members (e.g., gusset plates) have sufficient capacity, the most economical alternative may be to increase the existing connection capacity by providing additional welding or bolts. If the existing gusset plates have inadequate capacity, the existing configuration and accessibility need to be assessed to determine whether adding supplemental connecting members or replacing the existing connecting members with members of greater capacity (Technique 3) is more economical. If the existing brace members require strengthening or replacement with members of greater capacity, it is probable that new connections would be the most cost-effective alternative.

Whether Technique 1 (reducing loads by adding supplemental members) is a cost-effective alternative is most likely to be a consideration when assessing the capacities of the braces, not the brace connections. The merits of this alternative are discussed above.

3.3.1.4 Strengthening Techniques for Inadequate Axial Load Capacity in the Columns or Beams of the Bracing System

Techniques. Deficient axial load capacity of existing bracing system columns and beams can be improved by:

1. Providing additional axial load capacity by adding cover plates to the member flanges or by boxing the flanges.
2. Providing additional axial load capacity by jacketing the existing members with reinforced concrete.
3. Reducing the loads on the beams and columns by providing supplemental vertical-resisting elements (i.e., shear walls, bracing, or eccentric bracing) as discussed in Sec. 3.4.

Relative Merits. The most cost-effective alternative for increasing the capacity of the existing beams and columns in a concentrically braced frame system is to add cover plates to or box the flanges (Technique 1). The effort involved in adding cover and box plates includes removing the existing fireproofing and nonstructural obstructions. Jacketing of existing members with reinforced concrete (Technique 2) would seldom be cost-effective due to the significant forming effort required. The relative merits of reducing the loads by providing supplemental members is discussed in Sec. 3.3.1.2.

3.3.2 ROD OR OTHER TENSION BRACING

3.3.2.1 Deficiencies

The principal deficiencies of rod or other tension bracing systems are:

- Inadequate tension capacity of the rod, tensile member, or its connection and
- Inadequate axial capacity of the beams or columns in the bracing system.

3.3.2.2 Strengthening Techniques for Tension Capacity

Techniques. Deficient tension capacity of the rod or other tension member and its connection can be improved by:

1. Increasing the capacity by strengthening the existing tension members.
2. Increasing the capacity by removing the existing tension members and replacing with new members of greater capacity.
3. Increasing the capacity by removing the existing tension member and replacing it with diagonal or X-bracing capable of resisting compression as well as tension forces.
4. Reducing the forces on the existing tension members by providing supplemental vertical-resisting elements (i.e., additional tension rods) as discussed in Sec. 3.4.

Relative Merits. Tension bracing is commonly found in light industrial steel frame buildings including some designed for prefabrication. The most common deficiency is inadequate tensile capacity in the tension rods. These rods generally are furnished with upset ends so that the effective area is in the body of the rod rather than at the root of the threads in the connection. It therefore is rarely feasible to strengthen a deficient rod (Technique 1); hence, correction of the deficiency likely will require removal and replacement with larger rods (Technique 2), removal of existing tension bracing and replacement with new bracing capable of resisting tension

and compression (Technique 3), or installation of additional bracing (Technique 4). When replacing existing tension braces with new braces capable of resisting tension and compression it is good practice to balance the members (i.e., design the system such that approximately the same number of members act in tension as in compression). Increasing the size of the bracing probably will require strengthening of the existing connection details and also will be limited by the capacity of the other members of the bracing system or the foundations as discussed above for ordinary concentric bracing. The effectiveness of replacing the tension bracing with members capable of resisting compression forces depends on the length of the members and the need for secondary members to reduce the unbraced lengths. Secondary members may interfere with existing window or door openings. The most cost-effective technique for correction of the deficiency probably will be to provide additional bracing (Technique 4) unless functional or other nonstructural considerations (e.g., obstruction of existing window or door openings) preclude the addition of new bracing.

3.3.2.3 Strengthening Techniques for Beam or Column Capacity

Techniques. Deficient axial capacity of the beams or columns of the bracing systems can be improved by:

1. Increasing the axial capacity by adding cover plates to or by boxing the existing flanges.
2. Reducing the forces on the existing columns or beams by providing supplemental vertical-resisting elements (i.e., braced frames or shear walls) as discussed in Sec. 3.4.

Relative Merits. Reinforcing the existing beams or columns with cover plates or boxing the flanges generally is the most cost-effective alternative. If supplemental braces or shear walls are required to reduce stresses in other structural components such as the tension rods or the diaphragm, the addition of supplemental vertical-resisting elements may be a viable alternative.

3.3.3 ECCENTRIC BRACING

3.3.3.1 Deficiency

The primary deficiency of an eccentrically braced frame system is likely to be nonconformance with current design standards because design standards for such elements did not exist earlier than about 1980. Eccentric bracing in older buildings may not have the desired degree of ductility.

3.3.3.2 Strengthening Techniques for Eccentric Braced Frames

Techniques. An existing eccentrically braced frame system can be brought into conformance with current design standards by ensuring that the system is balanced (i.e., there is a link beam at one end of each brace), the brace and the connections are designed to develop shear or flexural yielding in the link, the connection is a full moment connection where the link beam has an end at a column, and lateral bracing is provided to prevent out-of-plane beam displacements that would compromise the intended action. Alternatively, the loads on the existing eccentrically braced frame can be reduced by providing supplemental vertical-resisting elements such as additional eccentrically braced frames.

Relative Merits. The use of engineered eccentric bracing is a relatively recent innovation (within about 10 years) that can provide the rigidity associated with concentric bracing as well as the ductility associated with moment frames. The recommended design of these frames precludes compressive buckling of the brace members by shear yielding of a short portion of the horizontal beam (the link beam). If the brace is in a diagonal configuration, the yielding occurs in the horizontal beam between the brace connection and the adjacent column; if it is in a chevron configuration, the yielding occurs in the beam between the two brace connections.

Because this system is relatively new, a deficiency in the lateral load capacity reflects either improper design or upgraded design criteria. A properly designed eccentric bracing system balances the yield capacity of the horizontal link beam against the buckling capacity of the brace beam. It usually is not cost-effective to strengthen the members of this bracing system unless it is necessary to correct a design defect (e.g, if the brace has been over designed, the shear capacity of the horizontal beam can be increased by adding doubler plates to the beam web provided other members of the system have adequate additional capacity). Usually it will be necessary to add additional bracing. It should be noted, however, that although eccentric bracing is a desirable supplement to an existing concentric bracing system, concentric bracing is not desirable as a supplement to an existing eccentric bracing system. The proper functioning of an eccentric bracing system requires inelastic deformations that are not compatible with concentric bracing; the introduction of a ductile element (eccentric bracing) into an existing "brittle" system (concentric bracing) is beneficial, but the reverse procedure is not the case. The addition of shear walls to an existing eccentric bracing system also is usually not effective because of their greater rigidity. Thus, the most cost-effective procedure for increasing the capacity of an existing eccentric bracing system probably will be to provide additional eccentric bracing.

3.4 VERTICAL-RESISTING ELEMENTS--ADDING SUPPLEMENTAL MEMBERS

The lateral seismic inertial forces of an existing building are transferred from the floors and roofs through the vertical-resisting elements (i.e., shear walls, braced frames and moment frames) to the foundations and into the ground. The forces in the individual shear walls, braced frames, and moment frames are a function of the weight and height of the building plus the number, size, and location of the elements. By adding new vertical elements to resist lateral forces, the forces in the existing elements will be modified and generally will be reduced. Thus, the addition of supplemental vertical elements that will resist lateral loads can be a means to correct existing elements that are overstressed. The purpose of this section is to discuss the benefits and the problems associated with adding supplemental vertical-resisting elements to an existing building so that comparisons with other rehabilitation techniques such as strengthening overstressed members or reducing demand can be placed in perspective. The two general categories of supplemental vertical-resisting elements are in-plane supplemental elements and new bay supplemental elements. The two categories are schematically portrayed in Figure 3.4.

The introduction of new in-plane supplemental elements into a building will primarily reduce the forces on the existing vertical elements in the plane where the new element is added. Forces on other vertical-resisting elements, diaphragms, and the connections between them will be modified to a lesser degree depending on the relative rigidities of the vertical elements and the diaphragms. All wood and some steel deck diaphragms may be considered "flexible" when used with masonry or concrete shear walls. Straight laid sheathing may be "flexible" with any type of construction, but plywood sheathed diaphragms may be considered rigid with wood frame walls or light steel frame construction. Where diaphragms are flexible, the addition of a supplemental vertical element in the plane of existing vertical elements will have essentially no effect on the forces in vertical elements located in other bays or on the diaphragms or the connections between the diaphragms and the vertical-resisting elements.

On the other hand, the introduction of new vertical bay supplemental elements, will reduce the forces on all the elements--existing vertical elements, diaphragms, foundations, and the connections between them. The reduction in forces will be proportional to the relative rigidity of the vertical elements when the building has a rigid diaphragm and will be proportional to the tributary areas associated with the vertical-resisting elements when the building has a flexible diaphragm.

The effect of adding in-plane supplemental elements or new bay supplemental elements on the lateral-force distribution of an existing building needs to be evaluated when considering whether to add new vertical elements or to strengthen existing members to reduce demand on bracing elements.

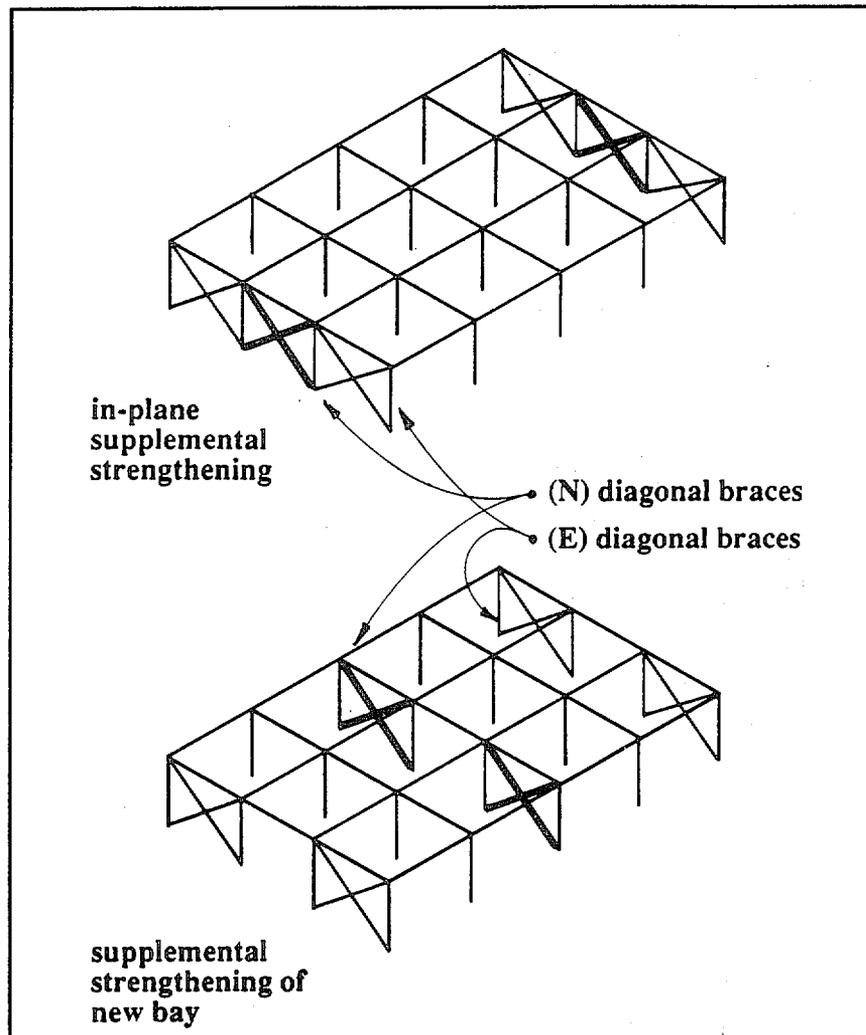


FIGURE 3.4 Examples of supplementary strengthening.

3.4.1 RELATIVE COMPATIBILITY

The effectiveness of supplemental vertical-resisting elements in reducing forces on overstressed components is dependent on the stiffness, strength, and ductility compatibility of the existing vertical-resisting elements relative to the new vertical elements.

Stiffness compatibility is particularly important. A moment frame, for example, is relatively flexible in the lateral direction. New supplemental moment frames, shear walls, or braced frames can be added to an existing moment frame structure. The loads that will be transferred to the supplemental elements will be in proportion to their relative stiffness (for a rigid diaphragm) and, therefore, a shear wall or braced frame added to a moment frame structure will resist a significant portion of the lateral load. If the existing vertical-resisting elements are concrete shear walls, supplemental moment frames generally would be ineffective because of the large degree of wall stiffness.

Structures responding to large earthquakes will behave inelastically, hence the sequence in which different elements yield and the ability of the elements to continue to function in the post yield condition (i.e., their ductility) will affect the dynamic response of the structure. Weaker elements that yield become more flexible resulting in a redistribution of forces. Ductile elements will continue to participate in absorbing energy and resisting forces after yielding. Structures with elements having compatible strengths and ductility will behave better and more predictably than structures with elements of different strength and ductility.

3.4.2 EXTERIOR SUPPLEMENTAL ELEMENTS

The construction of exterior supplemental moment frames, shear walls, or braced frames has many advantages. Exterior elements can be as effective in reducing loads on other elements as interior elements; yet, construction may be significantly less costly and access for equipment and materials will be significantly easier than for interior construction. Perhaps the single biggest advantage of exterior supplemental elements is that disruption of the functional use of the interior of the building will be minimized both during and after construction. Figure 3.4.2 shows the addition of an exterior supplemental concrete shear wall to an existing concrete or masonry building. Steel structures also can be used as buttresses.

There are, however, inherent problems in constructing supplemental exterior shear walls, braced frames, and moment frames. Many buildings do not have the necessary space to accommodate exterior structures due to the location of adjacent buildings or property lines. New exterior elements also may significantly affect the architectural aesthetics of the exterior of the building.

Supplemental elements generally will require a significant capacity to resist overturning forces. Elements away from the building (e.g., the end of a buttress wall) will not be able to mobilize the dead weight of the building to resist the overturning forces, and significant uplift capacity therefore may be required in the new foundation.

The construction of exterior elements also does not preclude the need for interior construction. A load path must be provided to transfer forces from the existing building elements to the new external vertical-resisting elements. This usually necessitates the construction of collectors on the interior of the building.

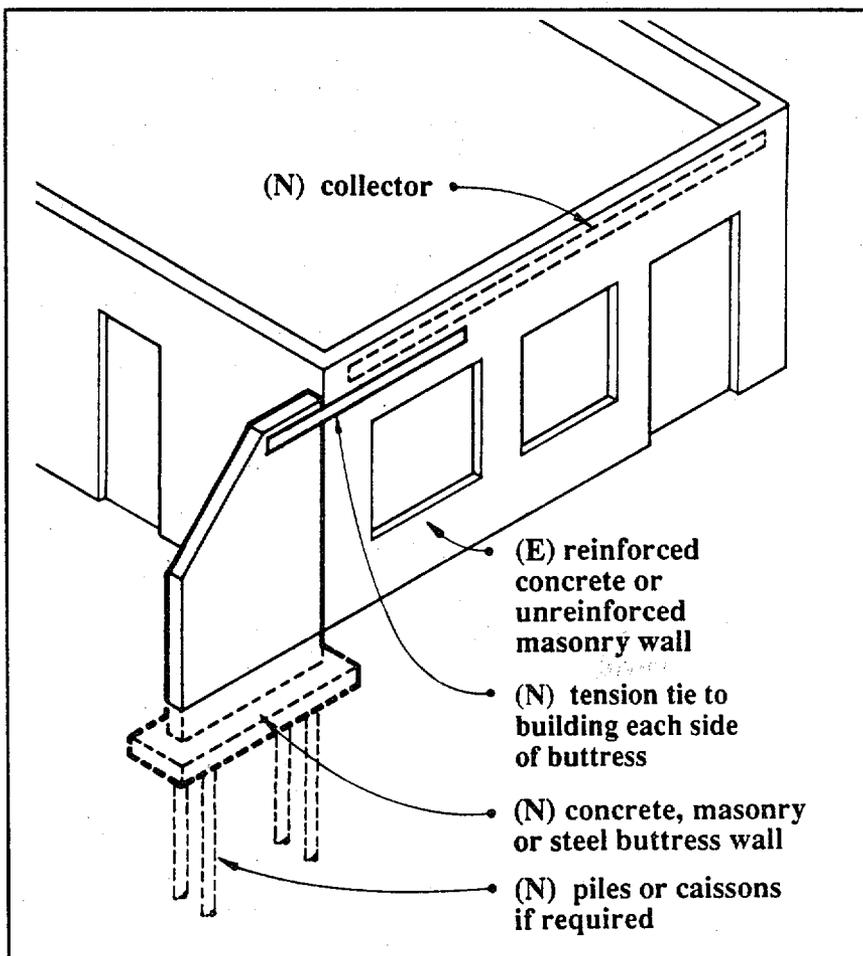


FIGURE 3.4.2 Example of supplemental in-plane strengthening by the addition of an external buttress.

3.4.3 INTERIOR SUPPLEMENTAL ELEMENTS

The construction of interior supplemental moment frames, shear walls, or braced frames will involve significant disruption of the functional operation of the building. Existing architectural coverings will need to be removed and new foundations constructed along with the new frame or wall and necessary collectors. It usually is desirable to locate new walls or frames along existing framing lines (i.e., framing into existing columns and beams) in order to provide boundary members, collectors, and dead load to help resist overturning forces while taking advantage of existing column foundations. Figure 3.4.3 shows the addition of a supplemental reinforced concrete shear wall on the interior of an existing concrete building. It should be noted that all concrete pours are subject to consolidation and shrinkage and, in this detail, the concrete may sag away from the underside of

the concrete slab. This condition may be improved with proper mix design for low shrinkage or, alternatively, the lower wall can be made in two pours 48 hours apart. The initial pour would be up to about 18 inches from the slab soffit to allow sufficient space to form shear keys and to clean and prepare the surface for the following pour to the top of the slab.

Functional considerations likely will dictate the location of interior supplemental elements. This is particularly the case with shear walls or braced frames that will significantly break up the interior space.

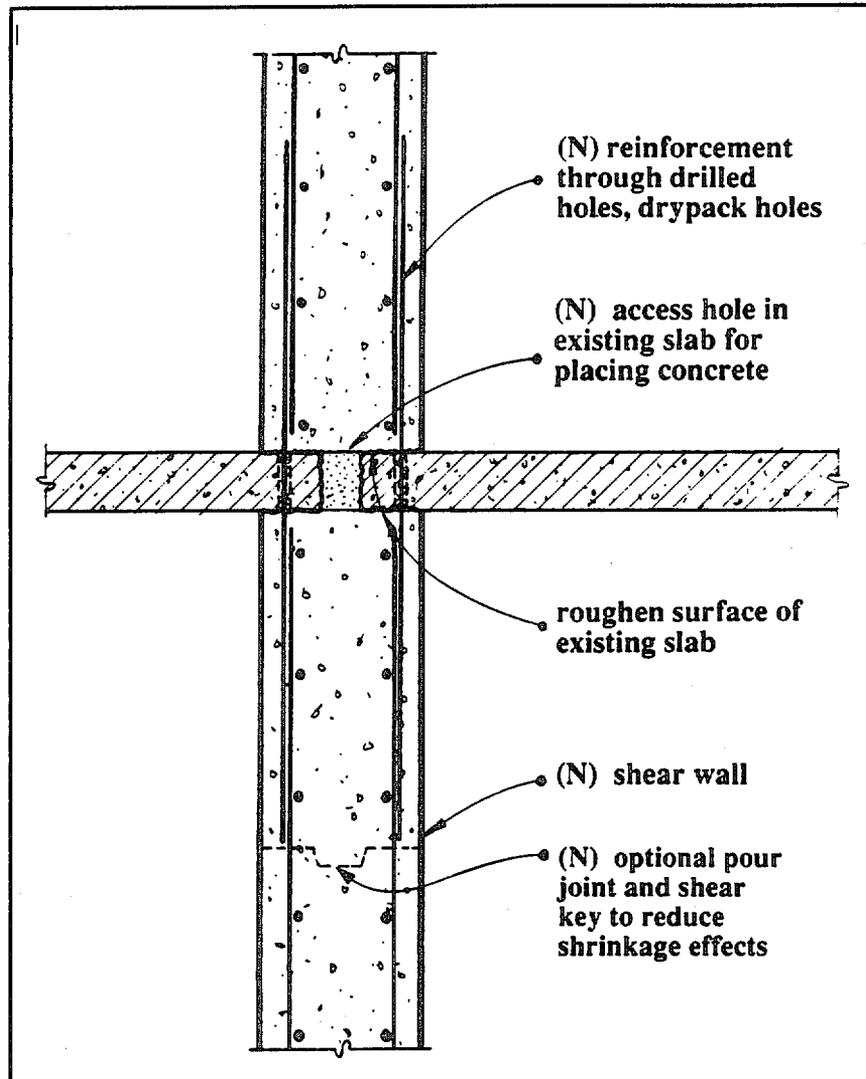


FIGURE 3.4.3 Connection of a supplemental interior shear wall.

3.5 DIAPHRAGMS

Diaphragms are horizontal subsystems that transmit lateral forces to the vertical-resisting elements. Diaphragms typically consist of the floors and roofs of a building. In this handbook, the term "diaphragm" also includes horizontal bracing systems. There are five principal types of diaphragms: timber diaphragms, concrete diaphragms, precast concrete diaphragms, steel decking diaphragms, and horizontal steel bracing.

Inadequate chord capacity is listed as a deficiency for most types of diaphragms. Theoretical studies, testing of diaphragms, and observation of earthquake-caused building damage and failures provide evidence that the commonly used method of determining diaphragm chord force (i.e., comparing the diaphragm to a flanged beam

and dividing the diaphragm moment by its depth) may lead to exaggerated chord forces and, thus, overemphasize the need for providing an "adequate" boundary chord. Before embarking on the repair of existing chord members or the addition of new ones, the need for such action should be considered carefully with particular attention to whether the beam analogy is valid for calculating chord forces in the diaphragm under consideration.

Since few diaphragms have span-depth ratios such that bending theory is applicable, the capacity of the diaphragm to resist the tensile component of shear stress could be compared with tensile stresses derived from deep beam theory. In analyzing diaphragms by beam theory, chords provided by members outside of the diaphragms but connected to their edges may be considered and may satisfy the chord requirement.

3.5.1 TIMBER DIAPHRAGMS

3.5.1.1 Deficiencies

Timber diaphragms can be composed of straight laid or diagonal sheathing or plywood. The principal deficiencies in the seismic capacities of timber diaphragms are:

- Inadequate shear capacity of the diaphragm,
- Inadequate chord capacity of the diaphragm,
- Excessive shear stresses at diaphragm openings or at plan irregularities, and
- Inadequate stiffness of the diaphragm resulting in excessive diaphragm deformations.

3.5.1.2 Strengthening Techniques for Inadequate Shear Capacity

Techniques. Deficient shear capacity of existing timber diaphragms can be improved by:

1. Increasing the capacity of the existing timber diaphragm by providing additional nails or staples with due regard for wood splitting problems.
2. Increasing the capacity of the existing timber diaphragm by means of a new plywood overlay.
3. Reducing the diaphragm span through the addition of supplemental vertical-resisting elements (i.e., shear wall or braced frames) as discussed in Sec. 3.4.

Relative Merits. Adding nails and applying a plywood overlay (Techniques 1 and 2) require removal and replacement of the existing floor or roof finishes as well as removal of existing partitioning, but they generally are less expensive than adding new walls or vertical bracing (Technique 3). If the existing system consists of straight laid or diagonal sheathing, the most effective alternative is to add a new layer of plywood since additional nailing typically is not feasible because of limited spacing and edge distance. Additional nailing usually is the least expensive alternative, but the additional capacity is still limited to the number and capacity of the additional nails that can be driven (i.e., with minimum allowable end distance, edge distance, and spacing).

The additional capacity that can be developed by plywood overlays usually depends on the capacity of the underlying boards or plywood sheets to develop the capacity of the nails from the new overlay. Higher shear values are allowed for plywood overlay when adequate nailing and blocking (i.e., members with at least 2 inches of nominal thickness) can be provided at all edges where the plywood sheets abut. Adequate additional capacity for most timber diaphragms can be developed using this technique unless unusually large shears need to be resisted. When nailing into existing boards, care must be taken to avoid splitting. If boards are prone to splitting, pre-drilling may be necessary.

The addition of shear walls or vertical bracing in the interior of a building may be an economical alternative to strengthening the diaphragms particularly if the additional elements can be added without the need to

strengthen the existing foundation. The alternative methodology described in Sec. 3.2.3.3 emphasizes control of the existing diaphragm response by cross walls or shear walls rather than by strengthening and, in that methodology, the shear transmitted to the in-plane walls is limited by the strength of the diaphragm. Although the methodology was developed for buildings with unreinforced masonry walls and flexible timber diaphragms, the above diaphragm provisions are considered to be generally applicable for timber diaphragms in buildings with other relatively rigid wall systems. When additional bracing or interior shear walls are required, relative economy depends on the degree to which ongoing operations can be isolated by dust and noise barriers and on the need for additional foundations.

3.5.1.3 Strengthening Techniques for Inadequate Chord Capacity

Techniques. Deficient diaphragm chord capacity can be improved by:

1. Providing adequately nailed or bolted continuity splices along joists or fascia parallel to the chord (Figure 3.5.1.3).
2. Providing a new continuous steel chord member along the top of the diaphragm.
3. Reducing the stresses on the existing chords by reducing the diaphragm's span through the addition of new shear walls or braced frames as discussed in Sec. 3.4.

Relative Merits. Wood diaphragms typically are constructed with minimal capacity to resist chord forces. Bottom wall plates nailed into the plywood are not spliced but butted; hence, the chord capacity provided at the bottom plate joints will be minimal. If the nailing between the bottom plate and the plywood is sufficient to transfer chord forces, splicing the top plate can be a means to provide this chord capacity. Steel straps can be nailed across the butted joint to provide this splice capacity, but notching of the bottom of some of the wood studs may be necessary to install the splice plates.

Another alternative is to utilize the double top plates on the wall below the diaphragm as the chord member. The double top plates typically are lapped and nailed. With sufficient lap nailing, the chord capacity of one plate can be developed if an adequate path for shear transfer is provided between the diaphragm and the top plates. This load path can be provided by nailing such as that shown in Figure 3.5.1.3. New or existing nailing needs to be verified or provided between the diaphragm sheathing, the edge blocking, the exterior sheathing, and the top plates.

Simplified calculations to determine stresses in diaphragm chords conservatively consider the diaphragm as a horizontal beam and ignore the flexural capacity of the web of the diaphragm as well as the effect of the out-of-plane shear walls that reduce the chord stresses. However, even though the chord requirements in some buildings may be overstated, in most buildings a continuous structural element is required at diaphragm boundaries to collect the diaphragm shears and transfer them to the individual resisting shear walls along each boundary (see Sec. 3.7.1).

A continuous steel member along the top of the diaphragm may be provided to function as a chord or collector member. For existing timber diaphragms at masonry or concrete walls, the new steel members may be used to provide wall anchorage as indicated in Figure 3.7.1.4b as well as a chord or collector member for the diaphragm shear forces.

The lack of adequate chord capacity is seldom the reason why new shear walls or braced frames (Technique 3) would be considered to reduce the diaphragm loads. Reducing the diaphragm span and loads through the introduction of new vertical-resisting elements, however, may be considered to address other member deficiencies and, if so, the chord inadequacy problem also may be resolved.

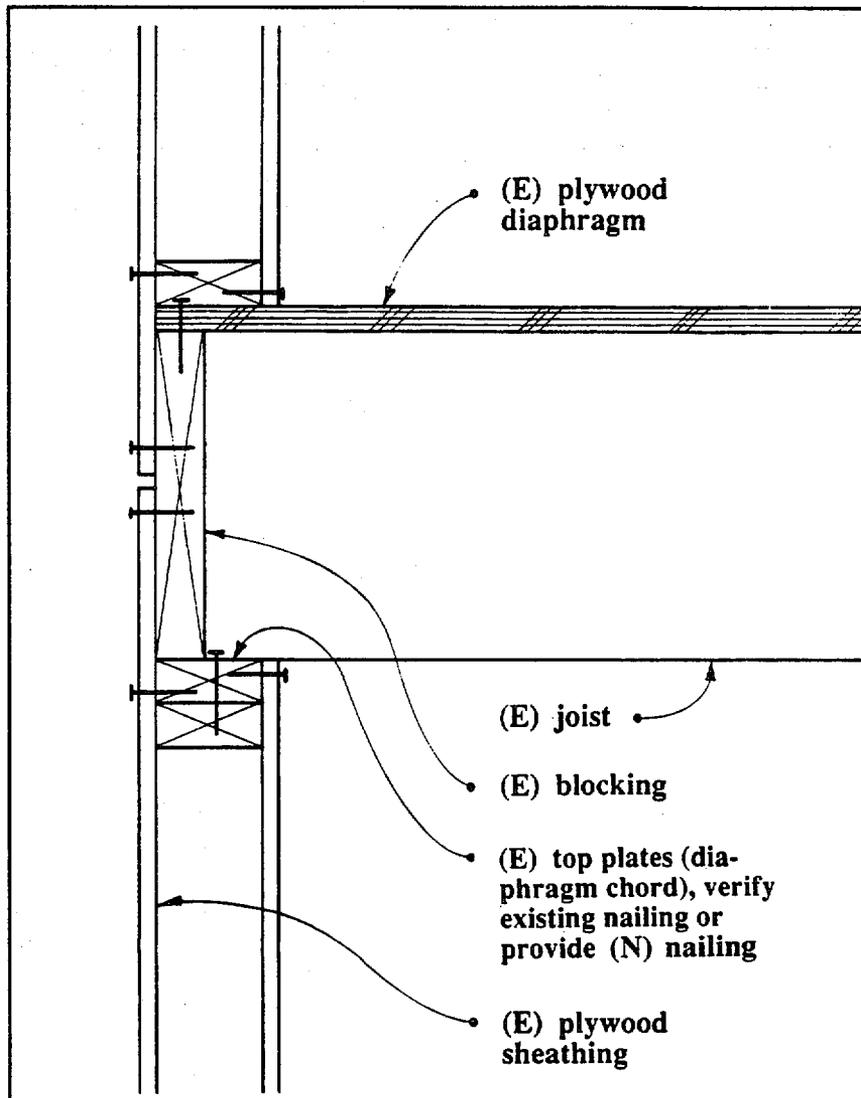


FIGURE 3.5.1.3 Exterior sheathing and top plate chord in a wood frame building.

3.5.1.4 Strengthening Techniques for Excessive Shear Stresses at Openings or Plan Irregularities

Techniques. Excessive shear stresses at diaphragm openings or other plan irregularities can be improved by:

1. Reducing the local stresses by distributing the forces along the diaphragm by means of drag struts (Figures 3.5.1.4a and 3.5.1.4b).
2. Increasing the capacity of the diaphragm by overlaying the existing diaphragm with plywood and nailing the plywood through the sheathing at the perimeter of the sheets adjacent to the opening or irregularity.
3. Reducing the diaphragm stresses by reducing the diaphragm spans through the addition of supplemental shear walls or braced frames as discussed in Sec. 3.4.

Relative Merits. The most cost-effective way to reduce large local stresses at diaphragm openings or plan irregularities is to install drag struts (Figures 3.5.1.4a and 3.5.1.4b), to distribute the forces into the diaphragm

(Technique 1). Proper nailing of the diaphragm into the drag struts is required to ensure adequate distribution of forces. Local removal of roof or floor covering will be required to provide access for nailing.

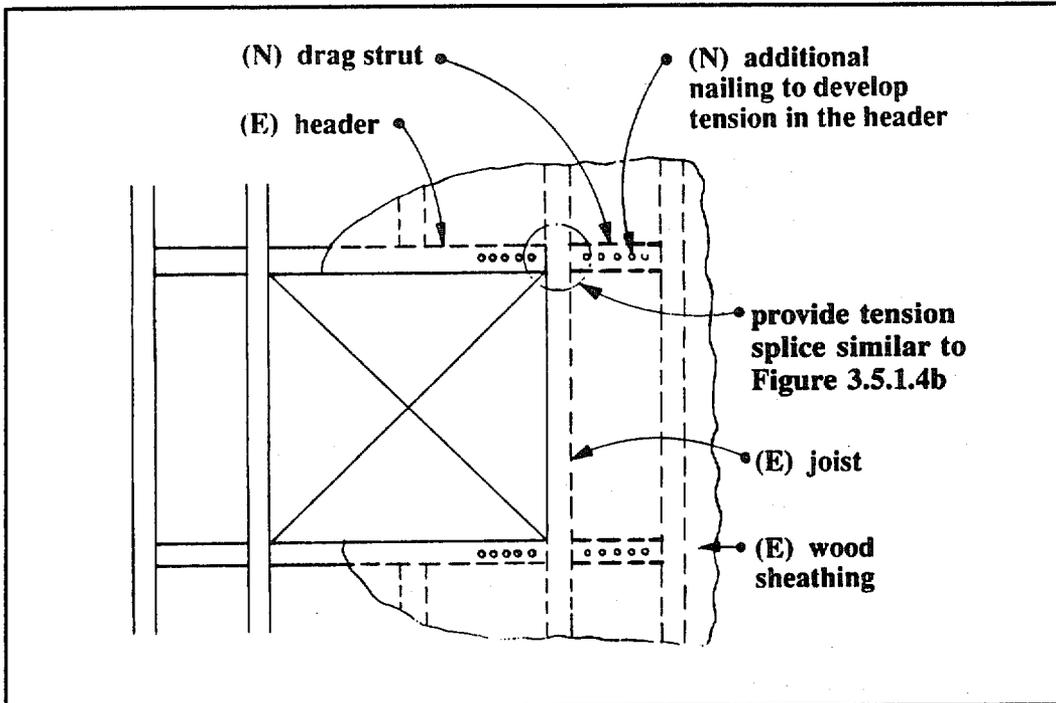


FIGURE 3.5.1.4a Reinforcement of an opening in an existing timber diaphragm.

The analysis for the design of the drag strut and the required additional nailing is similar to that for the reinforcement of an opening in the web of a steel plate girder. The opening divides the diaphragm into two parallel horizontal beams and the shear in each beam causes moment that induces tension or compression in the outer fibers of each beam. For small openings or low diaphragm shears, these bending forces may be adequately resisted as additional stresses in an existing diaphragm. For larger openings and/or larger diaphragms, tension or compression "flanges" may have to be developed at the opening. In a timber diaphragm, these "flanges" may be assumed to be the joists or headers that frame the opening, but to preclude distress due to stress concentration at the corners, the joists or headers must be continuous beyond the edge of the opening in order to transfer the flange forces back into the diaphragm by additional nailing.

Applying a plywood overlay (Technique 2) to increase the local diaphragm capacity or providing supplemental vertical-resisting elements (Technique 3) to reduce the local stresses generally will be viable alternatives only if they are being considered to correct other structural deficiencies.

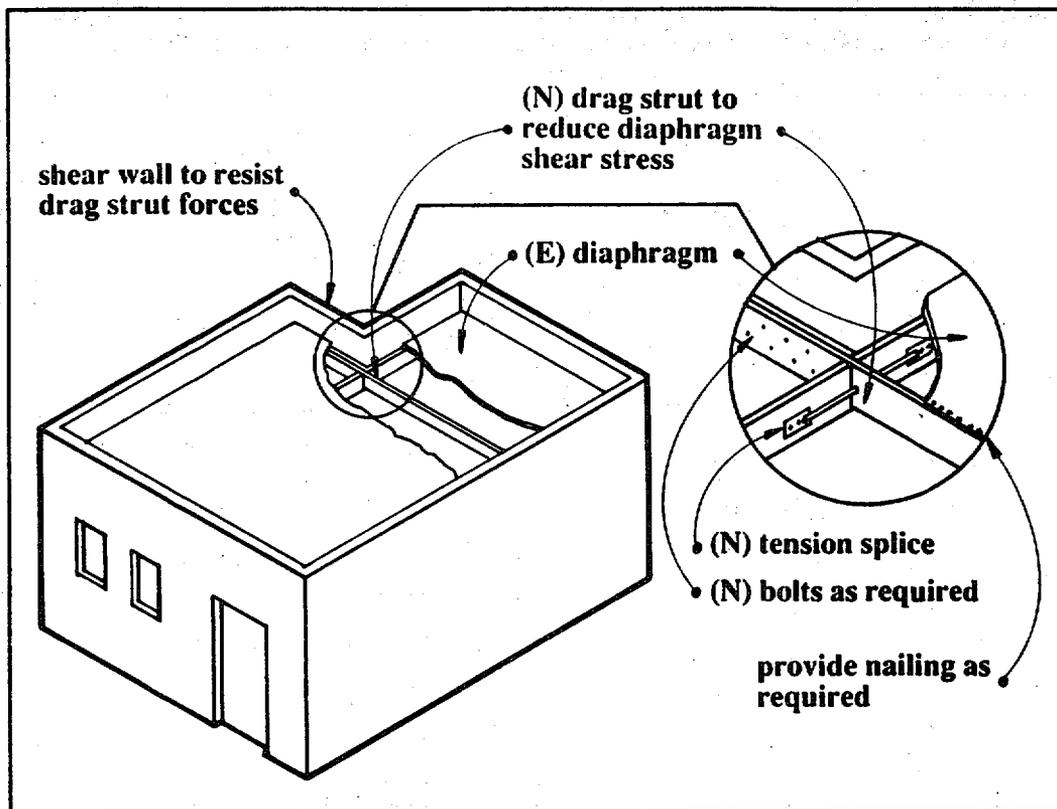


FIGURE 3.5.1.4b New drag strut in an existing wood diaphragm.

3.5.1.5 Strengthening Techniques for Inadequate Stiffness

Techniques. Excessive seismic displacement of an existing timber diaphragm can be prevented by:

1. Increasing the stiffness of the diaphragm by the addition of a new plywood overlay.
2. Reducing the diaphragm span and, hence, reducing the displacements by providing new supplemental vertical-resisting elements such as shear walls or braced frames as discussed in Sec. 3.4.

Relative Merits. The addition of new shear walls or braced frames (Technique 2) may be the most cost-effective alternative for reducing excessive displacements of plywood diaphragms (as is also the case for reducing excessive shear stresses as discussed above) if the additional elements can be added without strengthening the existing foundations and when the existing functional use of the building permits it.

The spacing of new vertical elements required to limit the deflection of straight or diagonal sheathing to prescribed limits may be too close to be feasible. In these cases, overlaying with plywood (Technique 1) may be the most cost-effective alternative. For timber diaphragms in buildings with rigid masonry or concrete walls, the alternative methodology described in Sec. 3.2.3.3 permits the use of sheathed timber cross walls to control the excessive displacements of an existing diaphragm as an alternative to strengthening.

3.5.2 CONCRETE DIAPHRAGMS

3.5.2.1 Deficiencies

The principal deficiencies of monolithic concrete diaphragms (i.e., reinforced concrete or post-tensioned concrete diaphragms) are:

- Inadequate in-plane shear capacity of the concrete diaphragm,
- Inadequate diaphragm chord capacity, and
- Excessive shear stresses at the diaphragm openings or plan irregularities.

3.5.2.2 Strengthening Techniques for Inadequate Shear Capacity

Techniques. Deficient in-plane shear capacity of monolithic concrete diaphragms can be improved by:

1. Increasing the shear capacity by overlaying the existing concrete diaphragm with a new reinforced concrete topping slab (Figure 3.5.2.2).
2. Reducing the shear in the existing concrete diaphragm by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

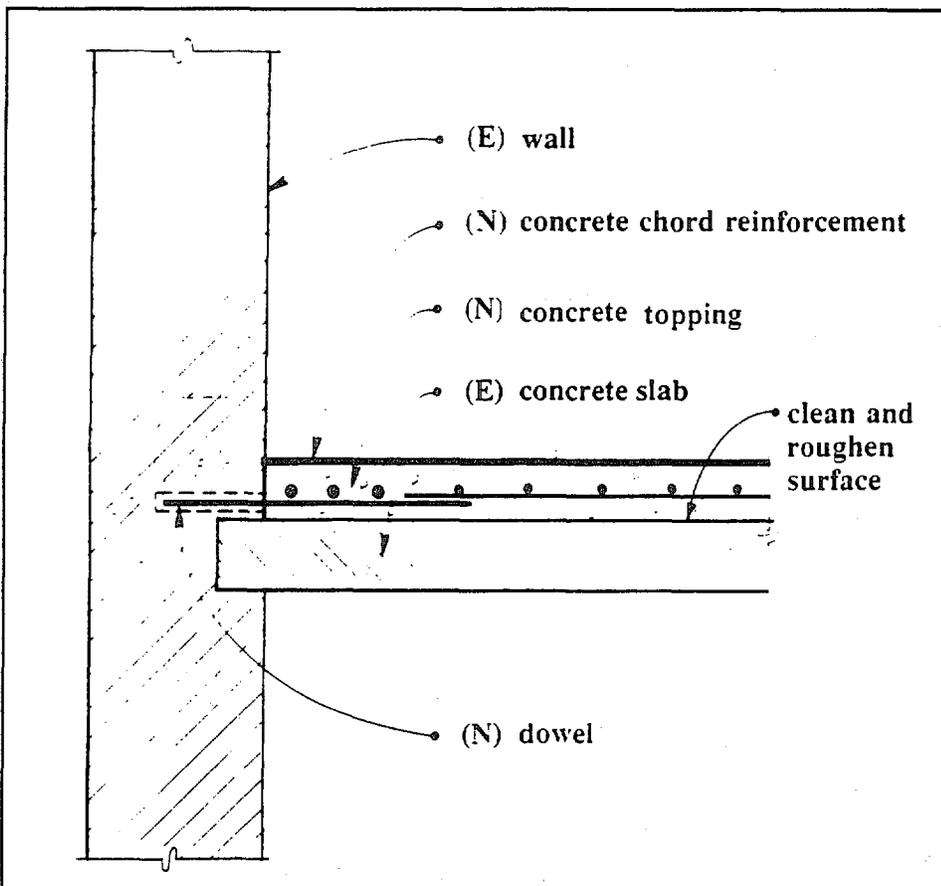


FIGURE 3.5.2.2 Strengthening an existing concrete diaphragm with a new topping slab and chord.

Relative Merits. Concrete diaphragms usually are strengthened with a concrete overlay. This will require removal and replacement of the existing partitions and floor finishes and will be disruptive to ongoing operations even though the work can be limited to one floor or a portion of a floor at a time. Adding the concrete overlay also will increase the dead weight of the structure; therefore, existing members, connections, and foundations must be checked to ensure that they are capable of resisting these added loads.

It may be possible to avoid strengthening a concrete diaphragm by providing additional shear walls or vertical bracing that will re-

duce the diaphragm shears. This alternative generally is more costly than the overlay, but it may be competitive when it can be restricted to the perimeter of the building and when minimal work is required on the foundations. For shear transfer, new reinforced concrete or masonry shear walls will require dowels grouted in holes drilled in the concrete diaphragms. When the concrete diaphragm is supported on steel framing, shear walls or vertical-bracing may be located under a supporting beam. Dowels or other connections for shear walls or bracing may be welded to the steel beam, but it also may be necessary to provide additional shear studs, welded to the steel

beam, in holes drilled in the diaphragm slab to facilitate the shear transfer from the concrete slab to the steel beam.

3.5.2.3 Strengthening Techniques for Inadequate Flexural Capacity

Techniques. Deficient flexural capacity in monolithic concrete diaphragms can be improved by:

1. Increasing the flexural capacity by removing the edge of the diaphragm slab and casting a new chord member integral with the slab (Figure 3.5.2.3).
2. Adding a new chord member by providing a new reinforced concrete or steel member above or below the slab and connecting the new member to the existing slab with drilled and grouted dowels or bolts as discussed in Sec. 3.5.4.3.
3. Reducing the existing flexural stresses by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

Relative Merits. If the existing concrete slab is supported on steel framing, the most cost-effective means of providing sufficient diaphragm chord capacity is to ensure adequate shear transfer of the diaphragm to the perimeter steel beam by adding drilled and grouted bolts and to ensure adequate strength and stiffness capacity of the perimeter beam connections. If a new chord is being secured with drilled and grouted anchors to an existing diaphragm containing prestressing strands, drilling must be done very carefully to ensure that the strands are not cut.

Figure 3.5.2.3 shows the provision of a new diaphragm chord and/or collector member as well as new dowels for wall anchorage or shear transfer from the existing concrete diaphragm. Because of the potential risk of gravity load failure at the interface with the existing slab, this detail is recommended only for one-way slabs in the direction parallel to the slab span. For other conditions, a detail using new concrete above or below the slab is recommended. Steel plates or shapes (as shown in Sec. 3.5.4.3) could be used with through bolts tightened to transfer load by friction.

Providing new structural steel or reinforced concrete elements to reinforce the existing diaphragm at the openings is similar to the analysis described in Sec. 3.5.1.4. The tensile or compressive stresses in the new elements at the opening must be developed by shear forces in the connection to the existing slab. The new ele-

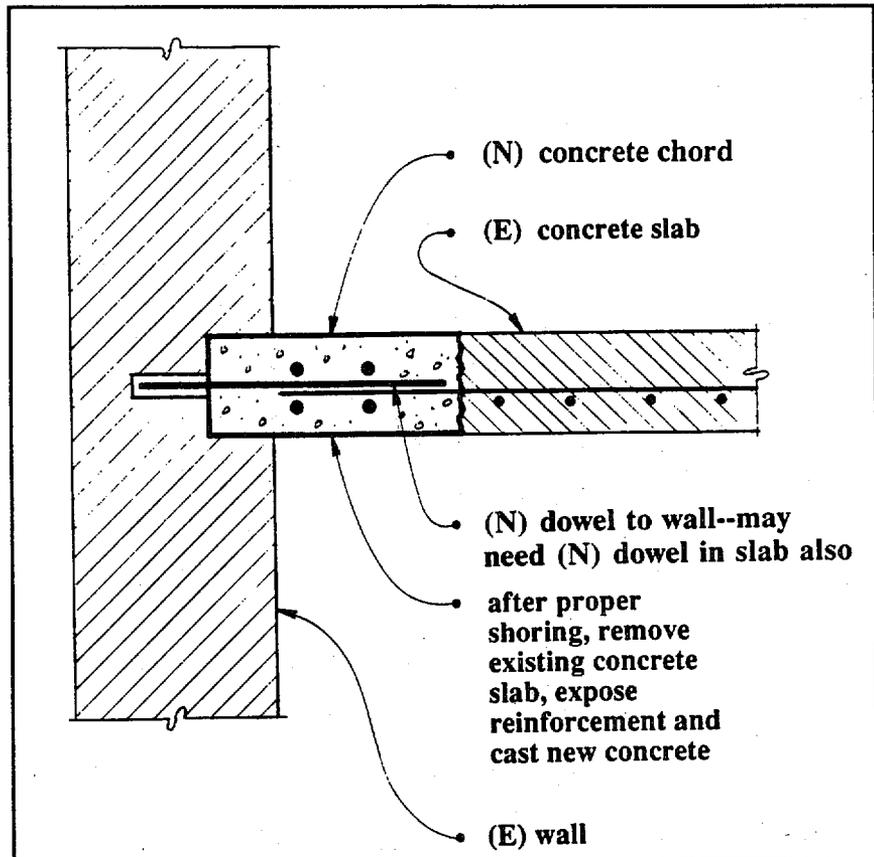


FIGURE 3.5.2.3 Adding a new chord member to an existing concrete diaphragm (not recommended for precast elements).

ments also must be extended beyond the opening a sufficient distance to transfer the tensile or compressive chord forces back into the existing slab in the same manner. Removing the stress concentration by filling in the opening (Technique 3) may be a feasible alternative provided that the functional requirements for the opening (e.g., stair or elevator shaft or utility trunk) no longer exist or it has been relocated.

3.5.2.4 Strengthening Techniques for Excessive Shear Stresses at Openings

Techniques. Deficient shear stress at diaphragm openings or plan irregularities in monolithic concrete slabs can be improved by:

1. Reducing the local stresses by distributing the forces along the diaphragm by means of structural steel (Figure 3.5.2.4a), or reinforced concrete elements cast beneath the slab and made integral through the use of drilled and grouted dowels.

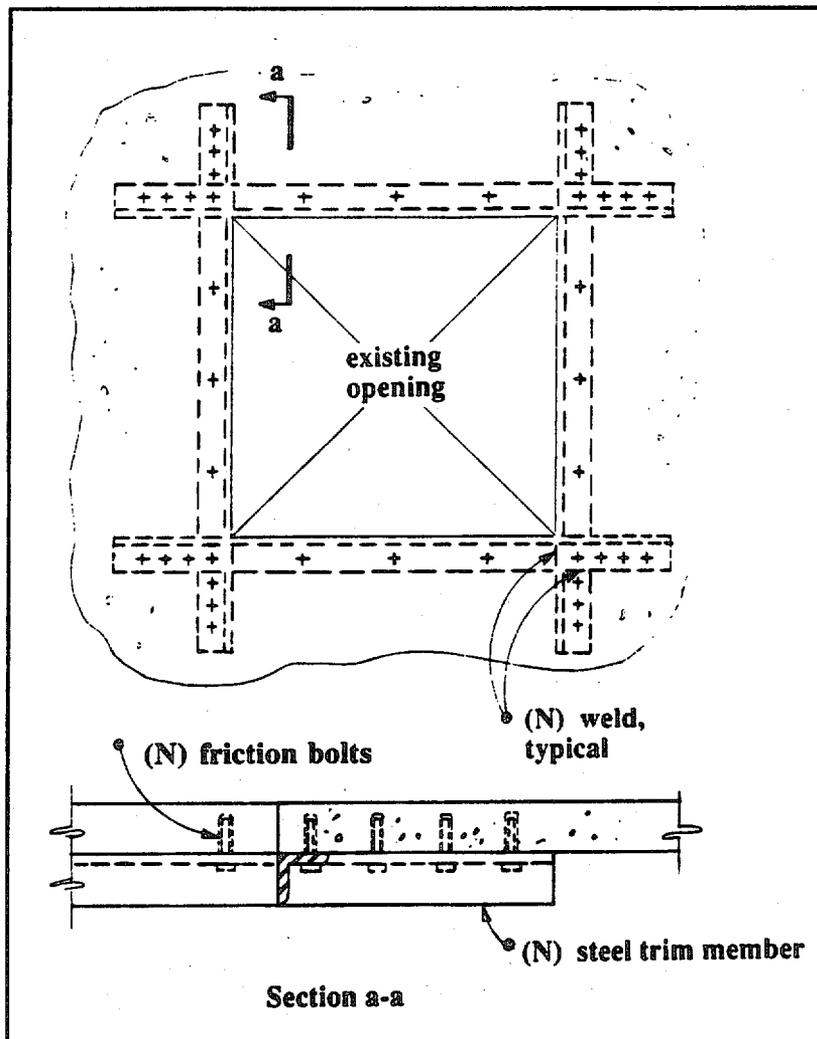


FIGURE 3.5.2.4a Reinforcement of an opening in an existing concrete diaphragm.

2. Increasing the capacity of the concrete by providing a new concrete topping slab in the vicinity of the opening and reinforcing with trim bars (Figure 3.5.2.4b).

3. Removing the stress concentration by filling in the diaphragm opening with reinforced concrete as indicated for shear walls in Figure 3.2.1.2b.
4. Reducing the shear stresses at the location of the openings by adding supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

Relative Merits. In existing reinforced concrete diaphragms with small openings or low diaphragm shear stress, the existing reinforcement may be adequate. If additional reinforcement is required, Technique 2 (i.e., new trim bars) probably will be the most cost-effective if a new topping slab is required to increase the overall diaphragm shear capacity.

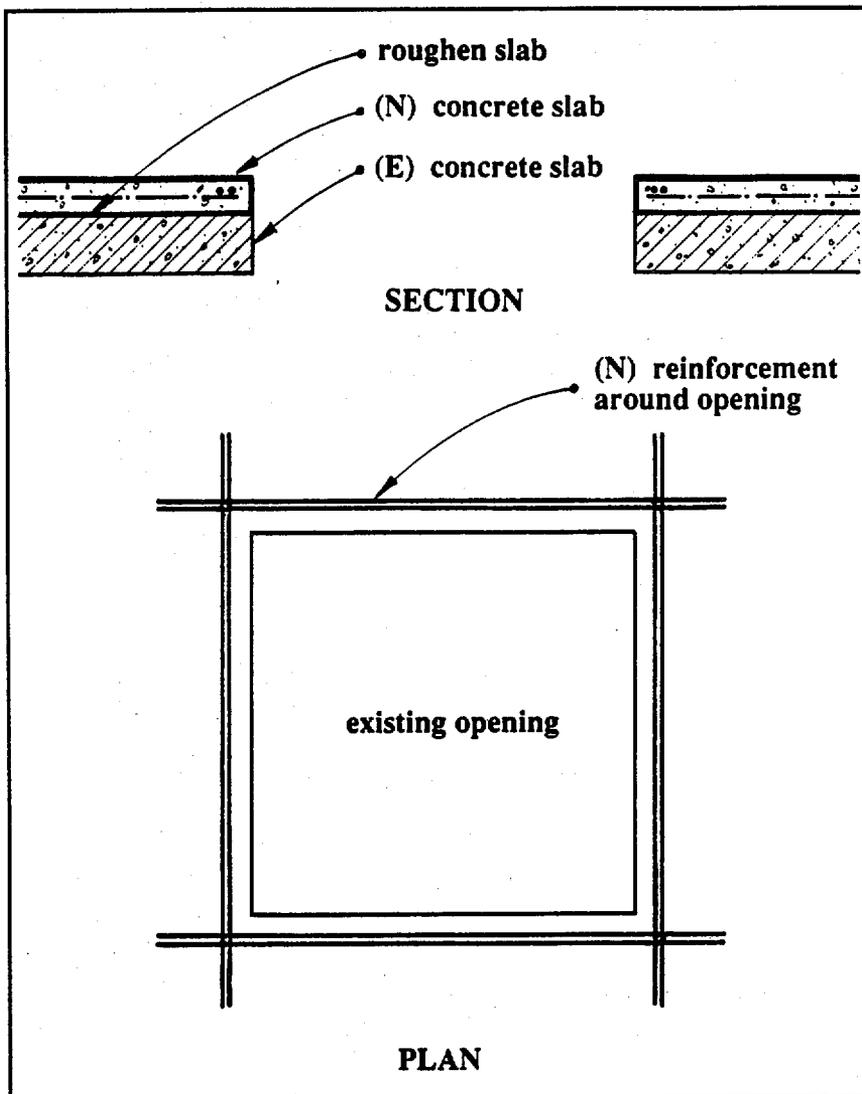


FIGURE 3.5.2.4b Strengthening openings in overlaid diaphragms.

3.5.3 POURED GYPSUM DIAPHRAGMS

3.5.3.1 Deficiencies

Poured gypsum diaphragms may be reinforced or unreinforced and may have the same deficiencies as monolithic concrete diaphragms (see Sec. 3.5.2.1.).

3.5.3.2 Strengthening Techniques for Poured Gypsum Diaphragms

Techniques. Strengthening techniques for deficiencies in poured gypsum diaphragms are similar to those listed for concrete diaphragms (see Sec. 3.5.2.2, 3.5.2.3, and 3.5.2.4); however, the addition of a new horizontal bracing system may be the most effective strengthening alternative.

Relative Merits. Poured gypsum has physical properties similar to those of very weak concrete. Tables of allowable structural properties (i.e., shear, bond, etc.) are published in various building codes and engineering manuals. A typical installation is for roof construction using steel joists. Steel bulb tees, welded or clipped to the joists, span over several joists and support rigid board insulation on the tee flanges. Reinforced or unreinforced gypsum is poured on the insulation board to a depth of 2 or 3 inches, embedding the bulbed stems of the tees. While use of the strengthening techniques discussed for reinforced concrete diaphragms (i.e., reinforced overlays, additional chord reinforcement, etc.) is technically possible, application of these techniques generally is not practical because of the additional weight or low allowable stresses of gypsum. Since dead loads normally constitute a significant portion of the design loads for roof framing members, the addition of several inches of gypsum for a reinforced overlay probably will overstress the existing light steel framing. Similarly, the low allowable stresses for dowels and bolts will allow strengthening of only marginally deficient diaphragms. For these reasons, gypsum diaphragms found to have significant deficiencies may have to be removed and replaced with steel decking or may be strengthened with a new horizontal bracing system (see Figure 3.5.5.2b).

3.5.4 PRECAST CONCRETE DIAPHRAGMS

3.5.4.1 Deficiencies

The principal deficiencies of precast or post-tensioned concrete planks, tees, or cored slabs are:

- Inadequate in-plane shear capacity of the connections between the adjacent units,
- Inadequate diaphragm chord capacity, and
- Excessive in-plane shear stresses at diaphragm openings or plan irregularities.

3.5.4.2 Strengthening Techniques for Inadequate Connection Shear Capacity

Techniques. Deficient in-plane shear capacity of connections between adjacent precast concrete planks, tees, or cored slabs can be improved by:

1. Replacing and increasing the capacity of the existing connections by overlaying the existing diaphragm with a new reinforced concrete topping slab (Figure 3.5.4.2).
2. Reducing the shear forces on the diaphragm by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

Relative Merits. The capacity of an existing diaphragm composed of precast concrete elements (i.e., cored slabs, tees, planks, etc.) generally is limited by the capacity of the field connections between the precast elements. It may be possible to modify these connections for a moderate increase in diaphragm capacity; however, it usually is not feasible to develop the full shear capacity of the precast units except with an adequately doweled and complete poured-in-place connection. This usually is very costly. Overlaying the existing precast system with a new reinforced concrete topping (Technique 1) is an effective procedure for increasing the shear capacity of the existing diaphragm. Because of the relatively low rigidity of the existing connections, the new topping should be designed to resist the entire design shear. Existing floor diaphragms with precast concrete elements may have a 2- or 3-inch poured-in-place topping with mesh reinforcement to compensate for the irregularities in precast elements. Applying an additional topping slab over the existing slab may be prohibitive because of the additional gravity and seismic loads that must be resisted by the structure. Where mechanical connections between units exist along with a topping slab, the topping slab generally will resist the entire load (until it fails) because of the relative rigidities; therefore, the addition of mechanical fasteners generally is ineffective. For the above reasons the most cost-effective alternative may be reducing the diaphragm shear forces through the addition of supplemental shear walls or braced frames.

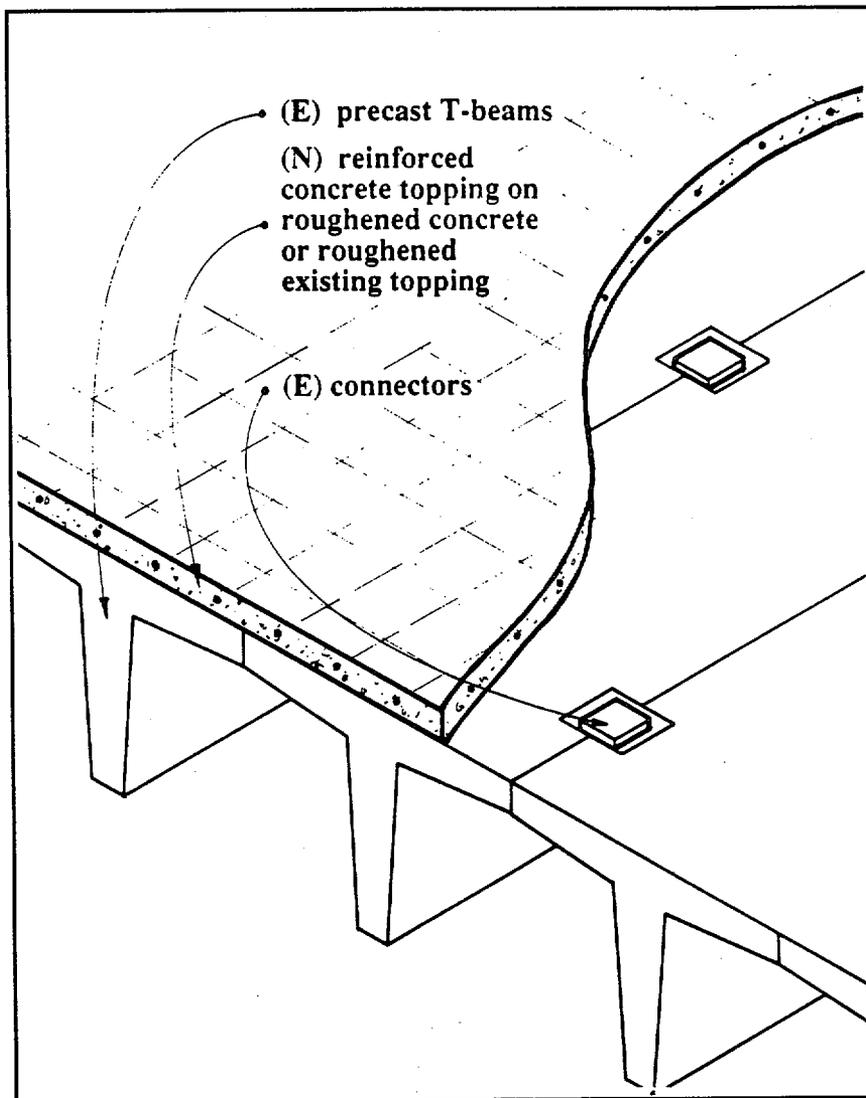


FIGURE 3.5.4.2 Strengthening an existing precast concrete diaphragm with a concrete overlay.

3.5.4.3 Strengthening Techniques for Inadequate Chord Capacity

Techniques. Deficient diaphragm chord capacity of precast concrete planks, tees, or cored slabs can be improved by:

1. Providing a new continuous steel member above or below the steel slab and connecting the new member to the existing slab with bolts (Figure 3.5.4.3).
2. Removing the edge of the diaphragm and casting a new chord member integral with the slab (Figure 3.5.2.3).
3. Reducing the diaphragm chord forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

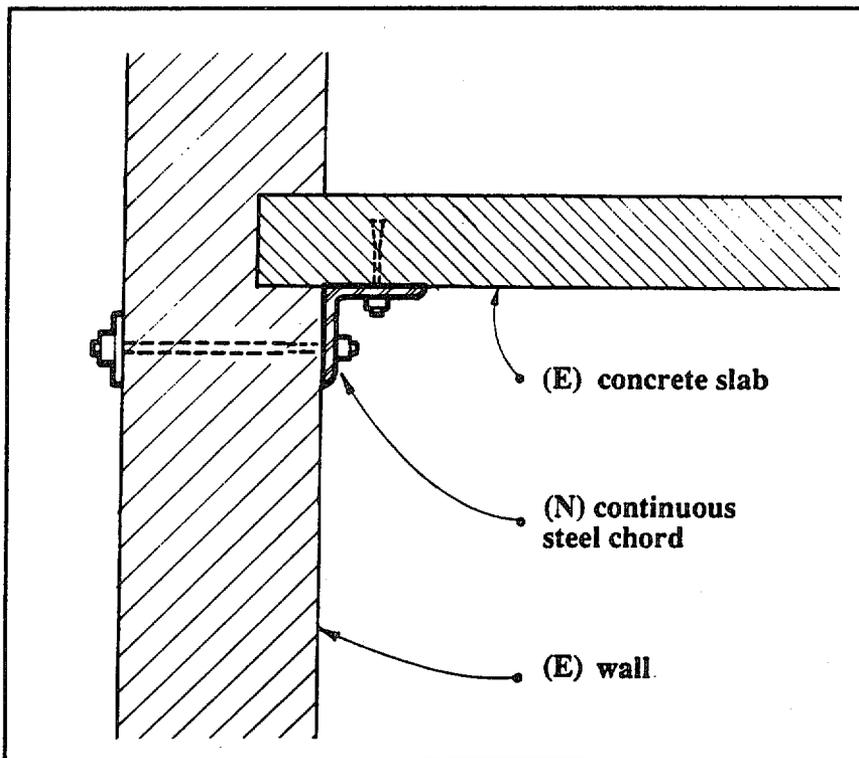


FIGURE 3.5.4.3 Adding a new steel member to an existing precast concrete diaphragm.

Relative Merits. Providing a new steel chord member (Technique 1) generally is the most cost-effective approach to rehabilitating a deficient diaphragm chord for precast concrete elements. When this approach is used; adequate shear transfer between the existing planks or slabs and the new chord member must be provided. Grouting under the new steel chord member may be necessary to accommodate uneven surfaces. Although typically more costly, casting a new chord into the diaphragm (Technique 2) may be considered a viable alternative where the projection caused by a new steel chord member is unacceptable for architectural reasons. If Technique 2 is considered, shoring of the planks or slabs will be necessary during construction. Technique 3 generally would be viable only if it is being considered to improve other deficient conditions.

3.5.4.4 Strengthening Techniques for Excessive Shear Stresses at Openings

Deficient diaphragm shear capacity at diaphragm openings or plan irregularities can be improved by:

1. Reducing the local stresses by distributing the forces along the diaphragm by means of concrete drag struts cast beneath the slab and made integral with the existing slab with drilled and grouted dowels.
2. Increasing the capacity by overlaying the existing slab with a new reinforced concrete topping slab with reinforcing trim bars in the vicinity of the opening (Figure 3.5.4.2).
3. Removing the stress concentration by filling in the diaphragm opening with reinforced concrete (Figure 3.2.1.2b).
4. Reducing the shear stresses at the location of the openings by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

Relative Merits. The relative merits for rehabilitating excessive shear stresses at openings in precast concrete planks, tees, or core slabs are similar to those discussed in Sec. 3.5.2.4 for cast-in-place concrete diaphragms.

3.5.5 STEEL DECK DIAPHRAGMS

3.5.5.1 Deficiencies

The principal deficiencies in steel deck diaphragms are inadequate in-plane shear capacity which may be governed by the capacity of the welding to the supports or the capacity of the seam welds between the deck units, inadequate diaphragm chord capacity, and excessive in-plane shear stresses at diaphragm openings or plan irregularities.

3.5.5.2 Strengthening Techniques for Inadequate Shear Capacity

Deficient in-plane shear capacity of steel deck diaphragms can be improved by:

1. Increasing the steel deck shear capacity by providing additional welding.
2. Increasing the deck shear capacity of unfilled steel decks by adding a reinforced concrete fill (Figure 3.5.5.2a) or overlaying with concrete filled steel decks a new topping slab.
3. Increasing the diaphragm shear capacity by providing a new horizontal steel bracing system under the existing diaphragm (Figures 3.5.5.2b and 3.5.5.2d).
4. Reducing the diaphragm shear stresses by providing supplemental vertical-resisting elements to reduce the diaphragm span as discussed in Sec. 3.4.

Relative Merits. Steel decking, with or without an insulation fill (e.g., vermiculite or perlite), may be used as a diaphragm whose capacity is limited by the welding to the supporting steel framing and crimping or seam welding of the longitudinal joints of the deck units. The shear capacity of this type of diaphragm may be increased modestly by additional welding (Technique 1) if the shear capacity of the existing welds is less than the allowable shear of the steel deck itself. Significant increases in capacity may be obtained by adding a reinforced concrete fill (Technique 2) and shear studs welded to the steel framing through the decking. This procedure will require the removal of any insulation fill and the removal and replacement of any partitions and floor or roof finishes.

The shear capacity of steel deck diaphragms in open web joists often is limited by the lack of adequate connection from deck to shear wall or other vertical element. The lack of intermediate connectors between joists

is common. Frequently, the joist bearing ends themselves are not well connected to transfer diaphragm shear. Addition of an edge support connected to wall and diaphragm often is feasible.

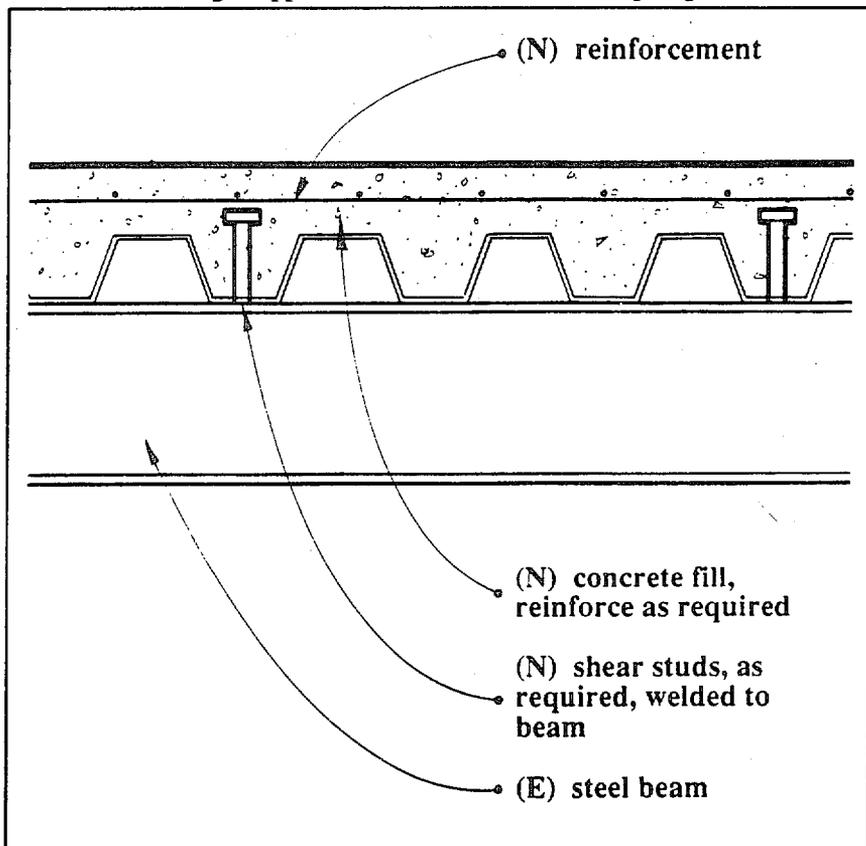


FIGURE 3.5.5.2a Strengthening an existing steel deck diaphragm.

The capacity of steel decking with an existing reinforced concrete fill may be increased by adding a reinforced concrete overlay (Technique 2). Although this is an expedient alternative for increasing the shear capacity of an existing composite steel deck, providing adequate shear transfer to the vertical-resisting members or chord elements through the existing composite decking may require special details (e.g., additional shear studs). Since the addition of a concrete overlay will increase the dead weight of the structure, the existing members, connections, and foundation must be checked to determine whether they are capable of resisting the added loads.

The above alternatives provide positive, direct methods for strengthening an existing steel deck diaphragm. Both alternatives require complete access to the top of the dia-

phragm and the removal and replacement of partitions and floor finishes. Technique 2 (i.e., topping over an existing concrete fill) will change the finished floor elevation by several inches and will therefore require a number of nonstructural adjustments to the new elevation (e.g., to stairs, elevators, floor electrical outlets, etc.).

An additional alternative for strengthening steel decking without concrete fill is to add new horizontal bracing under the decking (Technique 3). Since steel decking generally is supported on structural steel framing, the existing framing with new diagonal members forms the horizontal bracing system. The diaphragm shears are shared with the existing decking in proportion to the relative rigidity of the two systems. This alternative requires access to the underside of the floor or roof framing and may require relocation of piping, ducts, or electrical conduit as well as difficult and awkward connections to the existing framing. These costs must be weighed against the costs for a concrete overlay. It should be noted that this alternative may not be feasible for steel decking with a composite concrete fill because of the much greater rigidity of the existing composite diaphragm compared with that of the bracing system. For the bracing system to be effective in this case, the diaphragm shears would be distributed on the basis of the bracing system and the steel decking without the concrete fill (i.e., failure of the concrete fill in shear would be assumed to be acceptable). The new horizontal bracing system will require continuous chord or collector members (Figure 3.5.5.2d) to receive the bracing forces and transfer them to shear walls or other vertical-resisting elements. In Figure 3.5.5.2d, a tubular steel member is a preferred section for the new bracing members as is the tee section in Section a-a for the chord or collector members. Where existing construction does not permit the use of the tee section, an angle may be used as shown in Section b-b. In the latter case, bending of the angle and prying action on the anchor bolts may need to be investigated.

Reduction of the existing diaphragm stresses to acceptable levels by providing additional shear walls or vertical bracing (Technique 4) also may be a feasible alternative. The choice between shear walls or bracing will depend on compatibility with the existing vertical-resisting elements (i.e., additional shear walls should be considered for an existing shear wall system and additional bracing for an existing bracing system). The

appropriateness of this technique (as discussed above) depends on the extent to which new foundations will be required and potential interference with the functional use of the building.

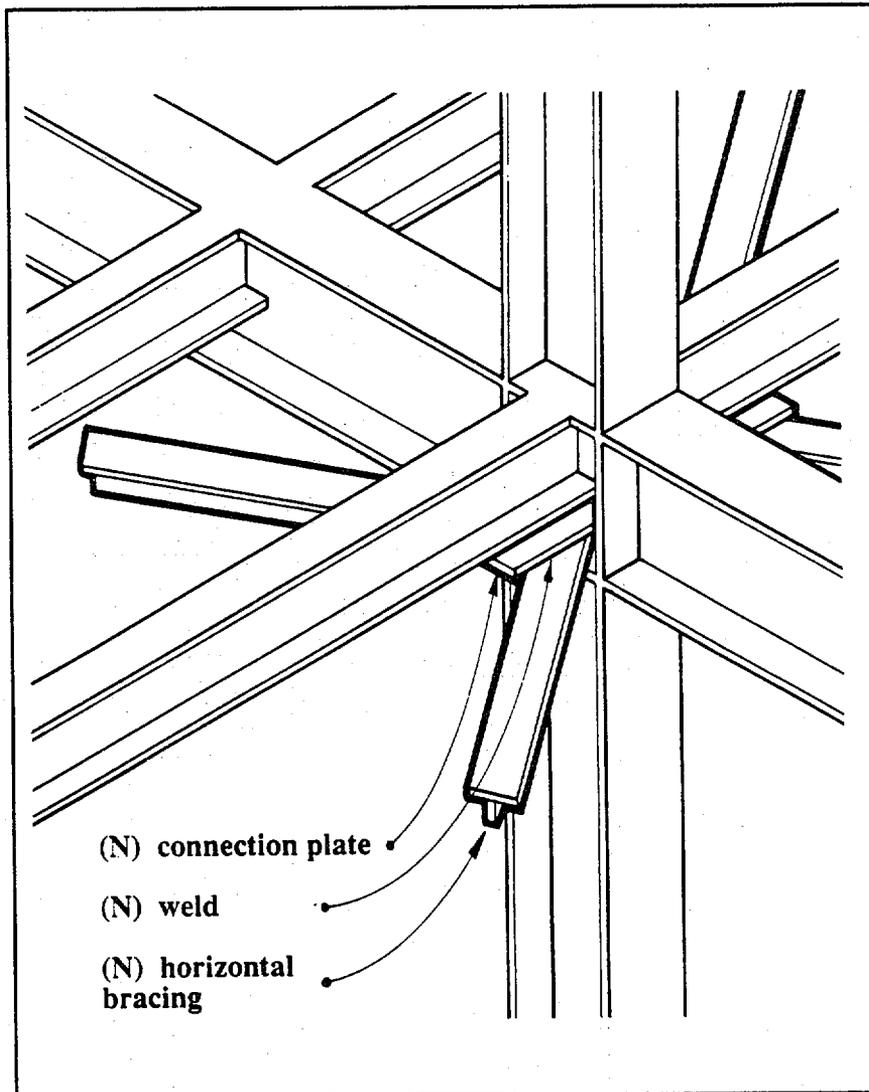


FIGURE 3.5.5.2b Strengthening an existing steel deck diaphragm.

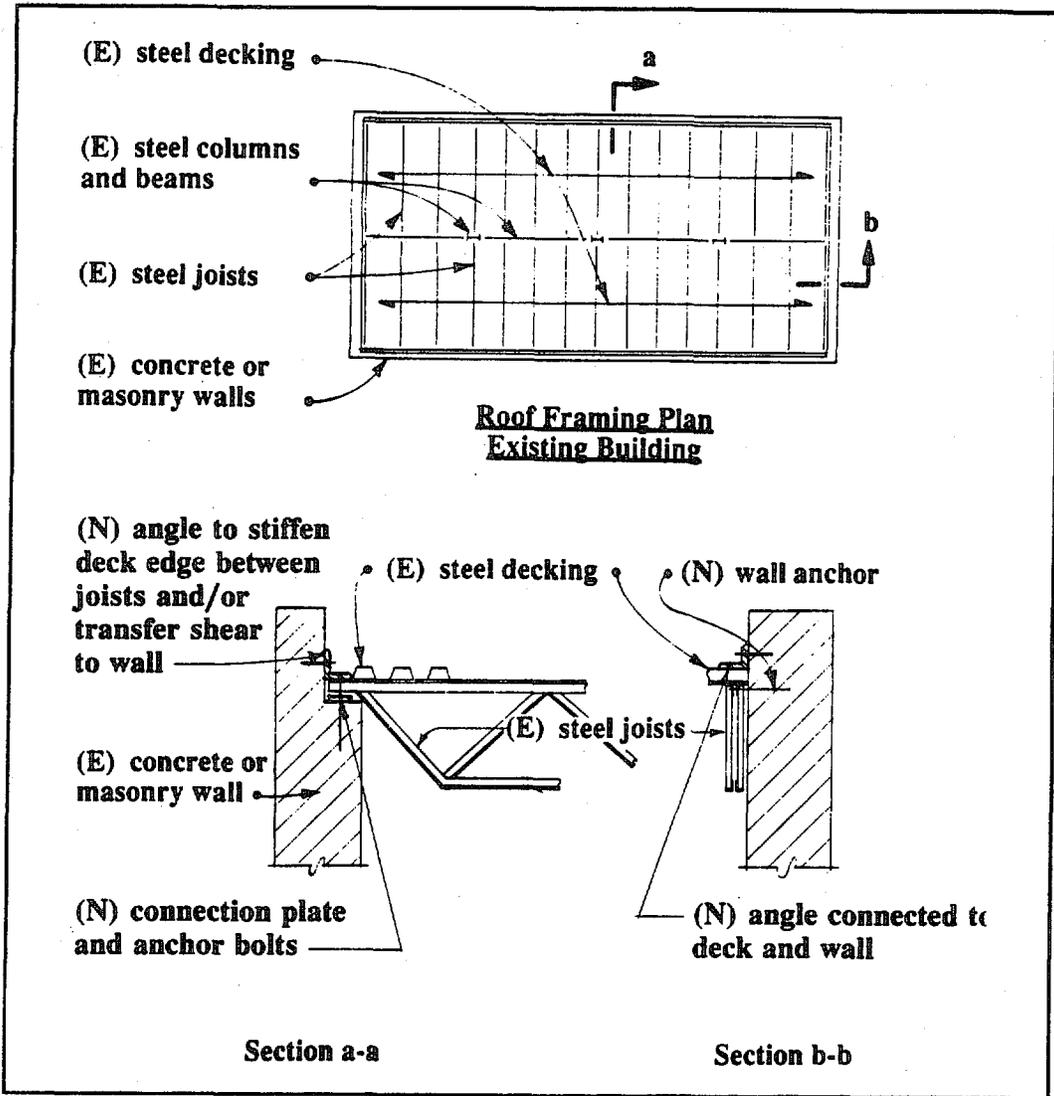


FIGURE 3.5.5.2c Strengthening an existing building with steel decking and concrete or masonry walls.

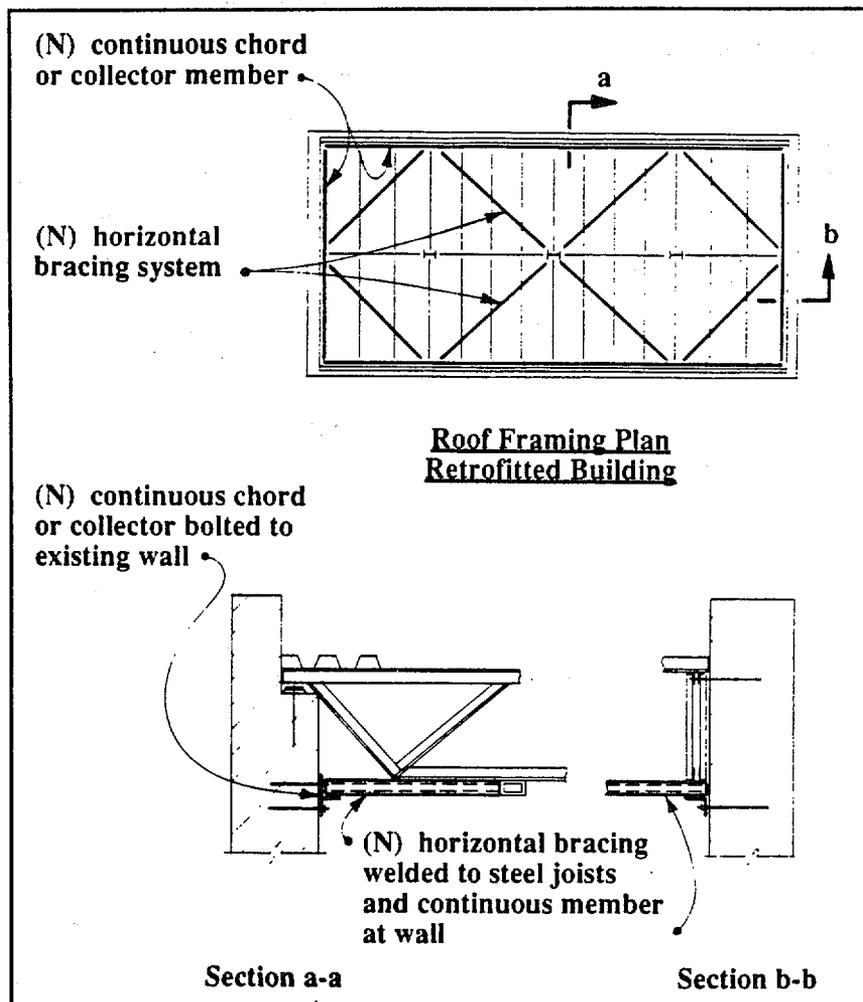


FIGURE 3.5.5.2d Strengthening an existing building with steel decking and concrete or masonry walls.

3.5.5.3 Strengthening Techniques for Inadequate Chord Capacity

Techniques. Deficient chord capacity of steel deck diaphragms can be improved by:

1. Increasing the chord capacity by providing welded or bolted continuity splices in the perimeter chord steel framing members.
2. Increasing the chord capacity by providing a new continuous steel member on top or bottom of the diaphragm (Figure 3.5.4.3).
3. Reducing the diaphragm chord stresses by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) such that the diaphragm span is reduced as discussed in Sec. 3.4.

Relative Merits. Steel decking generally is constructed on steel framing. The perimeter members of the steel framing typically will have sufficient capacity to resist the diaphragm chord stresses provided the shear capacity of the connections between the decking and the chord member and the tensile capacity of the steel framing connections are adequate to transfer the prescribed loads. Increasing the capacity of these connections by

providing additional plug welds to the decking or adding steel shear studs in the case of concrete-filled metal decking may be required. Technique 1 generally is the most cost-effective.

Increasing the chord capacity by providing a new steel chord member to the perimeter of the diaphragm (Technique 2) would be appropriate only if it was impractical to use an existing member (Technique 1).

Reducing the diaphragm chord stresses by providing supplemental shear walls or braced frames (Technique 3) generally would not be cost-effective to correct a chord capacity problem unless it is being seriously considered to improve other component deficiencies as well.

3.5.5.4 Strengthening Techniques for Excessive Shear Stresses at Openings

Techniques. Excessive shear stresses at diaphragm openings or plan irregularities can be improved by:

1. Reducing the local stress concentrations by distributing the forces into the diaphragm by means of steel drag struts.
2. Increasing the capacity of the diaphragm by reinforcing the edge of the opening with a steel angle frame welded to the decking.
3. Reducing the diaphragm stresses by providing supplemental vertical-resisting elements (i.e., shear walls, braced frames or new moment frames) such that the diaphragm span is reduced as discussed in Sec. 3.4.

Relative Merits. Openings and plan irregularities in steel deck diaphragms generally are supported along the perimeter by steel beams. If continuous past the corners of the openings or irregularities, these beams can distribute the concentrated stresses into the diaphragm provided the capacity of the connections between the decking and the steel beams is adequate to transfer the prescribed loads. If inadequate, the connections can be reinforced by adding plug welds or shear studs.

If beams are not continuous beyond an opening or irregularity, new beams to act as drag struts can be provided (Technique 1). Adequate connection of the beams to the diaphragm and to the existing beams will be required to distribute loads.

Correcting the diaphragm deficiency by providing a steel frame around the perimeter of the opening or along the sides of the irregularity (Technique 2) is similar to providing drag struts. The connection between the new steel members and the diaphragm must be sufficient to adequately distribute the local stresses into the diaphragm. The dimensions of the opening or irregularity will dictate whether this can be achieved solely with the use of a perimeter steel frame.

Reducing the diaphragm stresses by providing supplemental shear walls or braced frames (Technique 3) generally would not be cost-effective to correct a diaphragm opening deficiency unless it also was being considered to improve other component deficiencies.

3.5.6 HORIZONTAL STEEL BRACING

3.5.6.1 Deficiency

The principal deficiency in horizontal steel bracing systems is inadequate force capacity of the members (i.e., bracing and floor or roof beams) and/or the connections.

3.5.6.2 Strengthening Techniques for Braces or Beams

Techniques. Deficient horizontal steel bracing system capacity can be improved by:

1. Increasing the capacity of the existing bracing members or removing and replacing them with new members and connections of greater capacity.

2. Increasing the capacity of the existing members by reducing unbraced lengths.
3. Increasing the capacity of the bracing system by adding new horizontal bracing members to previously unbraced panels (if feasible).
4. Increasing the capacity of the bracing system by adding a steel deck diaphragm to the floor system above the steel bracing.
5. Reducing the stresses in the horizontal bracing system by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

Relative Merits. Horizontal bracing systems to resist wind or earthquake forces have been in common use for many years in steel-framed industrial buildings. These bracing systems generally are integrated with the existing floor or roof framing systems, and the capacity of the bracing system should be governed by the diagonal braces and their connections. If the structural analysis indicates that the existing floor or roof framing members in the bracing systems do not have adequate capacity for the seismic loads, providing additional bracing or other lateral-load-resisting elements may be a cost-effective alternative to strengthening these members.

Simple strengthening techniques include increasing the capacity of the existing braces and their connections (e.g., single-angle bracing could be doubled, double-angle bracing could be "starred") as well as removing existing braces and replacing them with stronger braces and connections (Technique 1). If the compressive capacity of the elements is the primary deficiency, providing a system of secondary braces that reduces the unbraced lengths (Technique 2) of the members may be cost-effective. The existing connections must be investigated and, if found to be inadequate, the connections will need to be strengthened. Technique 3 (providing horizontal braces in adjacent unbraced panels if present) may be a very cost-effective approach to increasing the horizontal load capacity.

Existing horizontal bracing systems often do not have an effective floor diaphragm and new floor or roof diaphragm consisting of a reinforced concrete slab or steel decking with or without concrete fill can be provided to augment or replace the horizontal bracing systems (Technique 4). A steel deck diaphragm may be designed to augment the horizontal bracing, but a concrete slab probably would make the bracing ineffective because of the large difference in rigidities. The concrete slab therefore would need to be designed to withstand the entire lateral load.

As with other diaphragms, it may be possible to reduce diaphragm stresses to acceptable limits by providing additional shear walls or vertical bracing (Technique 5). However, unlike true diaphragm systems, a horizontal bracing system may not have the same shear capacity at any section (e.g., a simple bracing system between two end walls may have increasing shear capacity from the center towards each end). In some cases, additional vertical-resisting elements can increase the stresses in some of the elements of the existing bracing systems.

3.6 FOUNDATIONS

Deficient foundations occasionally are a cause for concern with respect to the seismic capacity of existing buildings. Because the foundation loads associated with seismic forces are transitory and of very short duration, allowable soil stresses for these loads, combined with the normal gravity loads, may be permitted to approach ultimate stress levels. Where preliminary analysis indicates that there may be significant foundation problems, recommendations from a qualified geotechnical engineer should be required to establish rational criteria for the foundation analysis.

3.6.1 CONTINUOUS OR STRIP WALL FOOTINGS

3.6.1.1 Deficiencies

The principal deficiencies in the seismic capacity of existing continuous or strip wall footings are:

- Excessive soil bearing pressure due to overturning forces and
- Excessive uplift conditions due to overturning forces.

3.6.1.2 Strengthening Techniques for Excessive Soil Bearing Pressure

Techniques. The problem of excessive soil bearing pressure caused by seismic overturning forces can be mitigated by:

1. Increasing the bearing capacity of the footing by underpinning the footing ends and providing additional footing area (Figure 3.6.1.2a).
2. Increasing the vertical capacity of the footing by adding new drilled piers adjacent and connected to the existing footing (Figure 3.6.1.2b).
3. Increasing the soil bearing capacity by modifying the existing soil properties.
4. Reducing the overturning forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames).

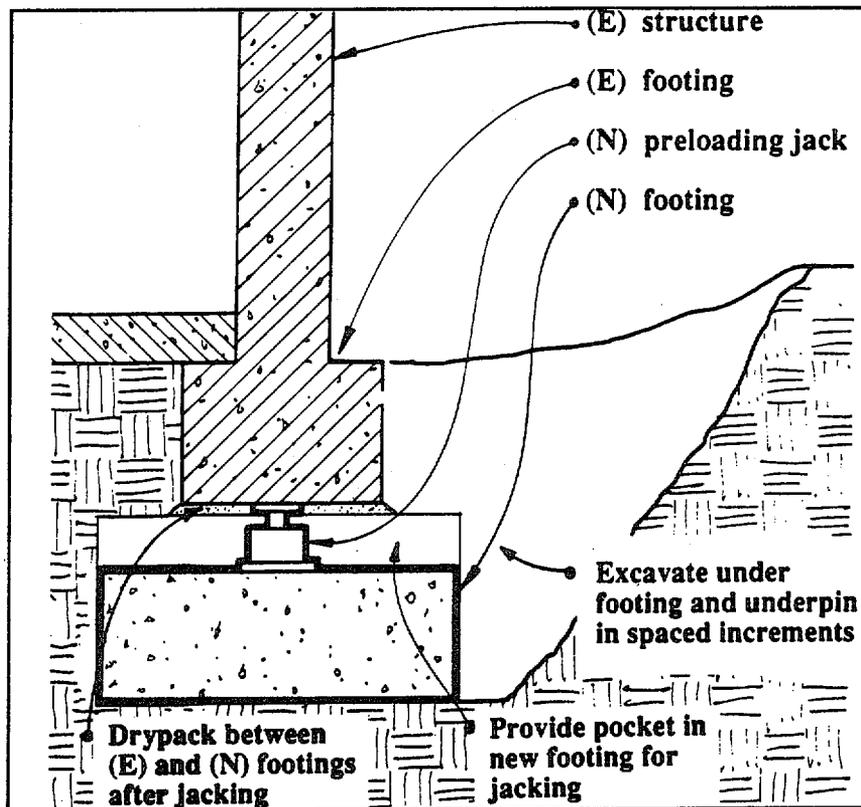


FIGURE 3.6.1.2a Underpinning an existing footing.

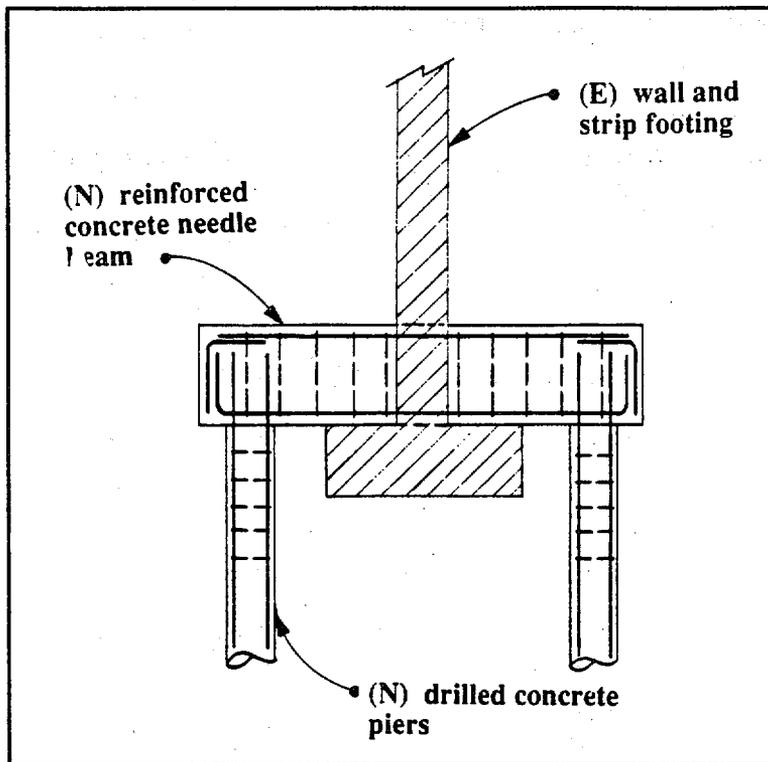


FIGURE 3.6.1.2b Strengthening an existing wall footing by the addition of drilled piers.

Relative Merits. The most effective procedure for correcting excessive soil pressure due to seismic overturning forces generally is to underpin the ends of the footing and to construct a larger footing under each end of the existing footing (Technique 1). The new footing should be constructed in staggered increments, and each increment should be preloaded by jacking prior to transfer of the load from the existing footing. An alternative procedure is to provide a drilled pier on each side and at each end of the wall (Technique 2). The reinforced concrete piers should be cast-in-place in uncased holes so as to develop both tension and compression. Each pier should extend above the bottom of the footing and be connected by a reinforced concrete beam through the existing wall above the footing (Figure 3.6.1.2.b).

Techniques 1 and 2 are costly and disruptive. For this reason, when seismic upgrading results in increased forces that require foundation strengthening, it may be cost-effective to consider other seismic upgrading schemes. Soil conditions may be such that modifying the capacity of existing soils is the most viable alternative. The soil beneath structures founded on clean sand can be strengthened through the injection of chemical grouts. The bearing capacity of other types of soils can be strengthened by compaction grouting. With chemical grouting, chemical grout is injected into clean sand in a regular pattern beneath the foundation. The grout mixes with the sand to form a composite material with a significantly higher bearing capacity. With compaction grouting, grout also is injected in a regular pattern beneath the foundation but it displaces the soil away from the pockets of injected grout rather than dispersing into the soil. The result of the soil displacement is a densification of the soil and, hence, increased bearing capacity. Some disruption of existing floors adjacent to the subject foundations may be required in order to cut holes needed for uniform grout injection. Alternatively, seismic forces on the footing can be reduced by adding other vertical-resisting elements such as bracing, shear walls, or buttresses.

3.6.1.3 Strengthening Techniques for Excessive Uplift Conditions

Techniques. Deficient capacity of existing foundations to resist prescribed uplift forces caused by seismic overturning moments can be improved by:

1. Increasing the uplift capacity of the existing footing by adding drilled piers or soil anchors.
2. Increasing the size of the existing footing by underpinning to mobilize additional foundation and soil weight.
3. Reducing the uplift forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

Relative Merits. Any seismic rehabilitation alternative that requires significant foundation work will be costly. Access for heavy equipment (e.g., drilling rigs, backhoes, and pile drivers), ease of material handling, and the need to minimize the disruption of the functional use of the building are a few of the reasons why exterior foundation rehabilitation work will be significantly less costly than interior work.

Providing a significant increase in the uplift capacity of an existing foundation generally is most effectively achieved by adding drilled piers or soil anchors (Technique 1). Reinforced concrete piers can be provided adjacent to the footing and connected to the existing footing with steel or concrete beams (Figure 3.6.1.2b). Locating the piers symmetrically on both sides of the footing will minimize connections that must transfer eccentric loads. The details for eccentric connections may not always be feasible. However, providing concentric drilled piers almost ensures that interior foundation work will be needed.

Soil anchors similar to those used to tie-back retaining walls also can be used instead of drilled piers. Hollow core drill bits from 6 inches to 2 feet in diameter can be used to drill the needed deep holes. After drilling, a deformed steel tension rod is placed into the hole through the center of the bit. As the bit is withdrawn, cement grout is pumped through the stem of the bit bonding to the tension rod and the soil. These types of soil anchors can provide a significant tensile capacity. Drilling rigs are available that can drill in the interior of buildings even with low headroom; however, this is more costly.

Underpinning the ends of the footing to create a wider bearing area at each end has the beneficial effect of reducing the uplift by increasing the area, the moment of inertia, and the dead load of the existing footing. Although this may be a feasible alternative, it is usually less cost-effective than adding drilled piers or soil anchors. The size of the necessary footing addition becomes prohibitive if substantial uplift forces need to be resisted.

As with other rehabilitation techniques, reducing the overturning forces by providing additional vertical-resisting elements (Technique 3) such as braced frames, shear walls, or buttresses may be viable. The addition of buttresses may transfer loads to the exterior of the building where foundation work may not be so costly.

Some engineers believe that uplifting of the ends of rigid shear walls is not a deficiency and may actually be beneficial in providing a limit to the seismic base shear. Others design the structure for the overturning forces but ignore the tendency of the foundation to uplift. If the foundations are permitted to uplift, the engineer must investigate the redistribution of forces in the wall and in the soil due to the shift in the resultant of the soil pressure and also the potential distortion of structural and nonstructural elements framing into the wall.

3.6.2 INDIVIDUAL PIER OR COLUMN FOOTINGS

3.6.2.1 Deficiencies

The principal deficiencies in the seismic capacity of existing individual pier or column footings are:

- Excessive soil bearing pressure due to overturning forces,
- Excessive uplift conditions due to overturning forces, and
- Inadequate passive soil pressure to resist lateral loads.

3.6.2.2 Strengthening Techniques for Excessive Soil Bearing Pressure

Techniques. The problem of excessive soil bearing pressure due to overturning forces can be mitigated by:

1. Increasing the bearing capacity of the footing by underpinning the footing ends and/or providing additional footing area (Figure 3.6.1.2a).
2. Increasing the vertical capacity of the footing by adding new drilled piers adjacent and connected to the existing footing (Figure 3.6.1.2b).
3. Reducing the bearing pressure on the existing footings by connecting adjacent footings with deep reinforced concrete tie beams.
4. Increasing the soil bearing capacity by modifying the existing soil properties.
5. Reducing the overturning forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames).

Relative Merits. The considerations in selecting alternatives to correcting excessive soil bearing pressure due to overturning forces in individual pier or column footings are similar to those discussed above for continuous or strip footings. There is, however, the additional alternative of tying adjacent footings together with a deep reinforced concrete beam (Technique 3), which may be a feasible means of distributing the forces resulting from the overturning moment to adjacent footings.

3.6.2.3 Strengthening Techniques for Excessive Uplift Conditions

Techniques. Deficient capacity of existing foundations to resist the prescribed uplift forces caused by seismic overturning moments can be improved by:

1. Increasing the uplift capacity of the existing footing by adding drilled piers or soil anchors.
2. Increasing the size of the existing footing to mobilize additional foundation and soil weight.
3. Increasing the uplift capacity by providing a new deep reinforced concrete beam to mobilize the dead load on an adjacent footing.
4. Reducing the uplift forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames).

Relative Merits. The considerations in selecting techniques to correct excessive uplift conditions due to overturning forces in individual pier or column footings are similar to those discussed above for continuous or strip footings. Technique 2 is appropriate only when excessive uplift results from combined vertical loads and moments on the footing. There is, however, the additional alternative of tying adjacent footings together with a deep reinforced concrete beam (Technique 3), which may be a feasible means for mobilizing the existing mass supported by an adjacent footing.

3.6.2.4 Strengthening Techniques for Inadequate Passive Soil Pressure

Techniques. The problem of excessive passive soil pressure caused by seismic loads can be mitigated by:

1. Providing an increase in bearing area by enlarging the footing.
2. Providing an increase in bearing area by adding new tie beams between existing footings.
3. Improving the existing soil conditions adjacent to the footing to increase the allowable passive pressure.
4. Reducing the bearing pressure at overstressed locations by providing supplemental vertical-resisting elements such as shear walls or braced frames as discussed in Sec. 3.4.

Relative Merits. As noted above, foundation rework generally is relatively costly. The foundation strengthening technique that is the most cost-effective generally is the technique that can resolve more than one concern. The addition of a new deep tie beam between adjacent footings if required to resist overturning forces will likely address inadequate passive soil pressure concerns. As the above discussion indicates, the most cost-effective alternative to the strengthening of an existing foundation usually is not readily apparent. Several alternative schemes may have to be developed to the point where reasonable cost estimates can be made to evaluate the tangible costs (i.e., the total actual work that needs to be accomplished) as well as the disruption or relocation of an ongoing function and the architectural considerations.

3.6.3 PILES OR DRILLED PIERS

3.6.3.1 Deficiencies

The principal deficiencies in the seismic capacity of piles or drilled piers are:

- Excessive tensile or compressive loads on the piles or piers due to the seismic forces combined with the gravity loads and
- Inadequate lateral force capacity to transfer the seismic shears from the pile caps and the piles to the soil.

3.6.3.2 Strengthening Techniques for Excessive Tensile or Compressive Loads

Techniques. Deficient tensile or compressive capacity of piles or piers can be improved by:

1. Increasing the capacity of the foundation by driving additional piles and replacing or enlarging the existing pile cap (Figure 3.6.3.2).
2. Reducing the loads on overstressed pile caps by adding tie beams to adjacent pile caps and distributing the loads.

Relative Merits. Although it may be possible to drive additional piles to correct the deficiency, it usually is very difficult to utilize the existing pile cap to distribute the loads effectively to both old and new piles. It then may be necessary to consider temporary shoring of the column or other structural members supported by the pile caps so that the pile caps can be removed and replaced with a new pile cap that will include the new piles.

As discussed above for individual footings, it may be more cost-effective to provide deep tie beams to distribute some of the pile load to adjacent pile caps that may have excess capacity than to drive new piles.

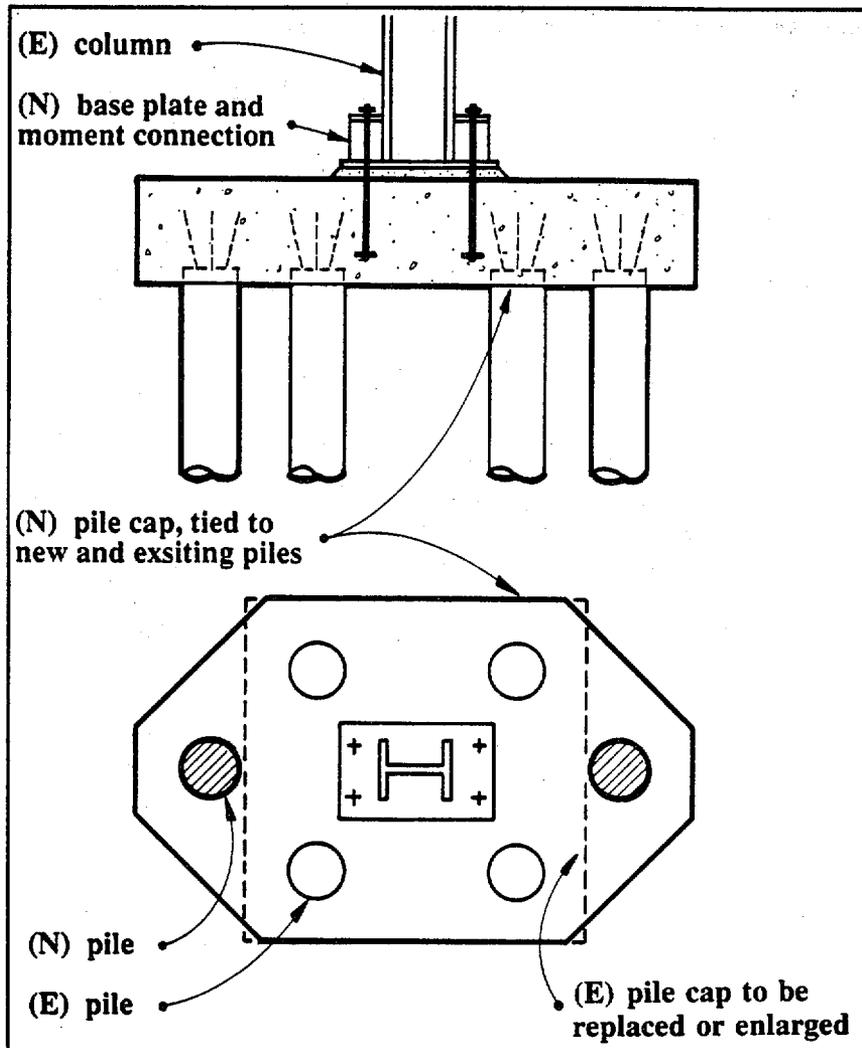


FIGURE 3.6.3.2 Upgrading an existing pile foundation.

3.6.3.3 Strengthening Techniques for Excessive Lateral Forces

Techniques. Deficient lateral force capacity of piles or piers can be improved by:

1. Reducing the loads on overstressed pile caps by adding tie beams to adjacent pile caps and distributing the loads.
2. Increasing the allowable passive pressure of the soil by improving the soil adjacent to the pile cap.
3. Increasing the capacity of the foundation by driving additional piles and replacing or enlarging existing pile cap.
4. Reducing loads on the piles or piers by providing supplemental vertical-resisting elements (i.e., braced frames or shear walls) and transferring forces to other foundation members with reserve capacity as discussed in Sec. 3.4.

Relative Merits. The most cost-effective approach may be to provide tie beams between piers or pile caps (Technique 1). The tie beams will distribute loads between foundation elements as well as provide additional surface area to mobilize additional passive pressure. In specific situations, the other alternatives may be more

cost-effective depending upon accessibility as well as the impact each alternative may have on the ongoing functional use of the building.

3.6.4 MAT FOUNDATIONS

3.6.4.1 Deficiencies

Seismic deficiencies in mat foundations are not common; however, the following two deficiencies can occur:

- Inadequate moment capacity to resist combined gravity plus seismic overturning forces and
- Inadequate passive soil pressure to resist sliding.

3.6.4.2 Strengthening Technique for Inadequate Moment Capacity

Deficient mat foundation moment capacity can be corrected by increasing the mat capacity locally by providing additional reinforced concrete (i.e., an inverted column capital) doweled and bonded to the existing mat to act as a monolithic section. If the inadequacy is due to concentrated seismic overturning loads, it may be possible to provide new shear walls above the mat to distribute the overturning loads and also to locally increase the section modulus of the mat.

3.6.4.3 Strengthening Technique for Inadequate Lateral Resistance

Deficient mat foundation lateral resistance (e.g., the possibility of a mat founded at shallow depth in the soil) can be corrected by the construction of properly spaced shear keys at the mat perimeter. The shear keys would be constructed by trenching under the mat, installing dowels on the underside of the mat, and placing reinforced concrete in the trench.

3.7 DIAPHRAGM TO VERTICAL ELEMENT CONNECTIONS

Seismic inertial forces originate in all elements of buildings and are delivered through structural connections to horizontal diaphragms. The diaphragms distribute these forces to vertical elements that transfer the forces to the foundation.

An adequate connection between the diaphragm and the vertical elements is essential to the satisfactory performance of any structure. The connections must be capable of transferring the in-plane shear stress from the diaphragms to the vertical elements and of providing support for out-of-plane forces on the vertical elements.

The following types of diaphragms are discussed below: timber, concrete, precast concrete, steel deck without concrete fill, steel deck with concrete fill, and horizontal steel bracing.

3.7.1 CONNECTIONS IN TIMBER DIAPHRAGMS

3.7.1.1 Deficiencies

The principal connection deficiencies in timber diaphragms are:

- Inadequate capacity to transfer in-plane shear at the connection of the diaphragm to interior shear walls or vertical bracing,

- Inadequate capacity to transfer in-plane shear at the connection of the diaphragm to exterior shear walls or vertical bracing, and
- Inadequate out-of-plane anchorage at the connection of the diaphragm to exterior concrete or masonry walls.

3.7.1.2 Strengthening Techniques for Interior Shear Wall Connections

Deficient shear transfer capacity of a diaphragm at the connection to an interior shear wall or braced frame can be improved by:

1. Increasing the shear transfer capacity of the diaphragm local to the connection by providing additional nailing to existing or new blocking (Figure 3.7.1.2a).
2. Reducing the local shear transfer stresses by distributing the forces from the diaphragm by providing a collector member to transfer the diaphragm forces to the shear wall (Figure 3.7.1.2b).
3. Reducing the shear transfer stress in the existing connection by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.

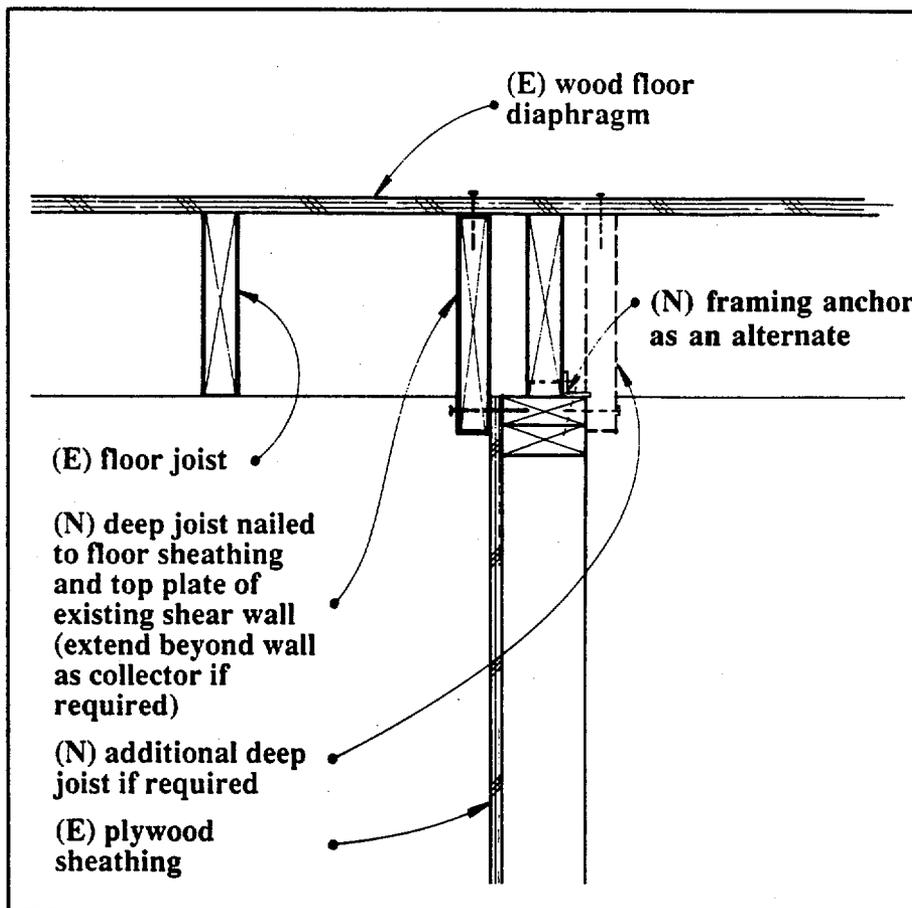


FIGURE 3.7.1.2a Strengthening the connection of a diaphragm to an interior shear wall (wall parallel to floor joist).

Relative Merits. If the shear transfer deficiency is governed by the existing nailing, the most cost-effective alternative most likely is to provide additional nailing (Technique 1); however, stripping of the flooring or roofing surface is required. If it is not feasible to provide adequate additional nailing within the length of the shear wall, the installation of a collector (Technique 2) probably will be the most cost-effective alternative. As indicated in the detail on the left of Figure 3.7.1.2b, if the nailing of the diaphragm to the new blocking is inadequate to transfer the desired shear force over the length of the shear wall, a drag strut or collector member should be provided and the new blocking extended as required beyond the end of the shear wall. The shear force is collected in the drag strut and transferred to the shear wall with more effective nailing or bolting. The new lumber must be dimensionally stable and cut to size.

Technique 3 (i.e., providing additional vertical-resisting elements) usually involves construction of additional interior shear walls or exterior buttresses. This alternative generally is more expensive than the other two because of the need for new foundations and for drag struts or other connections to collect the diaphragm shears for transfer to the new shear walls or buttresses.

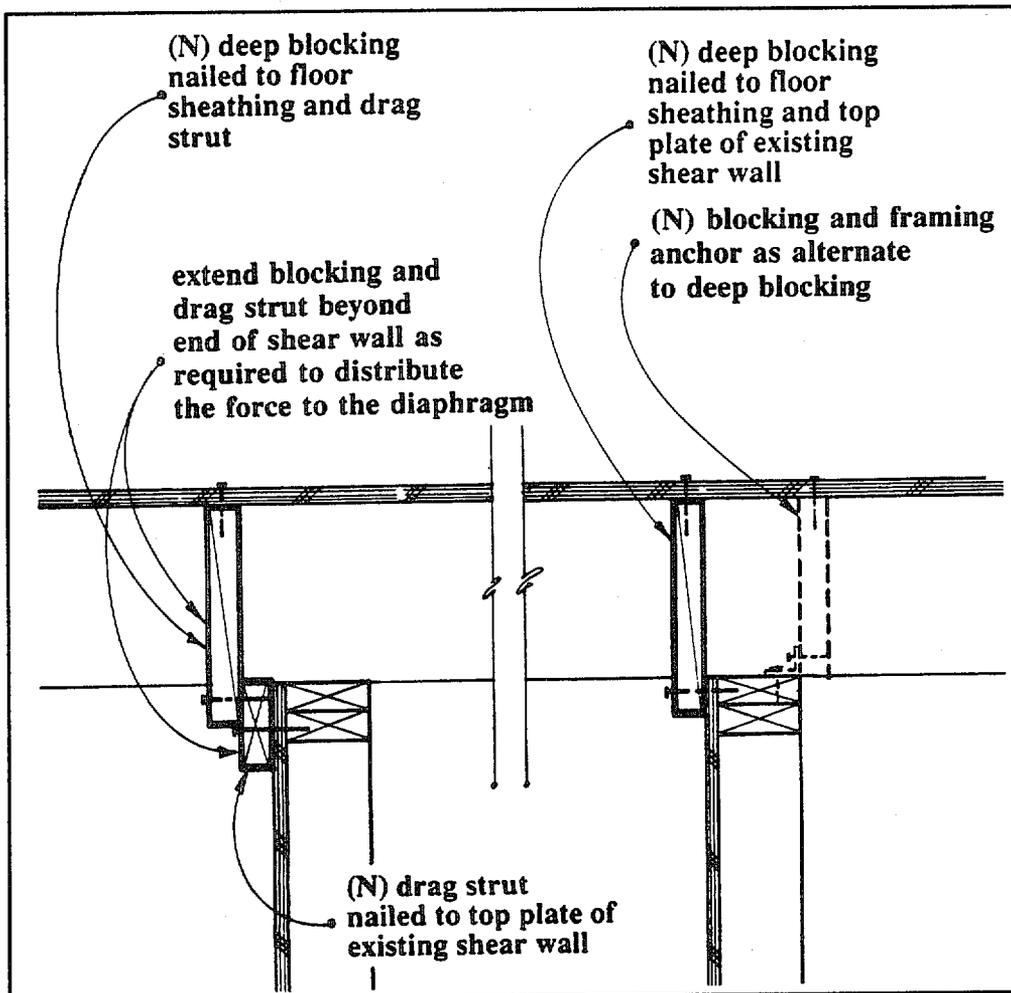


FIGURE 3.7.1.2b Strengthening the connection of a diaphragm to an interior shear wall (wall perpendicular to floor joist).

3.7.1.3 Strengthening Techniques for In-Plane Shear Transfer Capacity to Exterior Walls

Techniques. Deficient in-plane shear transfer capacity of a diaphragm to exterior shear walls or braced frames can be improved by:

1. Increasing the capacity of existing connections by providing additional nailing and/or bolting.
2. Reducing the local shear transfer stresses by distributing the forces from the diaphragm by providing chords or collector members to collect and distribute shear from the diaphragm to the shear wall or bracing (Figure 3.7.1.3).
3. Reducing the shear stress in the existing connection by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.

Relative Merits. Inadequate in-plane shear transfer capacity at an exterior shear wall typically is a deficiency when large openings along the line of the wall exist. In this case, the shear force to be resisted per unit length of wall may be significantly greater than the shear force per unit length transferred from the diaphragm by the existing nailing or bolting. If the diaphragm and the shear walls have adequate shear capacity (as described for interior shear walls in Sec. 3.7.1.2), the solution requires transfer of the diaphragm shear to a collector member for distribution to the discontinuous shear walls. For timber shear walls parallel to the joists, the exterior joist usually is doubled up at the exterior wall and extended as a header over openings. This doubled joist can be spliced for continuity and used as a drag strut with shear transfer to the wall by means of metal clip anchors and nails or lag screws. Figure 3.7.1.3 shows an elevation of an existing wood stud shear wall with a large opening. If the resulting unit shears in the walls on either side of the opening are larger than the existing shear transfer capacity of the roof diaphragm (e.g., in this case, the capacity is governed by the existing nailing to the perimeter blocking or double joists), a collector member is required to collect the diaphragm shears and transfer them, at a higher shear stress, to the shear walls. In Figure 3.7.1.3, it is assumed that additional capacity is required for the existing shear walls and provided by new sheathing on the inside face. The assumed force path is from the roof sheathing to the blocking or double joists, from the blocking or joists to the exterior sheathing, from the exterior sheathing to the double plates at the top of the stud wall, and from the double plates to the collector members and the new sheathing. Adequate new or existing nailing must be provided at each of the above interfaces. The shear walls also must be checked for shear transfer at the foundation and the need for hold-down provisions to resist uplift from the additional forces. Note that, in the detail parallel to the joists, the existing double joists, if adequately spliced, can be utilized as a collector member. Similarly, if the existing double plates had been continuous over the opening, the collector member normal to the joists would not be required.

For steel frame buildings with discontinuous braced panels, the spandrel supporting the floor or roof framing may be used as a chord or collector member.

For discontinuous masonry, concrete or precast concrete shear walls parallel to the joists, the sheathing typically is nailed to a joist or ledger bolted to the wall. The joist or ledger can be spliced for continuity and supplementary bolting to the shear wall provided as required. For shear walls perpendicular to the joists, the sheathing may be nailed to discontinuous blocking between the ends of the joists. In this case, the chord or collector member may have to be provided on top of the diaphragm. This new member may be a continuous steel member bolted to the wall and nailed or lag screwed, with proper edge distance, to the diaphragm and also could be designed to provide out-of-plane anchorage as indicated in Figure 3.7.1.2b.

As discussed above with respect to interior wall connection deficiencies, providing additional vertical-resisting elements (Technique 3) is likely to be the most costly alternative unless it is being considered to correct other component deficiencies.

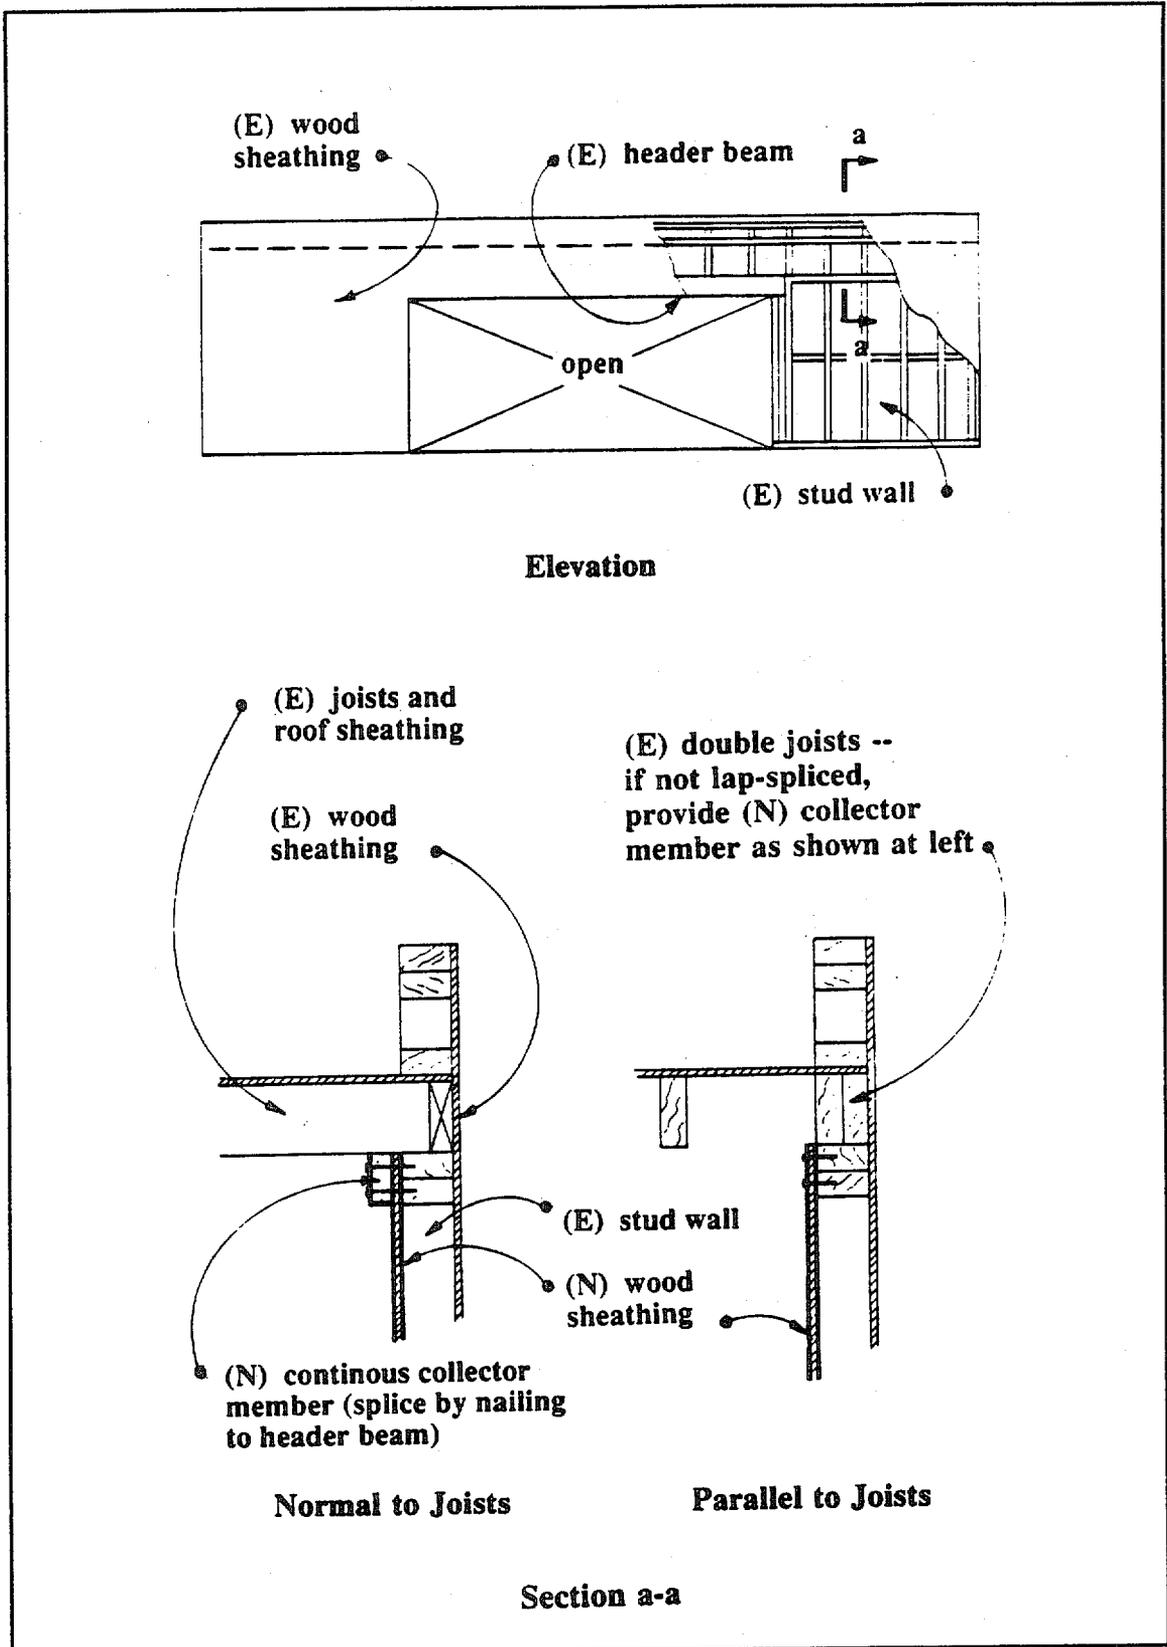


FIGURE 3.7.1.3 Strengthening an existing wood stud shear wall with a large opening.

3.7.1.4 Strengthening Techniques for Inadequate Out-of-Plane Anchorage

Techniques. Deficient out-of-plane anchorage capacity of wood diaphragms connected to concrete or masonry walls with wood ledgers can be improved by:

1. Increasing the capacity of the connection by providing steel straps connected to the wall (using drilled and grouted bolts or through bolts for masonry walls) and bolted or lagged to the diaphragm or roof or floor joists (Figures 3.7.1.4a, b, and c).
2. Increasing the capacity of the connections by providing a steel anchor to connect the roof or floor joists to the walls (Figure 3.7.1.4d).
3. Increasing the redundancy of the connection by providing continuity ties into the diaphragm (Figure 3.7.1.4a-d).

Relative Merits. An important condition to be addressed in retrofitting any existing heavy walled structure with a wood diaphragm is the anchorage of the walls for out-of-plane forces. Prior to the mid-1970s, it was common construction practice to bolt a 3x ledger to a concrete or masonry wall, install metal joist hangers to the ledger, drop in 2x joists, and sheath with plywood. The plywood that lapped the ledger would be nailed into the ledger providing both in-plane and out-of-plane shear transfer. The 1971 San Fernando earthquake caused many of these connections to fail. Out-of-plane forces stressed the ledgers in their weak cross-grain axis and caused many of them to split, allowing the walls to fall out and the roof to fall in. When retrofitting a masonry or concrete structure, this condition should be remedied by providing a positive connection between the concrete or masonry wall and wood diaphragm. Techniques 1 and 2 are, in general, equally cost-effective. In addition to correcting the ledger concerns, continuity ties need to be provided between diaphragm chords in order to distribute the anchorage forces well into the diaphragm. Joist hangers and glulam connections frequently have no tensile capacity, but this tensile capacity can be provided by installing tie rods bolted to adjacent joist or glulam framing (Figure 3.7.1.4e). These continuity ties provide a necessary redundancy in the connection of heavy walled structures to timber diaphragms.

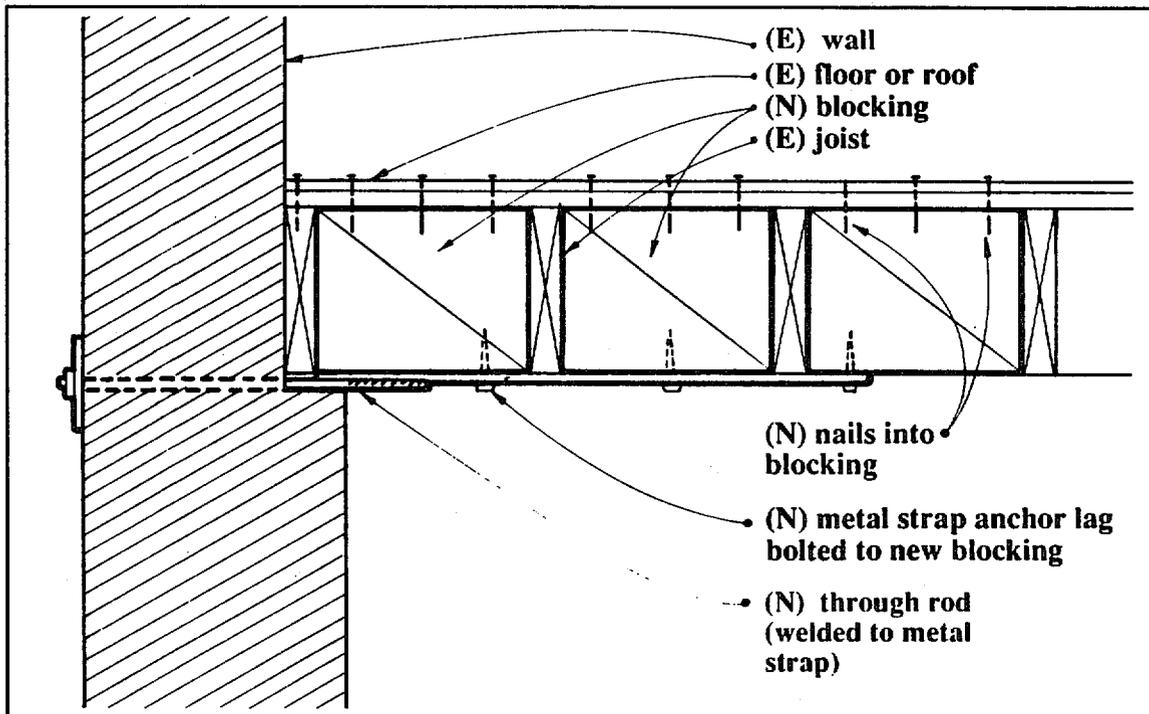


FIGURE 3.7.1.4a Strengthening out-of-plane connections of a wood diaphragm.

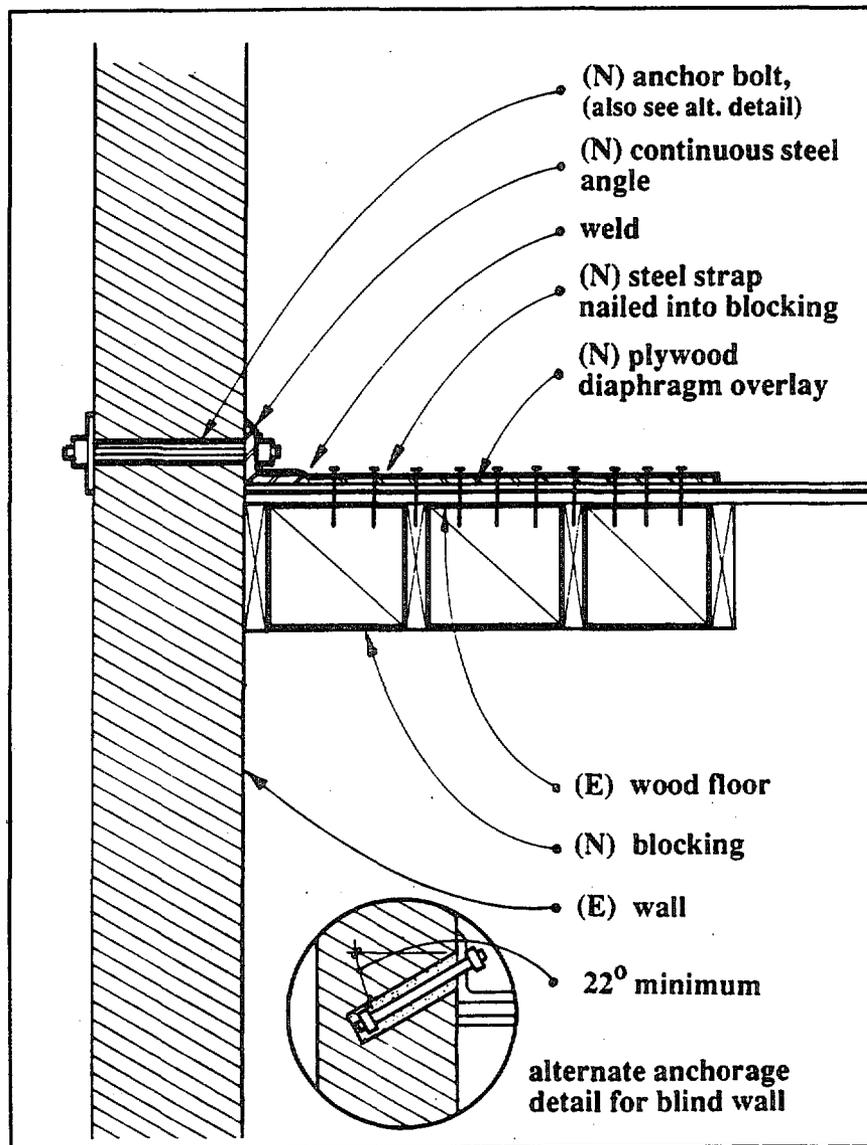


FIGURE 3.7.1.4b Strengthening out-of-plane connections of a wood diaphragm.

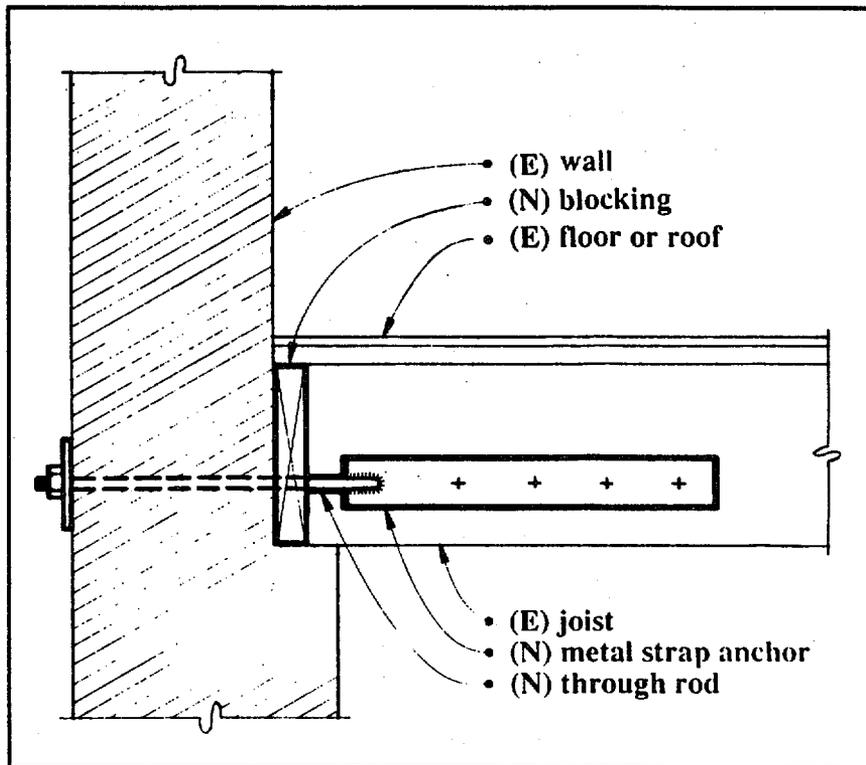


FIGURE 3.7.1.4c Strengthening out-of-plane connections of a wood diaphragm.

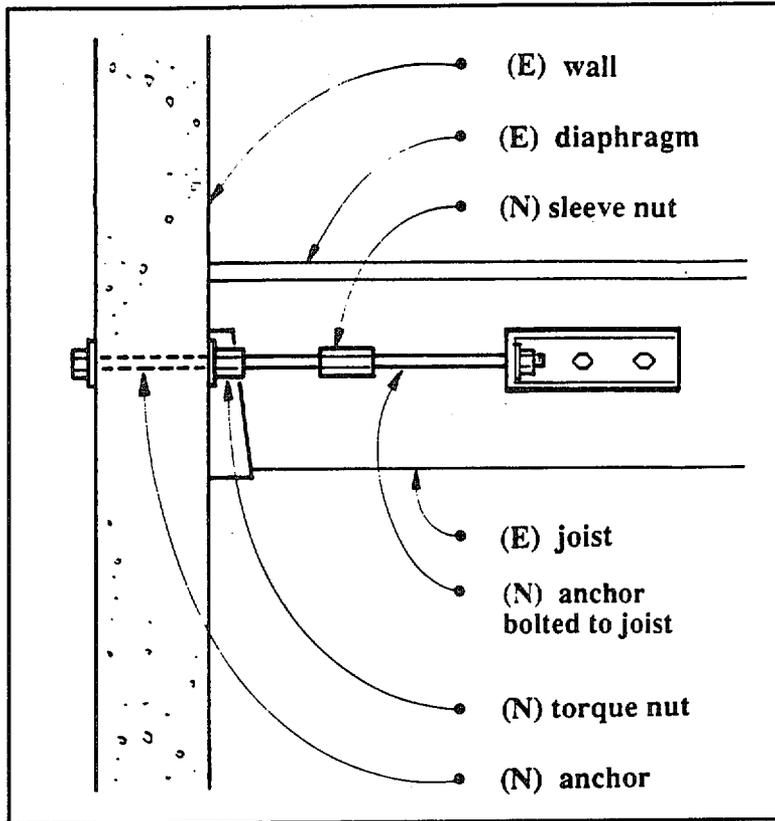


FIGURE 3.7.1.4d Strengthening out-of-plane connections of a wood diaphragm.

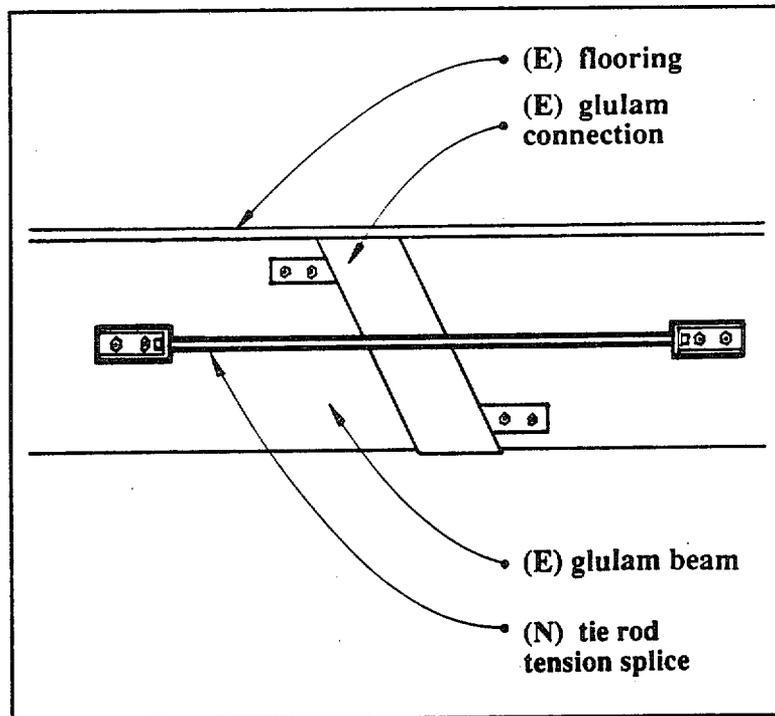


FIGURE 3.7.1.4e Strengthening tensile capacity of an existing glulam beam connection.

3.7.1.5 Strengthening Techniques for Interfloor Tensile Capacity

Techniques. Deficient tensile capacity of the connections of wood stud shear walls through diaphragms can be improved by:

1. Increasing the tensile capacity of the connections at the edge of the shear walls by providing metal connectors.
2. Reducing the overturning moments by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.

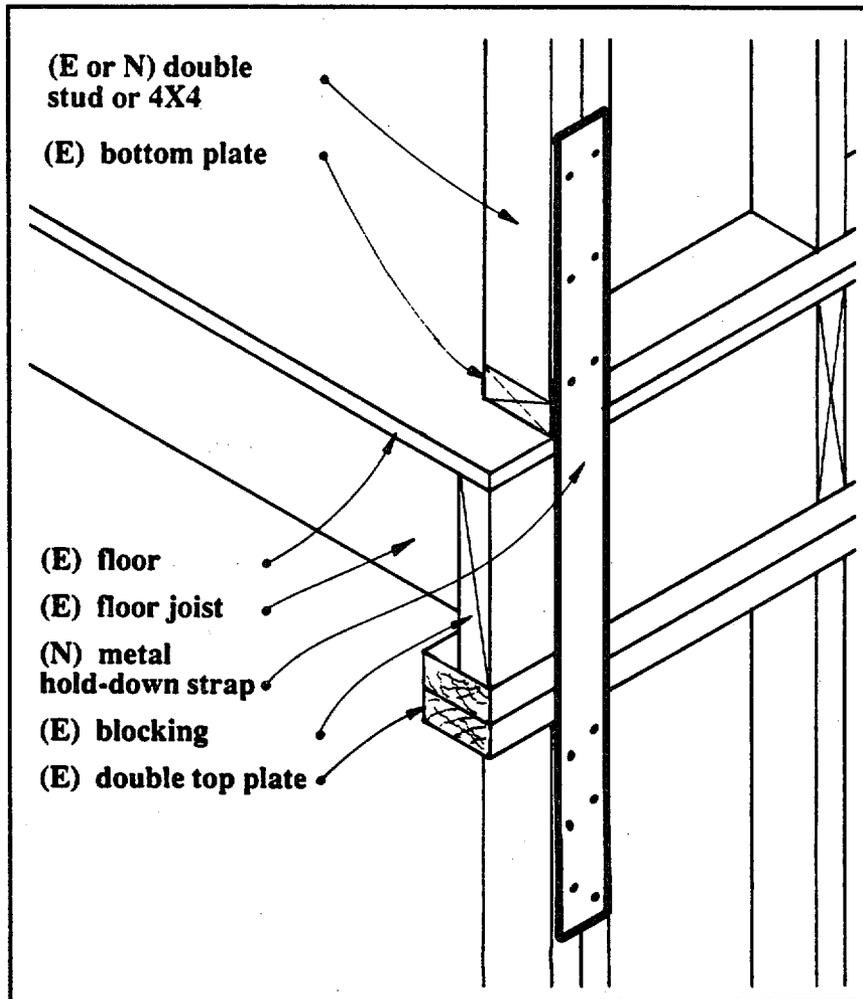


FIGURE 3.7.1.5a Strengthening the connection between shear walls using a metal strap.

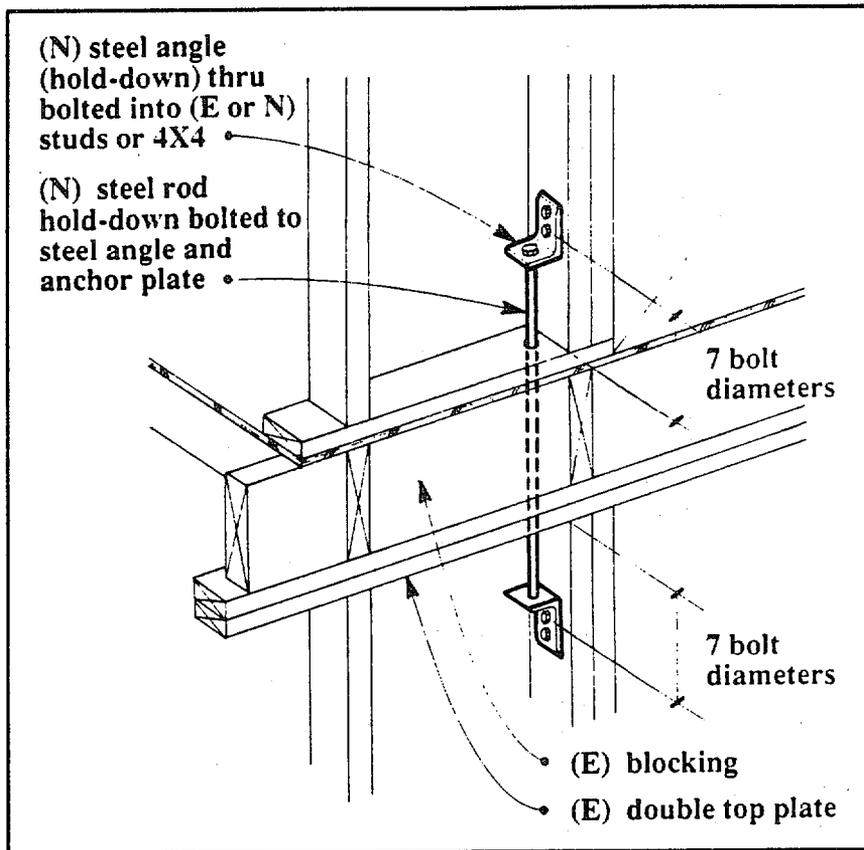


FIGURE 3.7.1.5b Strengthening the connection between shear walls using a hold-down.

Relative Merits. Typical wood stud framing has minimal capacity to transfer uplift forces from one shear wall to the shear wall below. At exterior walls, plywood sheathing generally is provided with a horizontal joint below the diaphragm to provide for "settling" shrinkage of the framing. Hence, minimal resistance to transfer uplift forces is provided unless continuity in the sheathing is provided by nailing top and bottom pieces to a common member (e.g., horizontal blocking or fascia as shown in Figure 3.5.1.3). The only resistance to uplift loads at exterior or interior shear walls may be the withdrawal capacity of the nails.

Metal straps or tie rods that tie the shear wall edge framing between floors (Figure 3.7.1.5c) are an economical approach to providing the prescribed tensile capacity. The wall finishes would be removed, a hole drilled or cut in the diaphragm or wall plates, and the connectors installed. Plywood shear walls should be adequately edge nailed to the double studs that are connected with the metal straps. For light timber structures, the metal straps may be of sheet metal and the sheathing can be nailed through the straps. When the straps are required to be of greater thickness, they may be recessed and drilled for nailing of the sheathing or, alternatively, the straps may be placed on the outside of the sheathing. See Figure 3.5.1.3 for typical splicing of sheathing and development of double top plates as chord or collector members. Figures 3.7.1.5a and b present two connection details where the shear wall on the upper floor does not align with the shear wall on a lower floor.

Technique 2 would be a viable alternative only if it is being considered to correct other component deficiencies (e.g., inadequate shear capacity in the existing walls).

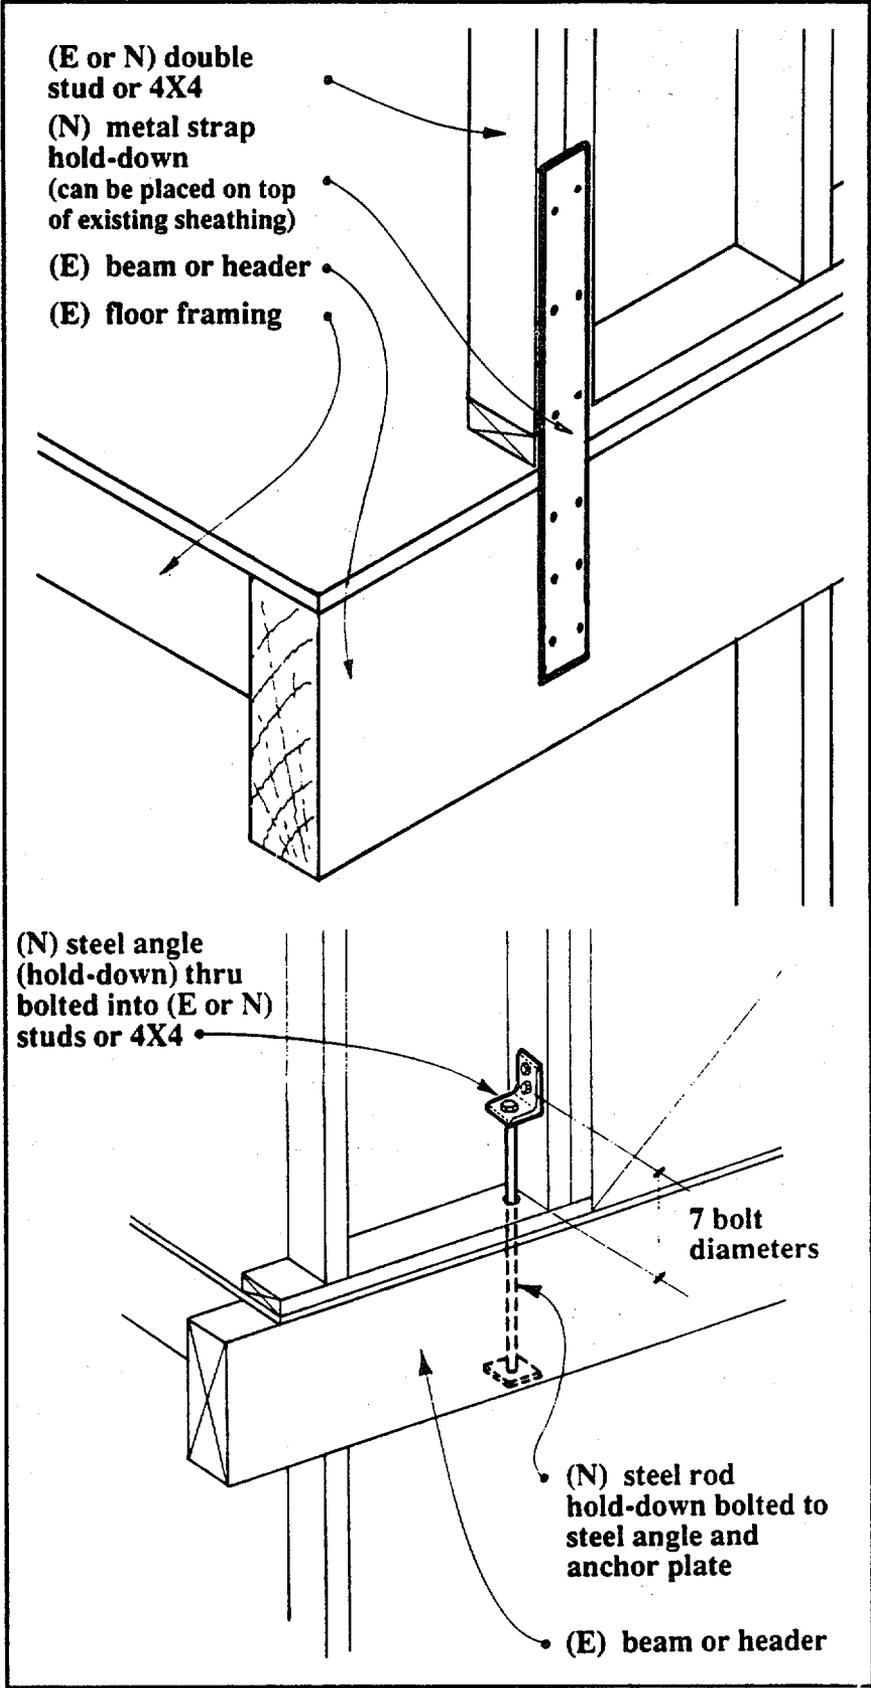


FIGURE 3.7.1.5c Strengthening shear wall uplift capacity at a discontinuity.

3.7.2 CONNECTIONS OF CONCRETE DIAPHRAGMS

3.7.2.1 Deficiencies

The principal deficiencies of the connections of concrete diaphragms to vertical-resisting elements such as shear walls or braced frames are:

- Inadequate in-plane shear transfer capacity and
- Inadequate anchorage capacity for out-of-plane forces in the connecting walls.

3.7.2.2 Strengthening Techniques for In-Plane Shear Wall Connections

Techniques. Deficient in-plane shear transfer capacity of a diaphragm to an interior shear wall or braced frame can be improved by:

1. Reducing the local stresses at the diaphragm-to-wall interface by providing collector members or drag struts under the diaphragm and connecting them to the diaphragm and the wall.
2. Increasing the capacity of the existing diaphragm-to-wall connection by providing additional dowels grouted into drilled holes.
3. Reducing the shear stresses in the existing connection by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.

Relative Merits. Inadequate in-plane shear capacity of connections between concrete diaphragms and vertical-resisting elements usually occurs where large openings in the diaphragm exist adjacent to the shear wall (e.g., at stair wells) or where the shear force distributed to interior shear walls or braced frames exceeds the capacity of the connection to the diaphragm. If the walls and the diaphragm have sufficient capacity to resist the prescribed loads, the most cost-effective alternative to increase the connection capacity is likely to be providing additional dowels grouted into drilled holes (Technique 2). If the required connection capacity cannot be developed within the length of the shear wall, the addition of collector members (Technique 1) as indicated in Figure 3.7.2.2 is likely to be the most cost-effective alternative.

As previously discussed, reducing the forces in the deficient connection by providing supplemental vertical-resisting elements (Technique 3) is not likely to be the most cost-effective alternative (due to the probable need for new foundations and drag struts) unless it is being considered to correct other component deficiencies.

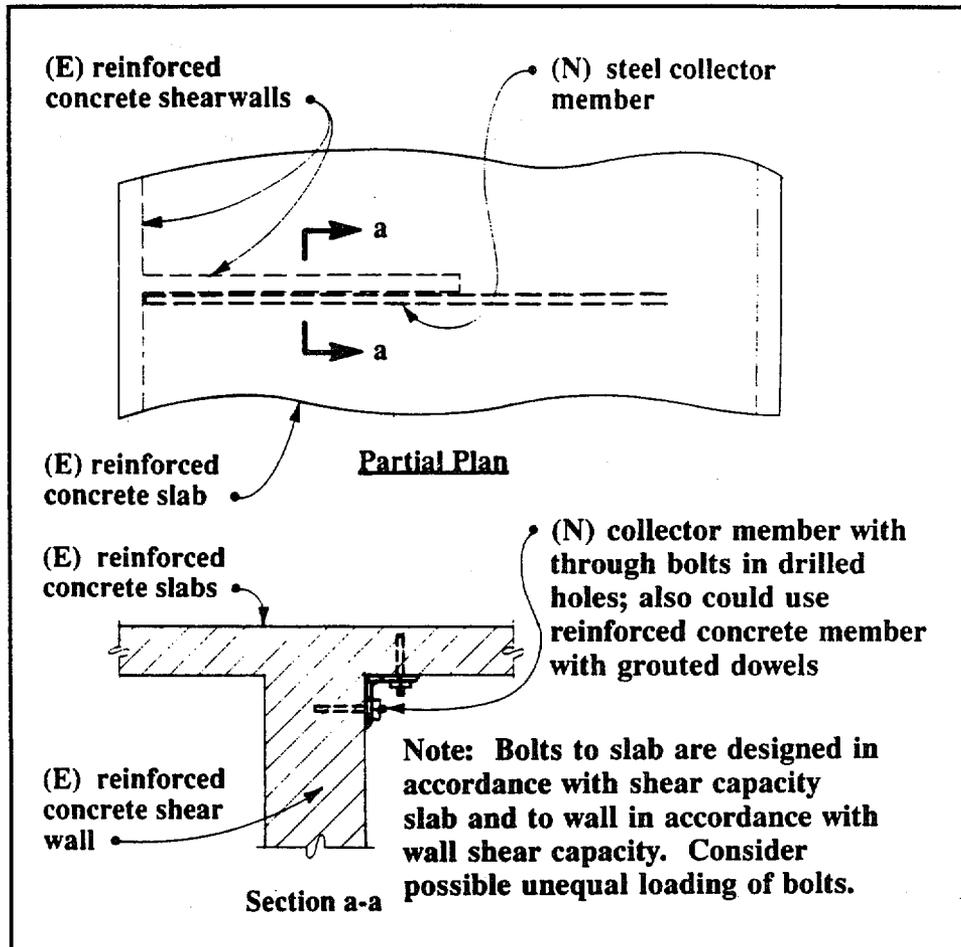


FIGURE 3.7.2.2 Use of a collector member to improve shear transfer from a concrete diaphragm.

3.7.2.3 Strengthening Techniques for Out-of-Plane Capacity

Techniques. Deficient out-of-plane anchorage capacity of connections of concrete diaphragms to concrete or masonry walls can be improved using one or both of the following techniques:

1. Increasing the capacity of the connection by providing additional dowels grouted into drilled holes.
2. Increasing the capacity of the connection by providing a new member above or below the slab connected to the slab with drilled and grouted bolts similar to that indicated in Figure 3.5.4.3 for providing a new diaphragm chord.

Relative Merits. The most cost-effective alternative generally is to provide additional dowels grouted into drilled holes (Technique 1). The holes are most efficiently drilled from the exterior through the wall and into the slab. Access to the exterior face of the wall is obviously required. When the exterior face is not accessible (e.g., when it abuts an adjacent building), providing a new member connected to the existing wall and slab (Technique 2) is likely to be preferred.

3.7.3 CONNECTIONS OF POURED GYPSUM DIAPHRAGMS

3.7.3.1 Deficiencies

The principal deficiencies of poured gypsum diaphragms are similar to those for concrete diaphragms:

- Inadequate in-plane shear transfer capacity and
- Inadequate anchorage capacity for out-of-plane forces in the connecting walls.

3.7.3.2 Strengthening Techniques

Techniques. If the gypsum diaphragm is in direct contact with the shear wall, it will be possible to improve the in-plane shear transfer by providing new dowels from the diaphragm into the shear wall similar to the details indicated in Figures 3.5.2.2 and 3.5.2.3. Alternative strengthening techniques for the deficiencies also include removal of the gypsum diaphragm and replacement with steel decking or the addition of a new horizontal bracing system designed to resist all of the seismic forces.

Relative Merits. As indicated in Sec. 3.5.3.2, allowable structural stresses for gypsum are very low and the additional strengthening that can be achieved is very limited. Further, the typical framing details (e.g., steel joist, bulb tee, and insulation board) are such that it is difficult to make direct and effective connections to the gypsum slab. For these reasons, the techniques involving removal and replacement or a new horizontal bracing system are likely to be the most cost-effective solutions except when the existing diaphragm is only marginally deficient.

3.7.4 CONNECTIONS OF PRECAST CONCRETE DIAPHRAGMS

3.7.4.1 Deficiencies

The principal deficiencies of the connections of precast concrete diaphragms to the vertical-resisting elements are:

- Inadequate in-plane shear transfer capacity and
- Inadequate anchorage capacity at the exterior walls for out-of-plane forces.

3.7.4.2 Strengthening Techniques for Precast Concrete Diaphragm Connections

Techniques. Deficient shear transfer or anchorage capacity of a connection of a precast concrete diaphragm to a concrete or masonry wall or a steel frame can be improved by:

1. Increasing the capacity of the connection by providing additional welded inserts or dowels placed in drilled or grouted holes.
2. Increasing the capacity of the connection by providing a reinforced concrete overlay that is bonded to the precast units and anchored to the wall with additional dowels placed in drilled and grouted holes (Figure 3.5.2.2).
3. Reducing the forces at the connection by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.

Relative Merits. Precast concrete plank or tee floors that have inadequate connection capacity for transferring in-plane shear to vertical elements such as shear walls or braced frames can be strengthened by drilling intermittent holes in the precast units at the vertical element. When the floors are supported on steel framing, welded inserts (or studs) can be added and the holes grouted (Technique 1). When the floors are supported on concrete or masonry units, dowels can be inserted and grouted into the drilled holes. If the diaphragm contains prestressing strands, extreme care must be taken prior to drilling to avoid cutting the strands. A more costly alternative is to provide a reinforced concrete overlay that is bonded to the precast units and additional dowels grouted into holes drilled into the wall (Technique 2). This will require the stripping of the existing floor surface and raising the floor level by 2 to 3 inches, which will necessitate adjusting of nonstructural elements to the new floor elevation (e.g., stairs, doors, electrical outlets, etc.).

As previously discussed, reducing the shear forces in the deficient connection by providing supplemental vertical-resisting elements (Technique 3) is not likely to be the most cost-effective alternative (due to the probable need of new foundations and drag struts) unless it is being considered to correct other component deficiencies. This alternative also is not effective in reducing the out-of-plane forces unless the new vertical-resisting elements can be constructed so as to form effective buttresses for the existing walls.

3.7.5 CONNECTIONS OF STEEL DECK DIAPHRAGMS WITHOUT CONCRETE FILL

3.7.5.1 Deficiencies

For steel deck diaphragms without concrete fill, the principal deficiencies of their connections to the vertical-resisting elements such as shear walls, braced frames, or moment frames are:

- Inadequate in-plane shear capacity and
- Inadequate anchorage capacity for out-of-plane forces in walls.

3.7.5.2 Strengthening Techniques for Steel Deck Connections

Techniques. Deficient shear transfer or anchorage capacity of a connection of a steel deck diaphragm to a shear wall, braced frame, or moment frame can be improved by:

1. Increasing the capacity of the connection by providing additional welding at the vertical element.
2. Increasing the capacity of the connection by providing additional anchor bolts.
3. Increasing the capacity of the connection by providing concrete fill over the deck with dowels grouted into holes drilled into the wall.
4. Increasing the capacity of the connection by providing new steel members (Figure 3.7.5.2a) to effect a direct transfer of diaphragm shears to a shear wall.
5. Reducing the local stresses by providing additional vertical-resisting elements such as shear walls, braced frames, or moment frames as discussed in Sec. 3.4.

Relative Merits. Steel decking typically is supported by metal framing, by steel angle, or by channel ledgers bolted to concrete or masonry walls. If the deficiency is in the connection and not the diaphragm, the most cost-effective alternative is to increase the welding of the decking to the steel member or ledger to at least the capacity of the diaphragm. If supported by a ledger, the capacity of the ledger connections to the concrete or masonry wall also may have to be improved; this is most effectively done by providing additional bolts in drilled and grouted holes.

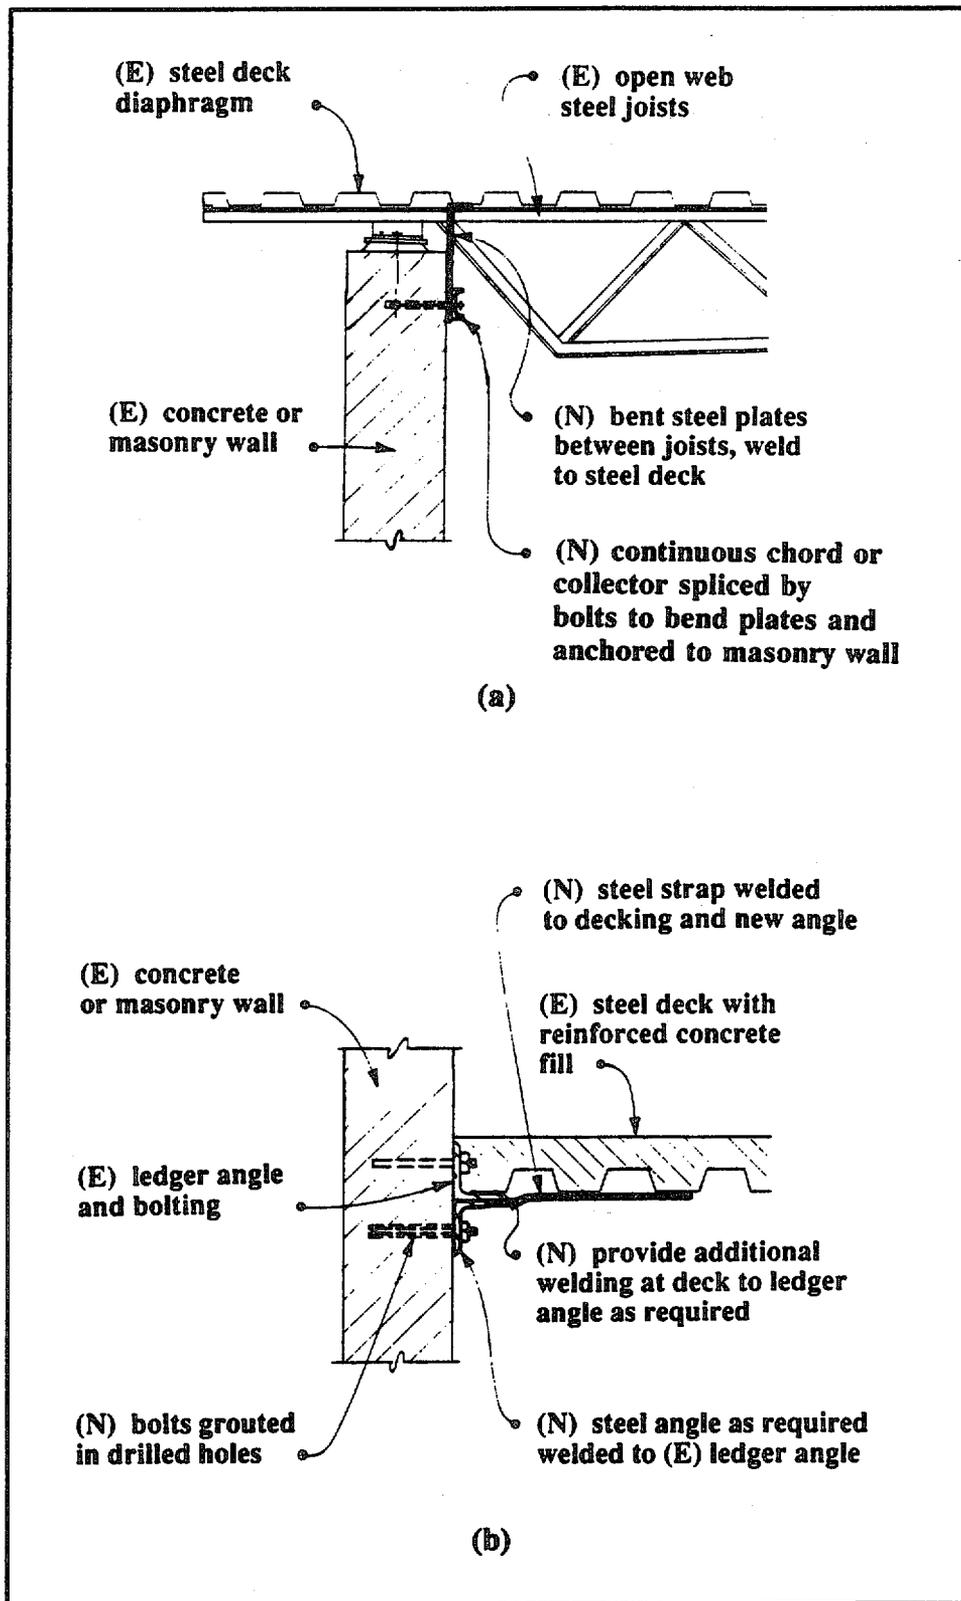


FIGURE 3.7.5.2 Strengthening the connection of a steel deck diaphragm to a concrete or masonry wall.

If the decking is being reinforced by filling with reinforced concrete, the most effective alternative will be to drill and grout dowels into the adjacent concrete or masonry wall and lap with reinforcing steel in the new slab. In some cases it may be feasible to use the existing steel support member at the wall as a collector as shown in Figure 3.7.5.2b. In this figure the capacity of the existing decking has been increased by additional welding to the ledger angle and the addition of a reinforced concrete fill. Reinforcement dowels are welded to the angle that functions as a collector member and the shear forces are transferred to the wall by the existing and new anchor bolts, as required.

Steel deck roof diaphragms may be supported on open web steel joists that rest on steel bearing plates at the top of concrete or masonry walls. In existing buildings that have not been properly designed for resisting lateral loads, there may not be a direct path for the transfer of diaphragm shears to the vertical walls, particularly when the decking span is parallel to the wall. As shown in Figure 3.7.5.2a, new steel elements (i.e., bent plates) can be provided between the joists for direct connection to the decking. A continuous member also can be provided to function as a chord or collector member. As noted above, strengthening a steel deck diaphragm connection to the vertical-resisting elements is effective only if the body of the diaphragm has adequate capacity to resist the design lateral forces. If the diaphragm does not have adequate capacity it needs to be strengthened as discussed in Sec. 3.5.5.

As previously discussed, reducing the shear transfer forces in the deficient connection by providing supplemental vertical-resisting elements (Technique 4) is not likely to be the most cost-effective alternative (due to the probable need of new foundations and drag struts) unless it is being considered to correct other component deficiencies. Further, in order to reduce out-of-plane wall forces, the new vertical elements would be required to act as buttresses to the existing walls.

3.7.6 CONNECTIONS OF STEEL DECK DIAPHRAGMS WITH CONCRETE FILL

3.7.6.1 Deficiency

The principal deficiency of a connection of a steel deck diaphragm with concrete fill to the vertical-resisting elements such as shear walls, braced frames, or moment frames is the in-plane shear capacity or anchorage capacity for out-of-plane forces in walls.

3.7.6.2 Strengthening Techniques for Steel Deck Connections

Techniques. Deficient shear capacity or anchorage of a connection of a steel deck diaphragm to a shear wall, braced frame, or moment frame can be improved by:

1. Increasing the shear capacity by drilling holes through the concrete fill, and providing additional shear studs welded to the vertical elements through the decking (Figure 3.5.5.2a).
2. Increasing the capacity of the connection by providing additional anchor bolts (drilled and grouted) connecting the steel support to the wall.
3. Increasing the capacity of the connection by placing dowels between the existing wall and diaphragm slab.
4. Reducing the local stresses by providing additional vertical-resisting elements such as shear walls, braced frames, or moment frames as discussed in Sec. 3.4.

Relative Merits. If the deficiency is in both the connection of the diaphragm to the ledger and the ledger to the shear wall, the most cost-effective alternative may be to provide a direct force transfer from the slab to the wall by installing dowels (Technique 3). This is accomplished by removing the concrete to expose the diaphragm slab reinforcement, drilling holes in the wall, laying in dowels, and grouting and reconstructing the diaphragm slab. If the deficiency is in the slab-to-supporting steel member connection, Technique 1 is preferred. If the deficiency is in the steel ledger to the wall connection, Technique 2 is preferred. Figure 3.7.5.2b illustrates a technique for

strengthening a steel deck diaphragm connection to a concrete or masonry wall. In this figure, it is assumed that the existing decking with concrete fill has adequate capacity for the design loads, but the connection to the wall is deficient for in-plane shear and out-of-plane anchorage forces. In the figure, the in-plane shear is assumed to be transferred from the decking to the existing ledger angle with additional welding (if required). The new angles, bolted to the wall and welded to the ledger angle, provide the necessary additional shear transfer capacity. The new steel straps, welded to the new angles and to the underside of the decking, provide the additional out-of-plane anchorage capacity. When the new dowels or anchor bolts are to be attached to existing thin concrete walls (e.g., precast tees or other thin ribbed concrete sections), through bolts or threaded rods are required to provide adequate anchorage or doweling to the diaphragm. If the vertical-resisting elements are steel braced frames or steel moment frames, the increase in connection capacity obviously would be achieved through additional welding and supplemental reinforcing members as required.

As previously discussed, reducing the forces in the deficient connection by providing supplemental vertical-resisting elements (Technique 4) is unlikely to be the most cost-effective alternative (due to the probable need of new foundations and drag struts) unless it is being considered to correct other component deficiencies. Further, in order to reduce out-of-plane wall forces, the new vertical elements would be required to act as buttresses to the existing walls.

3.7.7 CONNECTIONS OF HORIZONTAL STEEL BRACING

3.7.7.1 Deficiencies

The two primary deficiencies in the connection capacity of horizontal steel braces to vertical-resisting elements such as shear walls or braced frames are:

- Inadequate in-plane shear transfer capacity and
- Inadequate anchorage capacity when supporting concrete or masonry walls for out-of-plane forces.

3.7.7.2 Strengthening Techniques for In-Plane Shear Transfer Capacity

Techniques. Deficient shear transfer capacity of connections of horizontal steel bracing systems to shear walls or braced frames can be improved by:

1. Increasing the capacity by providing larger or more bolts or by welding.
2. Reducing the stresses by providing supplemental vertical-resisting elements such as shear walls or braced frames as discussed in Sec. 3.4.

Relative Merits. The first alternative of providing larger or more bolts between the horizontal brace members and the concrete or masonry shear wall or providing additional welding when connecting to a steel braced frame generally will be the most cost-effective. Collectors along the wall may be required to distribute the concentrated brace shear along the wall to allow for adequate bolt spacing.

As previously discussed, reducing the forces in the deficient connection by providing supplemental vertical-resisting elements (Technique 2) is not likely to be the most cost-effective alternative unless it is being considered to correct other component deficiencies.

3.7.7.3 Strengthening Technique for Out-Of-Plane Anchorage

Technique. Deficient out-of-plane anchorage capacity of connections between horizontal steel bracing systems and concrete or masonry shear walls can be improved by increasing the capacity of the connection by providing additional anchor bolts grouted in drilled holes and by providing more bolts or welding to the bracing members.

3.8 VERTICAL ELEMENT TO FOUNDATION CONNECTIONS

Seismic inertial forces originate in all elements of buildings and are delivered through structural connections to horizontal diaphragms. The diaphragms distribute these forces to vertical elements that transfer the forces to the foundation and the foundation transfers the forces into the ground.

An adequate connection between the vertical elements and the foundation is essential to the satisfactory performance of a strengthened structure. The connections must be capable of transferring the in-plane lateral inertia forces from the vertical elements to the foundations and of providing adequate capacity for resisting uplift forces caused by overturning moments.

3.8.1 CONNECTIONS OF WOOD STUD SHEAR WALLS

3.8.1.1 Deficiencies

The principal deficiencies in the connection of wood stud shear walls to their foundations are:

- Inadequate shear capacity of the anchorage,
- Inadequate shear capacity of cripple stud walls, and
- Inadequate uplift capacity.

3.8.1.2 Strengthening Techniques for Inadequate Anchorage Shear Capacity

Techniques. Deficient shear capacity of the connection of a wood stud wall to its foundation can be improved using one or both of the following alternatives:

1. Increasing the shear capacity by providing new or additional anchor bolts between the sill plate and the foundation (Figure 3.8.1.2a).
2. Increasing the shear capacity by providing steel angles or plates with anchor bolts connecting them to the foundation and bolts or lag screws connecting them to the sill plate or wall (Figure 3.8.1.2b).

Relative Merits. Lack of adequate anchorage of the walls to the foundation can cause poor seismic performance of wood frame structures. Although most older wood frame structures were not designed for seismic loads, they have performed extremely well in past earthquakes provided they were bolted to their foundation. This good performance may be attributed to their light weight, ductile connections, and redundant load paths provided they are bolted to the foundations.

If the walls are not bolted to the foundation it is relatively simple to provide adequate anchorage. Providing bolts through the sill plates in the foundation (Technique 1) is typically the best approach. If a crawl space exists, the bolts can be installed easily at regular intervals. If the walls sit directly on the foundation without floor joists (e.g., a slab on grade), access through the wall covering (e.g., gypsum board) is required and the wall surface subsequently must be patched. If the crawl space is not deep enough for vertical holes to be drilled through the sill plate, the addition of connection plates or angles (Technique 2) may be a more viable alternative.

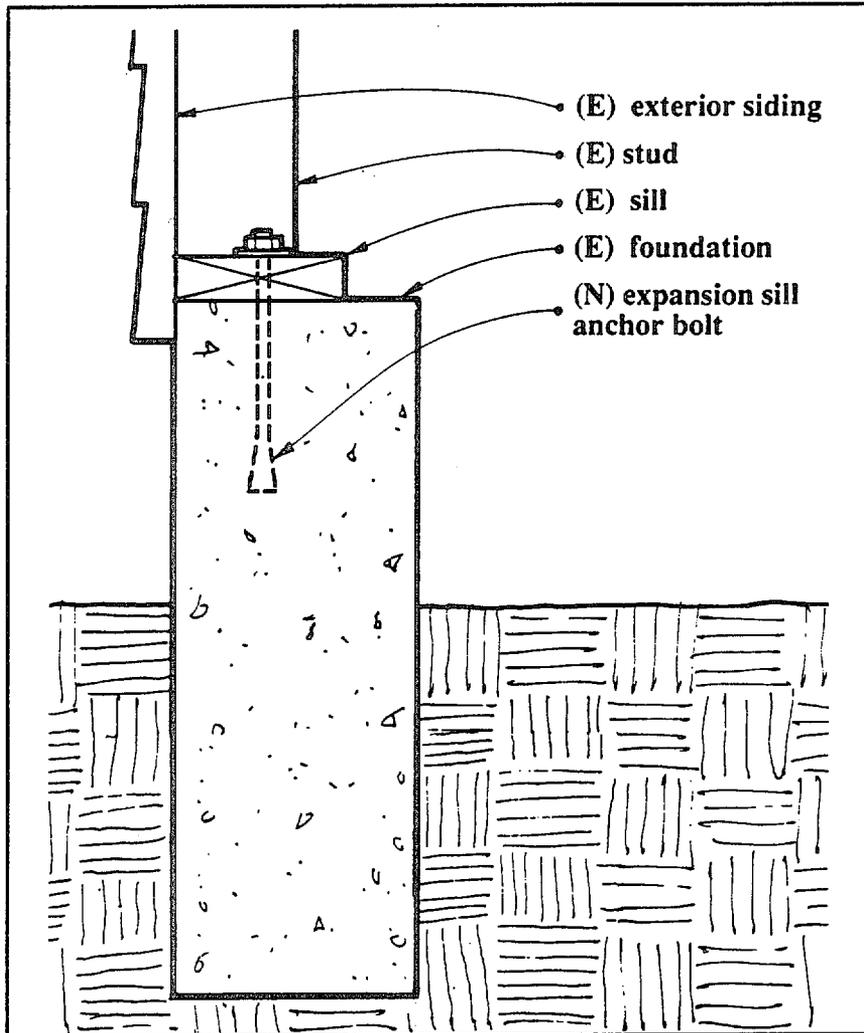


FIGURE 3.8.1.2a Providing wall to foundation anchors.

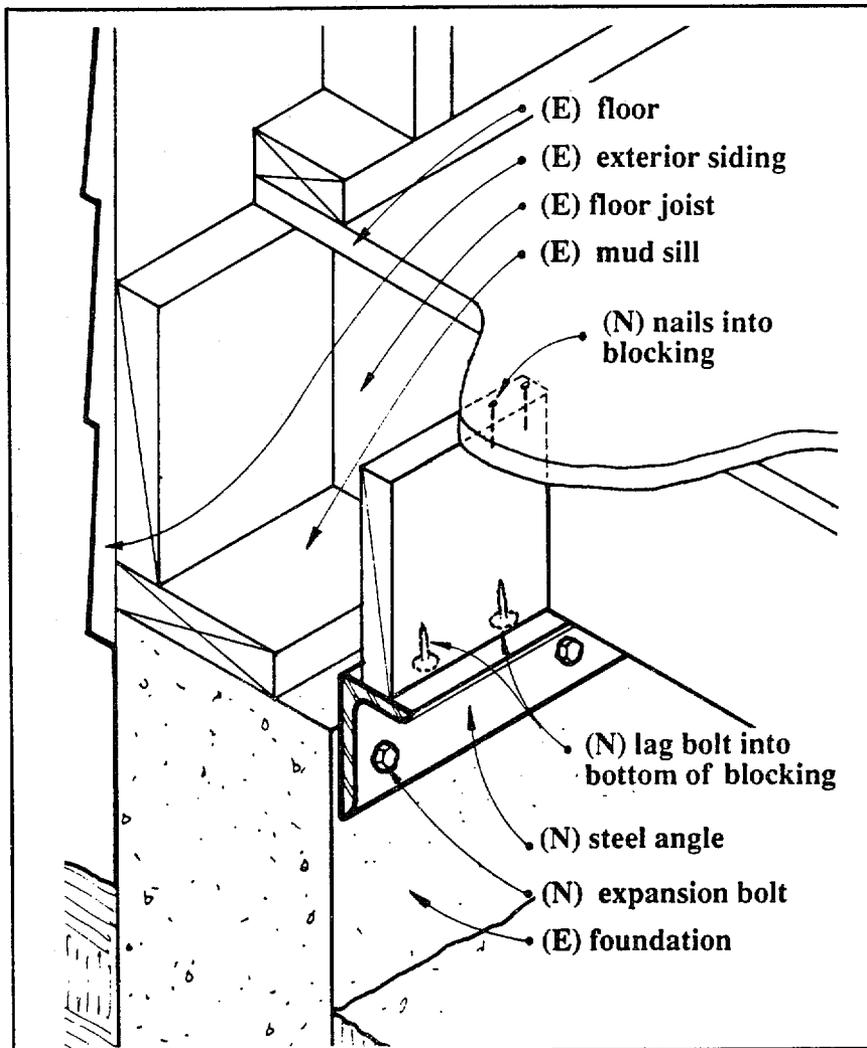


FIGURE 3.8.1.2b Alternate detail for providing wall to foundation anchors.

3.8.1.3 Strengthening Techniques for Cripple Stud Walls

Techniques. Weak cripple stud walls also are a significant reason for damage to wood frame structures. Cripple stud perimeter walls are a frequent construction technique used to support the first floor of a wood structure a short distance above the ground on sloping sites or to provide a crawl space under the floor framing. The exterior face may be finished with wood or metal siding or plaster while the studs on the inside usually remain exposed.

Strengthening of the cripple stud walls is relatively simple. Plywood sheathing is nailed to the cripple studs (usually on the inside). The top edge of the plywood is nailed into the floor framing and the bottom edge is nailed into the sill plate (Figure 3.8.1.3). The sill plate also must be anchored to the foundation.

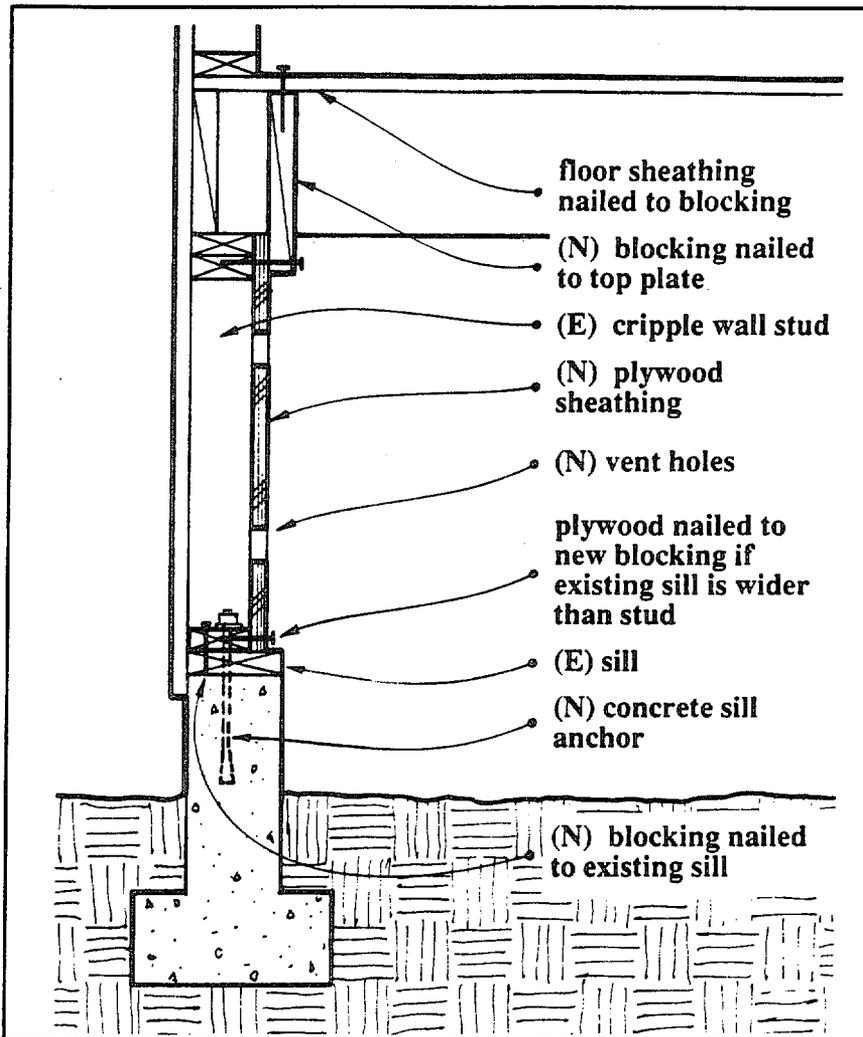


FIGURE 3.8.13 Strengthening a cripple stud wall.

3.8.14 Strengthening Techniques for Uplift Capacity

Deficient uplift capacity of the connections of wood shear walls to their foundations can be improved by:

1. Increasing the capacity by providing steel hold-downs bolted to the wall and anchored to the concrete (Figure 3.8.14).
2. Reducing the uplift requirement by providing supplemental shear walls (as discussed in Sec. 3.4).

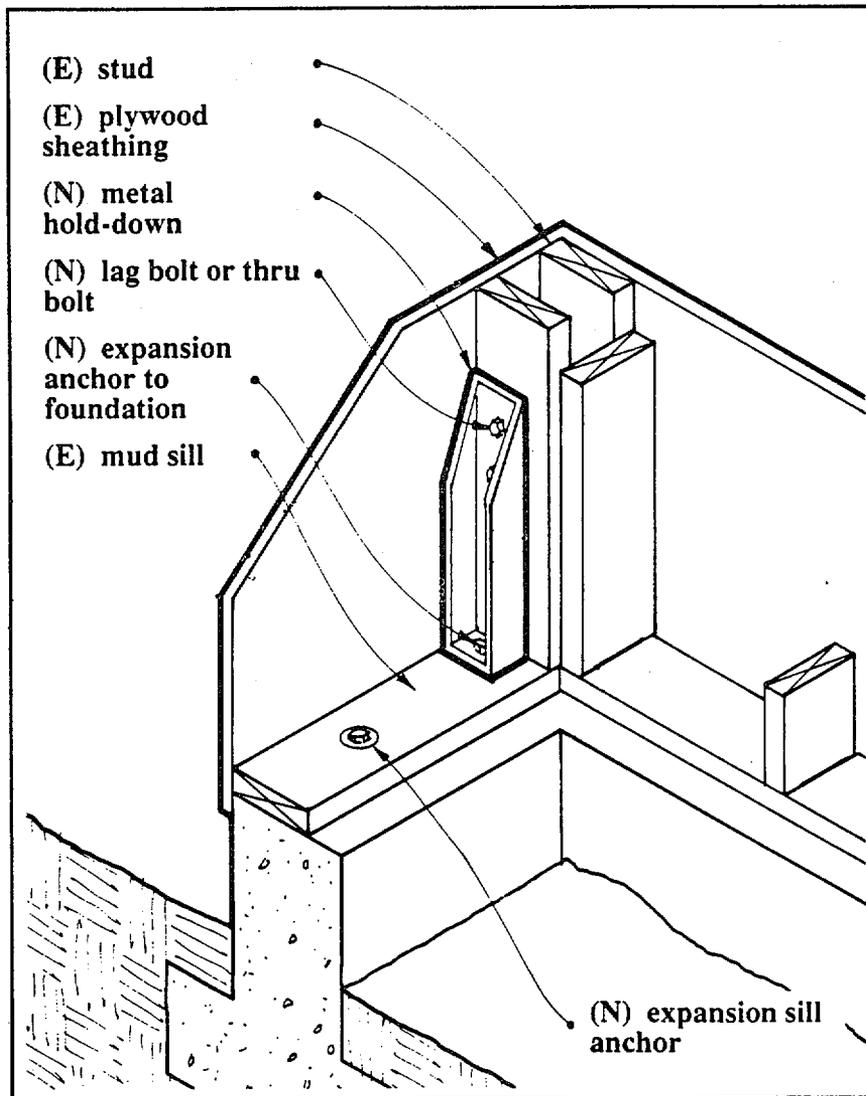


FIGURE 3.8.1.4 Strengthening the uplift capacity of wall to foundation connection.

3.8.2 CONNECTIONS OF METAL STUD SHEAR WALLS

The connections of metal stud walls to the foundations can be strengthened in the same way as discussed above for wood stud walls (e.g., by adding welding, bolting, and screws where appropriate).

3.8.3 CONNECTIONS OF PRECAST CONCRETE SHEAR WALLS

3.8.3.1 Deficiencies


The principal deficiencies of the connections of precast concrete shear walls to the foundation are:

- Inadequate capacity to resist in-plane or out-of-plane shear forces and
- Inadequate hold-down capacity to resist seismic overturning forces.

3.8.3.2 Strengthening Techniques for Shear Capacity

Techniques. Deficient shear capacity of the connections of precast concrete shear walls to the foundation can be improved by:

1. Increasing the capacity of the connection by providing a new steel member connecting the wall to the foundation or the ground floor slab (Figure 3.8.3.2).
2. Increasing the capacity of the connection by adding a new thickness of concrete (either cast-in-place or shotcrete) placed against the precast wall doweling into the existing foundation or ground floor slab.

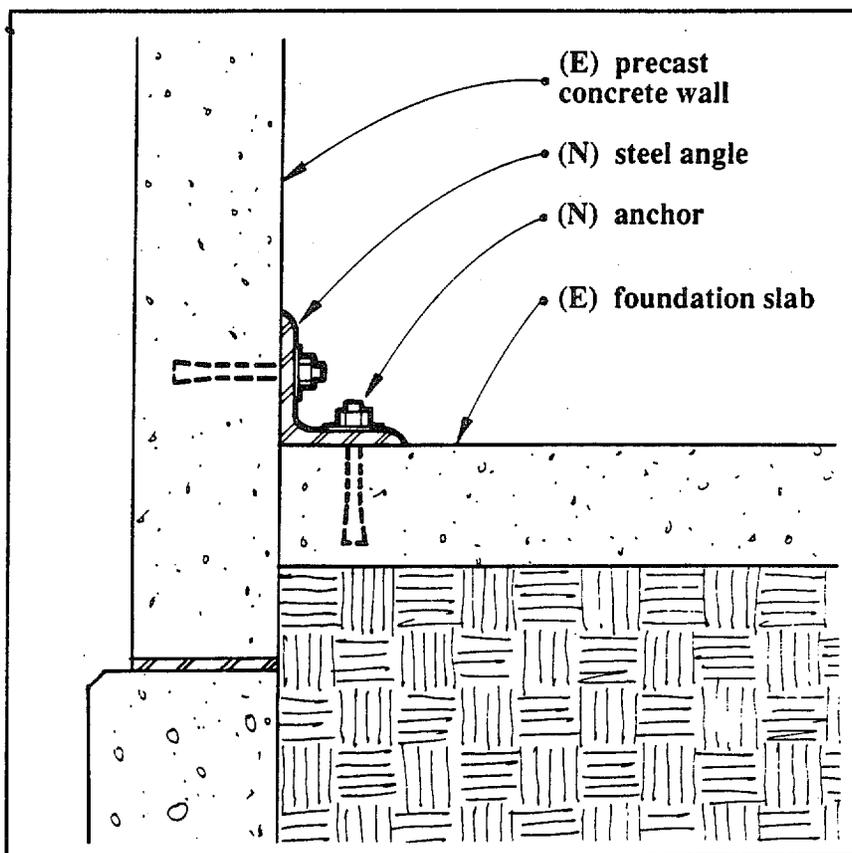

Relative Merits. Early precast concrete wall construction frequently had minimal lateral connection capacity at the foundation. These connections usually can be strengthened most economically by attaching a steel member to the wall and the floor slab or foundation with drilled and grouted anchors or expansion bolts (Technique 1). Care must be taken to place bolts and/or dowels a sufficient distance away from concrete edges to prevent spalling under load. A more costly alternative involves thickening the precast wall with a minimum of 4 inches of new reinforced concrete, either cast-in-place or shotcrete. The new concrete must be anchored to the precast wall and must extend above the base of the wall high enough to develop new dowels drilled into the foundation. The existing foundation then must be checked for the additional load.

FIGURE 3.8.3.2 Strengthening of a precast concrete wall to foundation connection.

3.8.3.3 Strengthening Techniques for Hold-down Capacity

Techniques. Deficient hold-down capacity of the connections of precast concrete shear walls to the foundation can be improved by:

1. Increase the hold-down capacity by removing concrete at the edge of the precast unit to expose the reinforcement, provide new drilled and grouted dowels into the foundation, and pour a new concrete pilaster.
2. Reduce the uplift forces by providing supplemental vertical-resisting elements such as shear walls or braced frames as discussed in Sec. 3.4.

Relative Merits. Deficient hold-down capacity of precast units usually will occur when one unit or a part of one unit is required to resist a significant share of the seismic load. If the wall has sufficient bending and shear capacity, then increasing the hold-down capacity using Technique 1 is usually the most cost-effective. When a wall is comprised of a number of solid (i.e., no significant openings) precast panels, the overturning forces generally will be minimal provided there is adequate vertical shear capacity in the connection between the edges of adjacent panels. In this case, the connections must be checked and, if necessary, strengthened as described in Sec. 3.2.2.

Technique 2 usually is a viable approach only if it is being considered to correct other component deficiencies. When excessive uplift forces are due to inadequate vertical shear capacity in the vertical connections between adjacent precast units, strengthening of those connections (see Sec. 3.2.2) will reduce the uplift forces.

3.8.4 CONNECTION OF BRACED FRAMES

3.8.4.1 Deficiencies

The principal deficiencies of the connections of steel braced frames to the foundation are:

- Inadequate shear capacity and
- Inadequate uplift resistance.

3.8.4.2 Strengthening Techniques for Shear Capacity

Techniques. Deficient shear capacity of the connections of steel braced frames to the foundations can be improved by:

1. Increasing the capacity by providing new steel members welded to the braced frame base plates and anchored to the slab or foundation with drilled and grouted anchor bolts.
2. Reducing the shear loads by providing supplemental steel braced frames as discussed in Sec. 3.4.

Relative Merits. The first alternative generally will be the most cost-effective provided the existing slab or foundation can adequately resist the prescribed shear. Steel collectors welded to the existing steel base plates may be necessary to distribute the shear forces into the slab or foundation. If the existing foundation requires strengthening to provide adequate shear capacity, determining the most cost-effective alternative requires comparing the effort necessary to construct a reinforced concrete foundation to the effort and disruption of functional space required to install supplementary shear walls and their associated foundations and collectors.

3.8.4.3 Strengthening Techniques for Uplift Resistance

Techniques. Deficient uplift resistance capacity of the connections of steel braced frames to the foundations can be improved by:

1. Increasing the capacity by providing new steel members welded to the base plate and anchored to the existing foundation.
2. Reducing the uplift loads by providing supplemental steel braced frames as discussed in Sec. 3.4.

Relative Merits. Inadequate uplift resistance capacity of a steel braced frame seldom results just because of deficient connection to the foundation but is typically a concern reflecting the uplift capacity of the foundation itself. If the foundation is the concern, the techniques discussed in Sec. 3.6 can be considered to correct the

problem. If, in fact, the deficiency is the connection, Technique 1 (providing new connecting members) will be the most economical.

3.8.5 CONNECTIONS OF STEEL MOMENT FRAMES

3.8.5.1 Deficiencies

The principal deficiencies of the connection of a moment frame column to the foundation are:

- Inadequate shear capacity,
- Inadequate flexural capacity, and
- Inadequate uplift capacity.

3.8.5.2 Strengthening Techniques for Shear, Flexural, and Uplift Capacity

Techniques. The techniques for strengthening steel moment frame column base connections to improve shear and flexural capacity also will likely improve the uplift capacity. For this reason a combination of the following alternatives may be utilized to correct a deficient column base connection:

1. Increasing the shear capacity by providing steel shear lugs welded to the base plate and embedded in the foundation.
2. Increasing the shear and tensile capacity by installing additional anchor bolts into the foundation.
3. Increasing the shear capacity by embedding the column in a reinforced concrete pedestal that is bonded or embedded into the existing slab or foundation.

Relative Merits. While it may be possible to strengthen the column and to stiffen the base plate against local bending, it usually is not practical to increase the size of the base plate or the number of anchor bolts without removal and replacement of the base plate. The horizontal column shears may be transferred to the column footing by shear lugs between the base plate and the footing and/or shear in the anchor bolts (Technique 1) and to the ground by passive pressure against the side of the footing. If the column base connection is embedded in a monolithic concrete slab, the slab may be considered for distribution of the shear to the ground by means of any additional existing footings that are connected to the slab. If the column is not embedded in the slab, the same affect can be achieved by adding a concrete pedestal (Technique 3). The interference of this pedestal with the function and operations of the area is an obvious drawback.

3.9 ADDING A NEW SUPPLEMENTAL SYSTEM

Consideration of a new lateral-force-resisting system may be a cost-effective alternative for some seismically deficient structures. The extent of overstress of an existing structure may be such that strengthening the existing elements is very costly and adding supplemental vertical-resisting elements (as discussed in Sec. 3.4) becomes so extensive that an entirely new supplemental lateral-force-resisting system is the best way to resist the prescribed forces.

Adding a new supplemental lateral-force-resisting system also may be the most cost-effective alternative when preservation of architectural features is of utmost importance, (e.g., in a historical monument).

3.9.1 SUPPLEMENTAL BRACED FRAME SYSTEM

Moment frame buildings that have insufficient lateral resistance can be converted to a braced frame system. This retrofit can add substantial lateral capacity with a minimum of additional weight. Changing a moment frame to a braced frame also will significantly reduce drifts and, hence, architectural damage. Buildings with weak shear walls (either wood or unreinforced masonry) also have been strengthened using steel braced frames. Figure 3.9.1 shows the central storeroom at Lawrence Berkeley Laboratory in Berkeley, California, in which an X-braced steel frame was used to strengthen the structure. The principal disadvantages of adding braced frames are the potential change in the architectural character and the potential obstruction of accessways and window views. Additionally, the conversion of moment frames to braced frames may increase demand on and consequently necessitate an upgrade of the existing foundation.

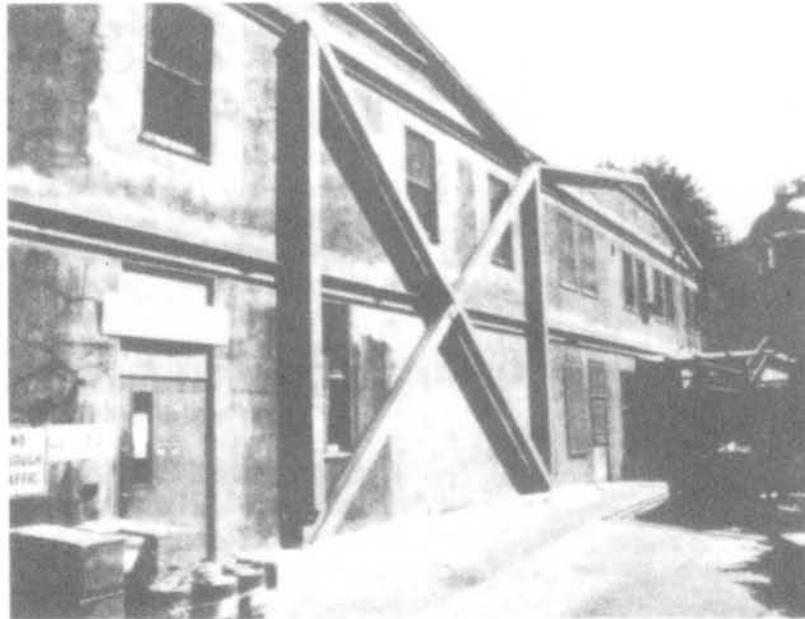


FIGURE 3.9.1 Seismic strengthening using a supplemental braced frame system.

3.9.2 NEW SHEAR WALL SYSTEM

The addition of a new reinforced concrete shear wall system to an unreinforced masonry structure can meet the requirements for a seismic upgrade in certain cases. Margaret Jacks Hall on the Stanford University campus (Figure 3.9.2a) is an example of a building for which preservation of the architectural character was a prime consideration. The existing unreinforced masonry was determined through testing to provide little lateral capacity. The exterior sandstone masonry was retained, and the interior was gutted. New concrete walls were pneumatically applied to the old masonry, and new floors, columns, and a roof were constructed. Another example of the need to preserve the historically significant architectural character of a building is the California State Capitol (Figure 3.9.2b). In essence, the existing stone facade was retained while new lateral- and (in large part) vertical-force-resisting systems were constructed.

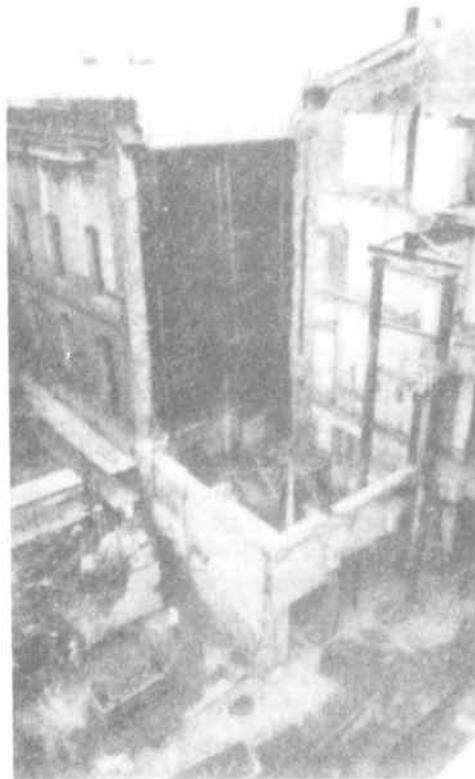
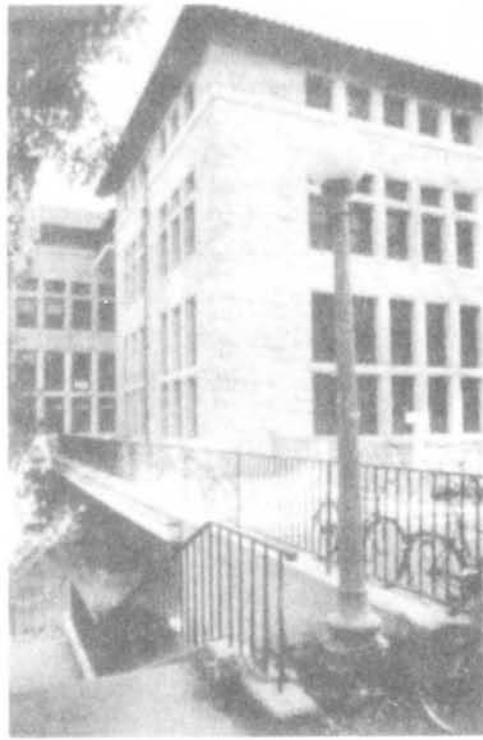
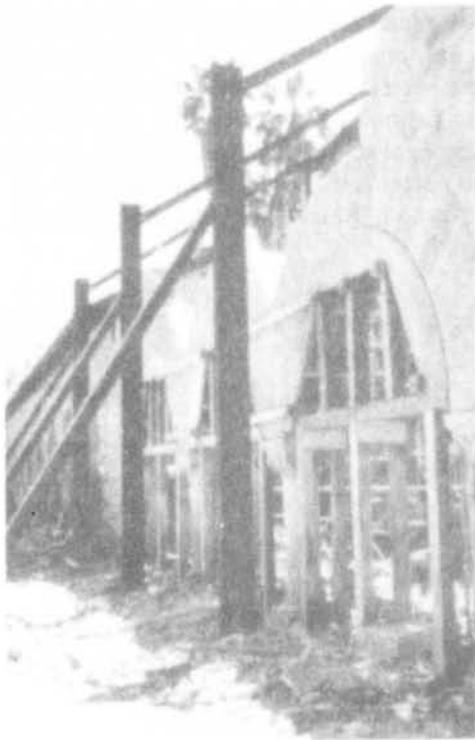


FIGURE 3.9.2 Seismic strengthening by providing a new shear wall system.

3.9.3 STRUCTURAL ADDITIONS

A deficient building may be strengthened by a structural building addition that is designed to resist the seismic forces generated within the addition as well as all or a portion of the forces from the existing building. This alternative has the obvious advantage of generating additional useful space while upgrading the existing building. IBM Building 12 in San Jose, California, is an example of an existing building bracketed by two new additions designed to carry the entire load (Figure 3.9.3). Few modifications to the interior of the existing building were required in this approach.

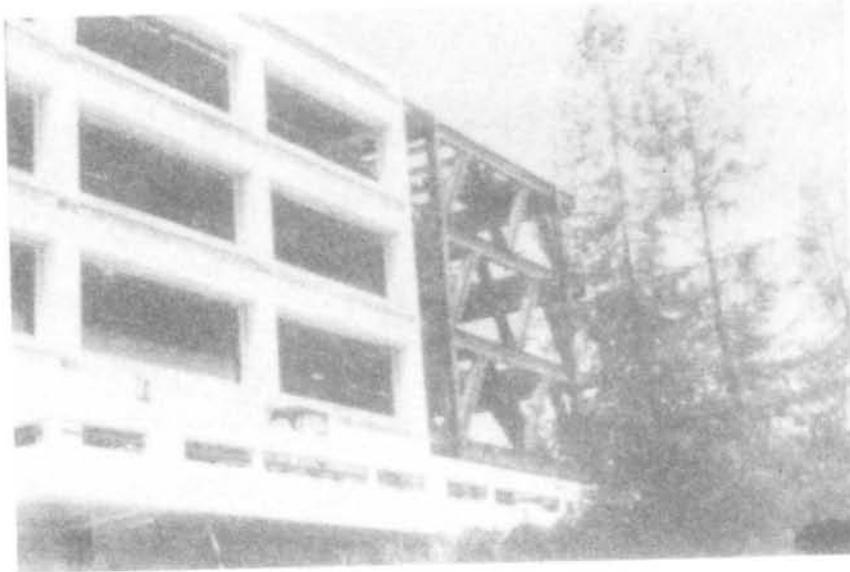


FIGURE 3.9.3 Seismic strengthening with a new building addition.

DECREASING DEMAND ON EXISTING SYSTEMS

4.0 INTRODUCTION

The design seismic forces (or demand forces) prescribed by most building codes generally are proportional to building weight and inversely proportional to the two-thirds power of the fundamental period of vibration of the building and to a response reduction factor that represents the capability of the structural system to absorb energy in the inelastic range of the building response. Within this context, the earthquake demand of a building may be reduced by reducing the weight of the building, increasing the fundamental period and the energy dissipating capacity of the structural system, or using alternate procedures.

4.1 REDUCING THE WEIGHT OF THE BUILDING*

In relatively low buildings (i.e., below 3 to 5 stories), reducing the weight of the building will result in a reduction of the seismic forces on the structural elements. Although a reduction in weight will decrease the fundamental period of vibration, the code-prescribed seismic force coefficient remains constant (i.e., is not affected by a change in fundamental period) for these buildings, so the reduction in the seismic forces is directly proportional to the weight reduction.

For taller buildings (i.e., 6 to 10 stories), the reduction in the fundamental period resulting from a reduction in weight (i.e., the period is proportional to the square root of the weight) also will result in an increase in the seismic force coefficient. This increase will tend to offset the decrease associated with the reduction in weight. For very tall buildings (i.e., 20 stories or more), the effect of the fundamental period is minimal and the seismic forces are essentially proportional to the reduced weight.

Techniques. Techniques that have been utilized to reduce weight include:

1. Removing the upper stories of a building.
2. Changing the use of the building (e.g., converting from heavy warehouse loading to office or residential use).
3. Removing a heavy roof system and replacing it with a lighter assembly.
4. Removing heavy appurtenances (i.e., parapets, balconies, water towers, or equipment).

Relative Merits. Removal of the upper stories is an effective technique for decreasing the earthquake demand on a building. As indicated above, this technique may be less effective for buildings of moderate height than it is for low or very tall buildings. An additional benefit associated with this technique is the reduction in gravity loads. Use of this technique will result in reduced forces on the existing vertical-load-resisting elements in the remaining stories and foundations thereby providing additional capacity for seismic forces. The primary disadvantage of this technique is the loss of usable space and the associated loss of rental income and resale value.

*The American Iron and Steel Institute has written a minority opinion concerning this section; see page 193.

Changing the use of the building in order to eliminate heavy floor loads that contribute to the seismic force also is an effective technique to reduce the seismic demand. Since the ground floor and its tributary loads do not contribute to the building seismic forces, reducing the floor loads in the upper floors of a multi story building is most effective. This technique also reduces the forces on the vertical-load-resisting elements and, thus, increases the capacity of these elements for seismic forces. The elimination of heavy floor loads that are regarded as dead loads in seismic provisions will affect the fundamental period of the building in a manner similar to that discussed above for the removal of upper stories. Also as discussed above, the advantage of weight reduction may be partly offset for moderate height buildings by an increase in the seismic force level due to the period changes. An additional factor to be considered for this technique is whether the change in use or occupancy will trigger other building code requirements (e.g., fire protection, egress) that may be costly to meet.

Removal and replacement of a heavy roof system is particularly effective in reducing the seismic demands on an existing one-story building. As the number of stories is increased, this technique becomes less effective and it is also subject to the limitations for moderate height buildings discussed above.

Removal of heavy appurtenances has the same effects on seismic demand as discussed above for the removal of stories or the elimination of heavy floor loads.

4.2 INCREASING THE FUNDAMENTAL PERIOD AND THE ENERGY DISSIPATING CAPACITY OF THE STRUCTURAL SYSTEM

By increasing the fundamental period of vibration of some structures, the seismic demand can be decreased. The most effective method for increasing the fundamental period of the building system without modification of the structural system of the building is by introduction of seismic isolators at the base of the building. The seismic isolators can increase the effective fundamental period of the system, thus reducing the base shear of the structural system of the building; energy dissipation also can be included within the isolator system.

In addition to seismic isolation, energy dissipation devices may be added to the structural system. The energy dissipation system increases the system damping and modifies the building response and provides the equivalent of increasing the value of the response modification factor, R .

Techniques. The response reduction factor (i.e., energy dissipating capacity) applicable to an existing building can be increased by:

1. Modifying the existing structural systems,
2. Supplementing the existing structural systems, or
3. Replacing the existing structural systems.

Relative Merits. Modification of an existing structural system to improve its energy absorbing capacity is seldom feasible except in the case of an ordinary steel moment frame. In this case, it may be possible to upgrade the frame to a special moment frame or to the minimum frame requirements for a dual system in conjunction with existing shear walls. Similarly, removal and replacement of an existing structural system seldom will be economically feasible unless dictated by other than engineering considerations (e.g., complete architectural retrofit of the exterior of the building). A possible exception to this statement could occur in existing steel frame buildings with concentric steel bracing or unreinforced masonry infill walls. In these cases, it may be feasible to remove the bracing or the infill walls and install eccentric bracing or reinforced concrete shear walls. Supplementing the existing structural system is, by far, the most common technique for seismic strengthening and, in many cases, it is possible to reduce the seismic demand by improving the energy absorption characteristics of the combined system.

4.3 ALTERNATE PROCEDURES

The *NEHRP Recommended Provisions* as well as model building codes provide for approval of alternative procedures that can be demonstrated to be equivalent to code-prescribed procedures concerning strength, durability, and seismic resistance. In recent years, several innovative alternative procedures for the reduction of seismic demand have been subjected to analytical and experimental research and have seen limited application in both new and existing buildings. These procedures include:

- Seismic isolation techniques and
- Supplemental damping techniques.

4.3.1 SEISMIC ISOLATION

Techniques. Base isolation is a generic term for procedures whereby the response characteristics of a building are altered by the introduction of devices or special construction at the base of the building. The discussion here is confined to the use of base isolation to reduce seismic demand by lengthening the fundamental period of vibration of an existing building.

Relative Merits. Most base isolation devices are capable of developing a fundamental period of about 2 seconds. This can effectively reduce the seismic demand for buildings founded on rock or firm soils that have a natural fundamental period of about 1 second or less (i.e., buildings less than about 10 stories). Base isolation may be detrimental to buildings founded on very soft soils where a 2 second period base-isolated building may be in resonance with similar periods in the ground motion transmitted by the soft soils.

Implementation of base isolation for existing buildings usually will require that the building be underpinned for the installation of base isolation pads. A competent diaphragm also is required above the isolation pads to distribute the lateral forces and, for existing buildings, a new concrete slab generally has been provided to serve this purpose. Finally, provision must be made to accommodate the large displacement of the isolation pad; this usually is done by providing both adequate clearance around the building to accommodate this displacement and sliding or flexible connections for all utilities and services to the building.

4.3.2 SUPPLEMENTAL DAMPING

Techniques. Structural damping may be defined as an internal energy absorption characteristic of a structural system that acts to attenuate induced free vibration. Damping is commonly expressed as a percentage of critical damping. A zero damped elastic system, when displaced, theoretically would vibrate continuously at its natural period and at the same amplitude. A critically damped structure when displaced would return to its original position without vibration. Damping also tends to reduce the dynamic amplification of vibration particularly when the period of the building is in resonance with the ground motion. The seismic provisions in most building codes are based on 5 percent of critical damping as being representative of most building structures. The upper limit of the required seismic forces, before division by the response reduction factor, assumes dynamic amplification of the ground motion by a factor of 2 to 2.5 depending on the soil conditions. If the structure can develop 20 percent damping, the above amplification (and the displacements) would be reduced by one-half. The various concepts that have been proposed for providing supplementary damping are:

- Viscous damping,
- Friction damping, and
- Natural yield damping.

Viscous damping involves taking advantage of the high flow resistance of viscous fluids. A simple shock absorber like that on an automobile is one example. Other devices such as a pair of flat plates with viscous fluid between them have been proposed. Shock absorbers have been implemented in connection with nuclear power plant piping systems but they have proved to be very high maintenance cost items.

Friction between dry surfaces produces a constant force, always opposed to the direction of motion, that is proportional to the contact force between the surfaces and the coefficient of friction of the materials. A number of friction damping devices usually associated with diagonal bracing in buildings, have been proposed. Major concerns with friction dampers in connection with the long-term periods between earthquakes are ensuring that the contact forces between the sliding surfaces do not change and ensuring that the coefficient of friction does not change.

Natural yield damping of structural elements in buildings (e.g., beams) has long been recognized as providing added damping to structures. Material yielding is very commonly used in earthquake engineering in conjunction with the ductility, seismic isolation, and supplemental damping concepts of design. In recent years, a variety of mechanical devices that incorporate the yielding deformation of mild steel to provide supplemental damping have been implemented in earthquake-resistant designs of buildings and other structures. Mild steel bars in torsion and cantilevers in flexure have been developed, tested, and installed in buildings and bridges. Similarly, lead shear and lead extrusion devices also have been developed.

Relative Merits. The application of supplemental damping in the seismic rehabilitation of existing buildings is in its infancy; hence, the benefits and problems of the various alternatives have not been thoroughly investigated. In general, devices that involve material yielding as the means for increasing energy dissipation or damping can be regarded as being very reliable. Mild steel and lead are very stable materials with predictable yield deformation characteristics.

Irrespective of the type of damping involved, the installation in buildings of devices commonly proposed thus far in connection with supplemental damping involves distributing the devices throughout a structure. The seismic response of a damped building would be similar to that of a conventional building. This is in contrast to the seismic isolation concept where virtually all of the relative displacement occurs at the isolation level.

Change in period of vibration and stiffness associated with material yield damping can be significant depending on the ground motion demand and the elastic strength of the damper. Practical supplemental damping devices that involve material yielding generally result in a reduction of stiffness during earthquake response and, thus, periods lengthen. Although the change in period may be of little importance, the change may result in decreased demand forces. The seismic analysis of buildings using supplemental dampers requires sophisticated nonlinear time-history analytical tools because of the yielding (i.e., inelastic) response requirements.

REHABILITATION OF NONSTRUCTURAL ARCHITECTURAL COMPONENTS

5.0 INTRODUCTION

Nonstructural architectural elements can be damaged in an earthquake, and some of this damage may result in life-threatening hazards. The two principal causes of architectural damage are differential motion and lack of component capacity. For example, the differential seismic displacement between stories (i.e., drift) can cause window breakage. Architectural cladding, such as a granite veneer, with insufficient anchorage capacity is an example of a component with a lack of capacity.

5.1 EXTERIOR CURTAIN WALLS

Rigid nonductile curtain wall panels, (e.g., those constructed of precast concrete) attached to the exterior of a flexible structure (e.g., a steel moment frame) may have insufficient flexibility in their connections to the frame and insufficient spacing between panels to prevent damage due to racking. The connection details therefore may have to be modified to allow flexibility, and Figure 5.1a shows a typical connection detail that provides ductility and rotational capacity. The panel is rigidly attached at the base and held with a flexible rod at the top. It usually is desirable to provide a rigid support at one end of each panel and to allow the other end to translate to accommodate the interstory deflection of the frame without racking of the panels.

Another common deficiency is that the existing connections may not provide adequate freedom for accommodating the calculated horizontal and vertical story distortions. A feasible remedy may be to remove the existing connections at one end of the panels and replace them with flexible rods (as indicated in Figure 5.1b) or with other connecting devices provided with adequate oversized and slotted holes. In implementing these

techniques, the capacity of the modified connection for gravity loads and for out-of-plane seismic loads must be checked and strengthened if necessary.

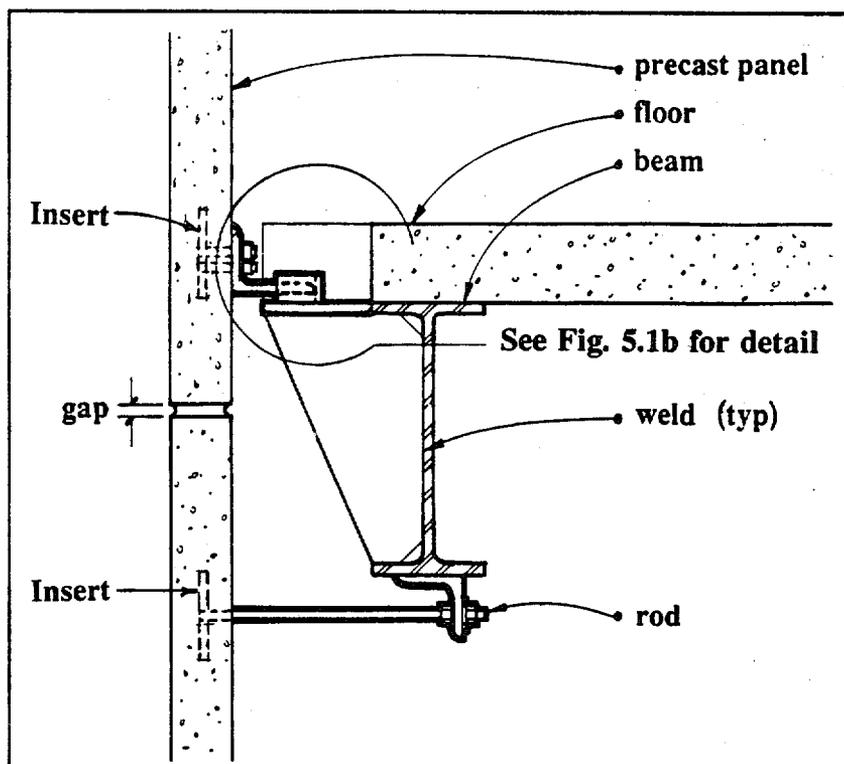


FIGURE 5.1a Flexible connection for precast concrete cladding.

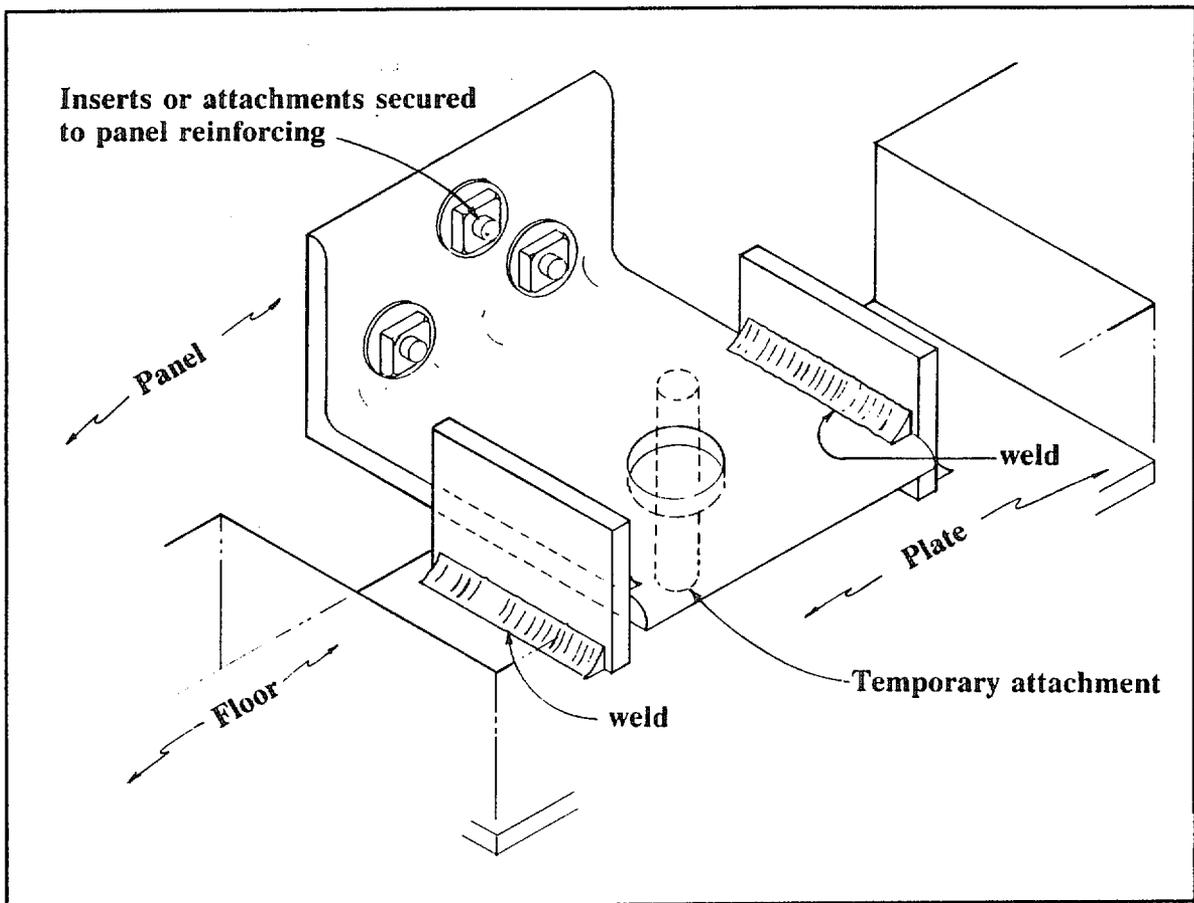


FIGURE 5.1b Detail for flexible connection for precast concrete cladding.

5.2 APPENDAGES

Cornices, parapets, spandrels, and other architectural appendages that have insufficient anchorage capacity must be retrofitted to prevent damage and, most important, falling debris. Cornice anchorages can be strengthened by removing the cornice material, adding anchorages, and reinstalling the material. A technique that has been used in rehabilitating heavy and ornate cornice work is to remove the cornice and reconstruct it with adequate anchorage and new lighter material such as lightweight concrete or plaster. Parapets can be reduced in height so that the parapet dead load will resist uplift from out-of-plane seismic forces or they can be strengthened with shotcrete (Figure 5.2a) or braced back to roof framing (Figure 5.2b). All elements must be checked for their ability to sustain new forces imposed by the corrective measures.

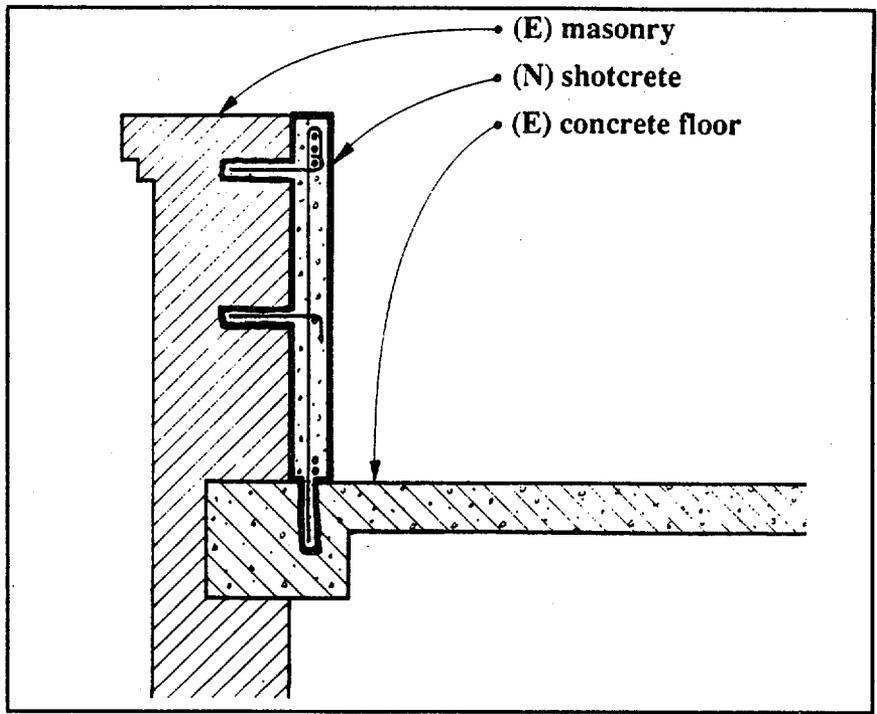


FIGURE 5.2a Strengthening a masonry parapet with a new concrete overlay.

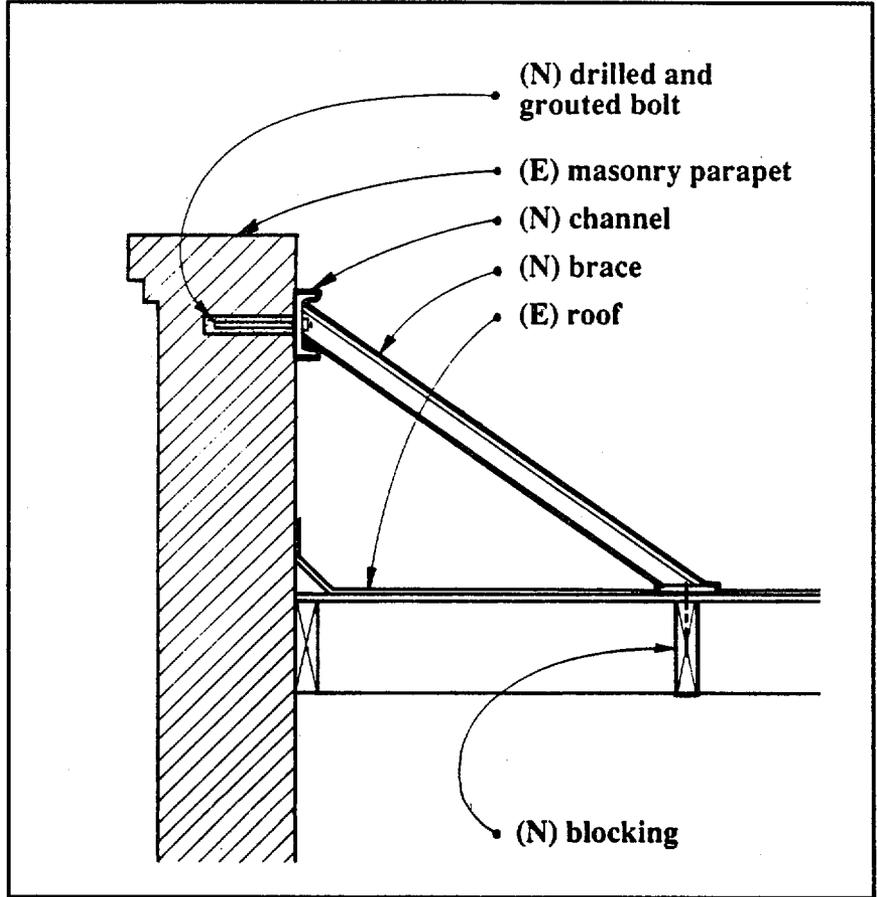


FIGURE 5.2b Strengthening a masonry parapet with steel braces.

5.3 VENEERS

Stone and masonry veneers with inadequate anchorage should be strengthened by adding new anchors. Veneers typically must be removed and replaced for this process. Typical details for approved anchorage of masonry veneers are published by the Brick Institute of America.

5.4 PARTITIONS

Heavy partitions such as those of concrete block may fail from excessive flexural stresses or excessive in-plane shear stress caused by interstory drifts. Such partitions should be retrofitted with connections like those shown in Figure 5.4a that restrain out-of-plane displacement and allow in-plane displacement. Alternatively, unreinforced masonry partitions can be removed and replaced with drywall partitions. Partitions that cross seismic joints should be reconstructed to allow for longitudinal and transverse movement at joints. Plaster or drywall partitions in office buildings generally need lateral support from ceilings or from the floor or roof framing above the partition. Steel channels are sometimes provided at the top of the partitions. The channels are attached to the ceiling or floor framing, they provide lateral support to the partition but allow vertical and longitudinal displacement of the floor or ceiling without imposing any loads to the partition. Partitions that do not extend to the floor or roof framing and are not laterally supported by a braced ceiling should be braced to the framing above (as indicated in Figure 5.4b) at a maximum of 12 foot spacing between braces.

Hollow clay tile partitions occur in many existing buildings as corridor walls or as nonstructural enclosures for elevator shafts or stairwells. Hollow clay tile is a very strong but brittle material and it is very susceptible to shattering into fragments that could be hazardous to building occupants. In many cases it is not possible to isolate these partitions from the lateral displacements of the structural framing and, in those cases, it is advisable to consider either removal of these partitions and replacement with drywall construction or "basketing" of the potential clay tile fragments with wire mesh.

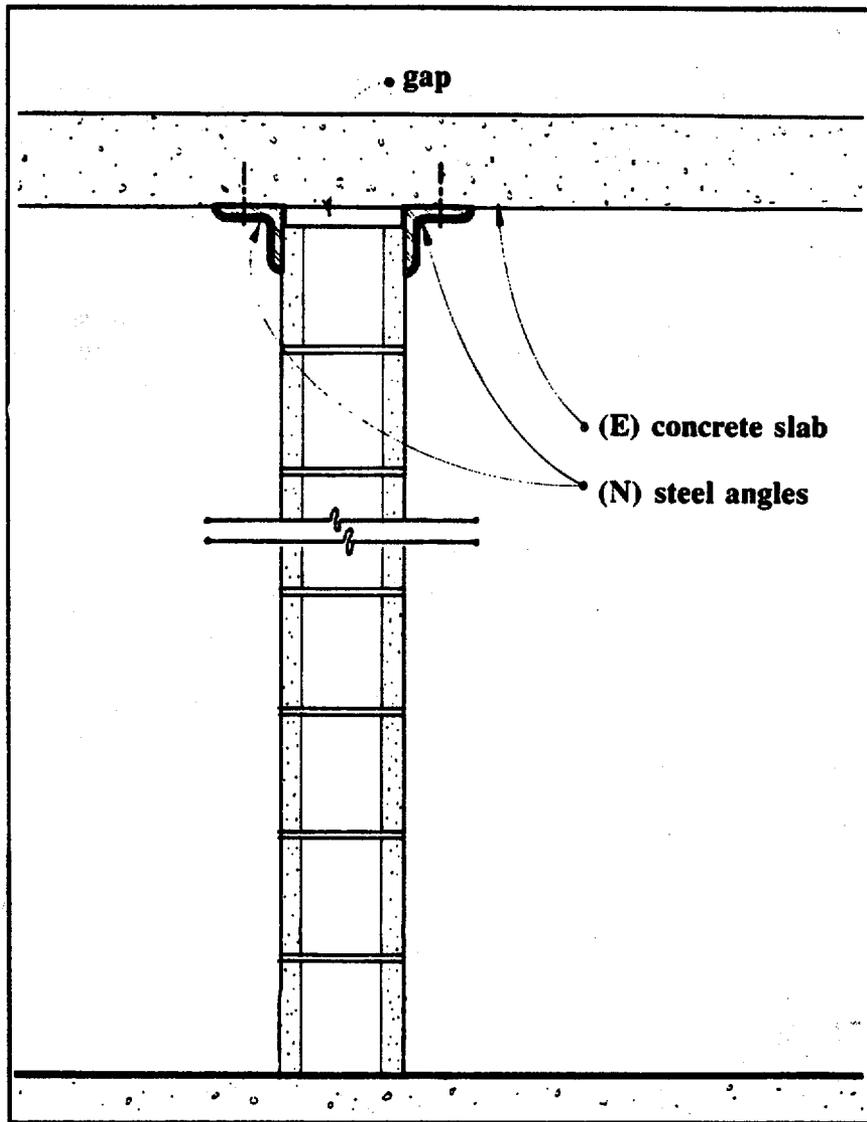


FIGURE 5.4a Bracing an interior masonry partition.

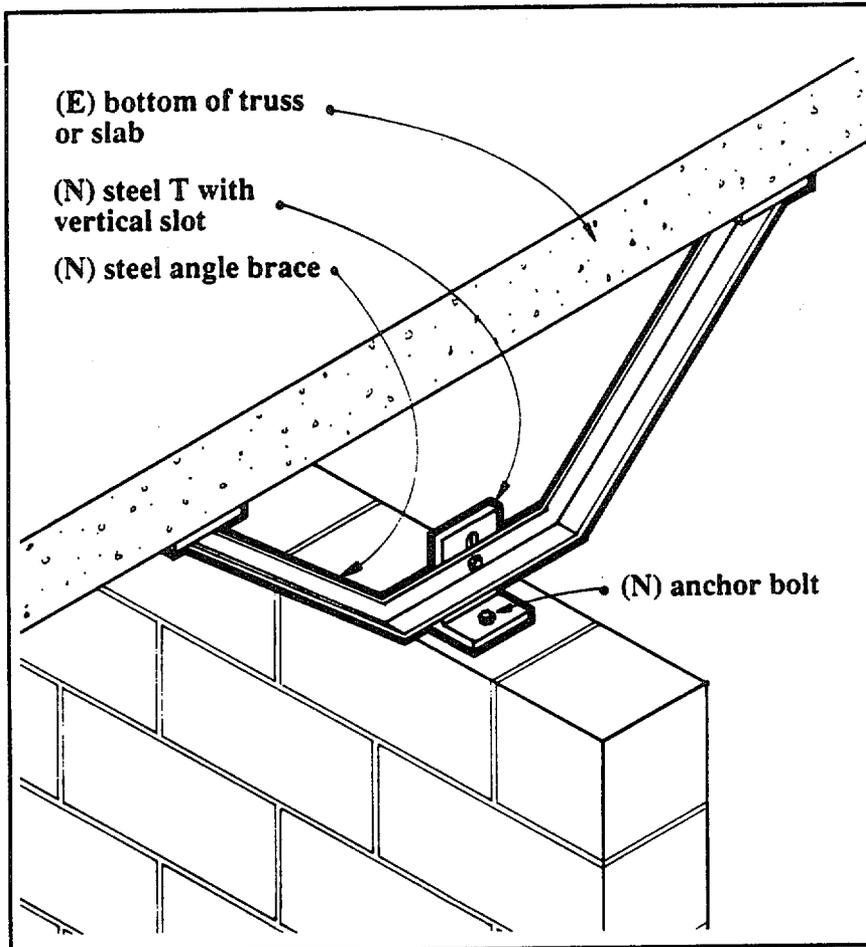


FIGURE 5.4b Bracing an interior masonry partition.

5.5 CEILINGS

Unbraced suspended ceilings can swing independently of the supporting floor and cause damage to the ceilings, particularly at the perimeters. Providing four-way (12-gage wire) diagonals and a compression strut between the ceiling grid and the supporting floor at no more than 12 feet on center and within 6 feet of partition walls will significantly improve the seismic performance of the suspended ceiling. Figure 5.5 shows a typical detail of the four-way diagonals and the compression strut. In addition to the braces, the connections between the main runners and cross runners should be capable of transferring tension loads. Lay-in ceilings are particularly vulnerable to the relative displacement of the supporting grid members. Splices and connections of the T-bar sections that comprise the grid may have to be stiffened or strengthened with new metal clips and self-threading screws.

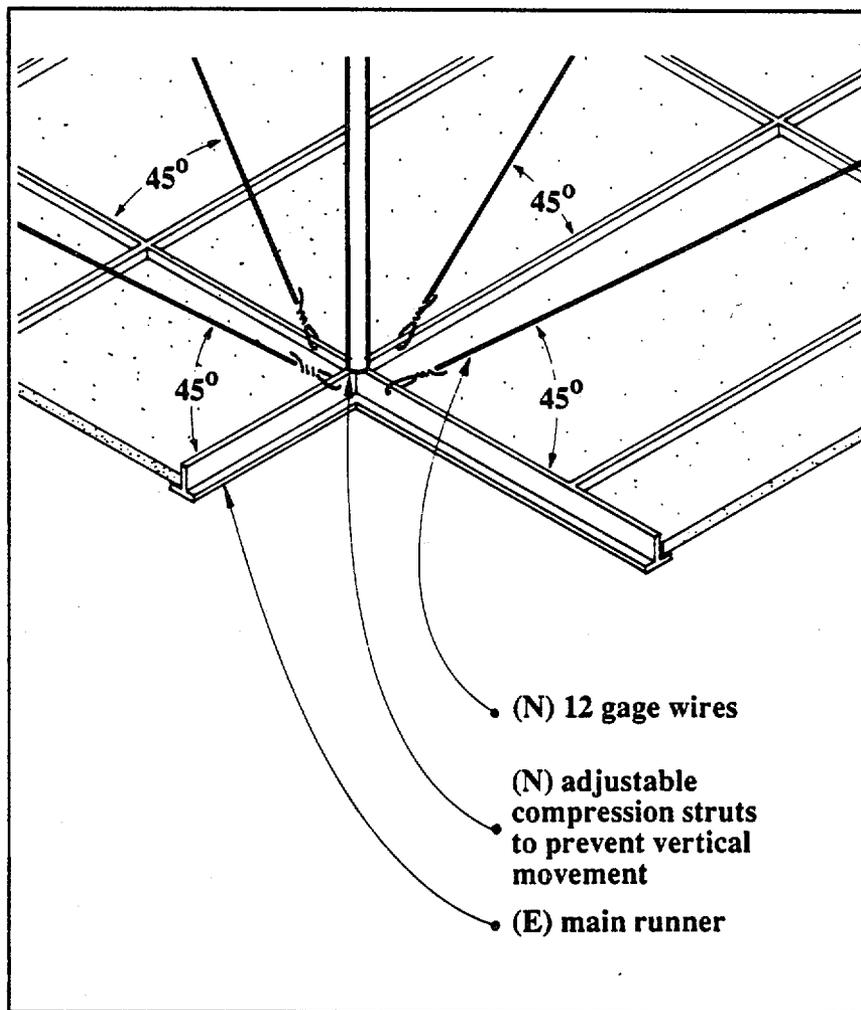


FIGURE 5.5 Lateral bracing of a suspended ceiling.

5.6 LIGHTING FIXTURES

Suspended fluorescent fixtures are susceptible to several types of seismic damage. Fixtures that are supported by suspended ceiling grids can lose their vertical support when the suspended ceiling sways and distorts under seismic shaking. Independent wire ties connected directly from each of the fixture corners (or at least diagonally opposite corners) to the structural floor above can be added to prevent the fixture from falling (Figure 5.6).

Pendant-mounted fixtures often are supported by electrical wires. Wire splices can pull apart and allow the fixtures to fall. The fixtures also may swing and impact adjacent objects resulting in breakage and fallen fixtures.

Safety wires can be installed to prevent the fixtures from falling and diagonal wires can prevent them from swaying. Some fixture manufacturers also provide threaded metal conduit to protect the wiring and to support the fixture as well as wire straps or cages that can be added to prevent the fluorescent tubes from falling away from the fixture if they become dislodged.

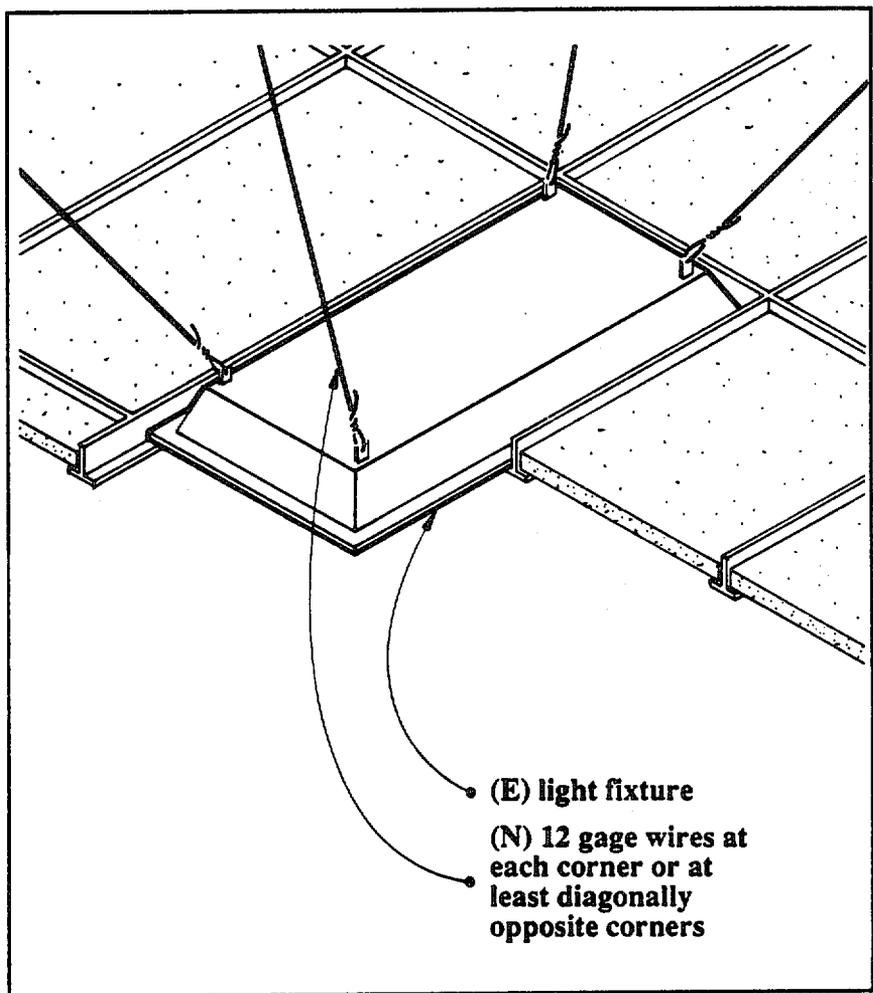


FIGURE 5.6 Providing safety wires for suspended lighting fixtures.

5.7 GLASS DOORS AND WINDOWS

Seismic rehabilitation of glass windows and doors to prevent breakage may be a significant effort. Inadequate edge clearances around the glass to allow the building and, hence, the window frame to rack in an earthquake without bearing on the glass is the principal cause of breakage. Redesign (along with close installation inspection) of the frame and/or glazing to provide sufficient clearance is necessary to prevent seismic breakage. A technique suggested by Reiterman (1985) to reduce life-safety hazards from falling glass is to apply adhesive solar film to the windows. The film will hold together the glass fragments while also reducing heat and glare. The application of solar film to insulating glass may cause heat build-up inside the glass and the possible adverse effects of this build-up need to be considered since damage can result.

5.8 RAISED COMPUTER ACCESS FLOORS

Access floors typically are constructed of 2-foot by 2-foot wood, aluminum, or steel panels supported on adjustable column pedestals. The column pedestals frequently are fastened to the subfloors with mastic. Some assemblies have stringers that connect the top of the pedestals (Figure 5.8a) and others have lateral braces. When subjected to lateral loads, access floors typically are very flexible unless they are specifically designed to be rigid. This flexibility may amplify the ground motions such that equipment supported on the floor may experience significantly high displacements and forces. The high displacements also may cause connection failures that could precipitate a significant collapse of the floor. Existing floors can be rehabilitated by securing the pedestals to the subfloor with expansion anchors or by adding diagonal bracing to pedestals in a regular pattern (Figure 5.8b). Rehabilitated floors should be designed and tested to meet both a stiffness and a strength criterion.

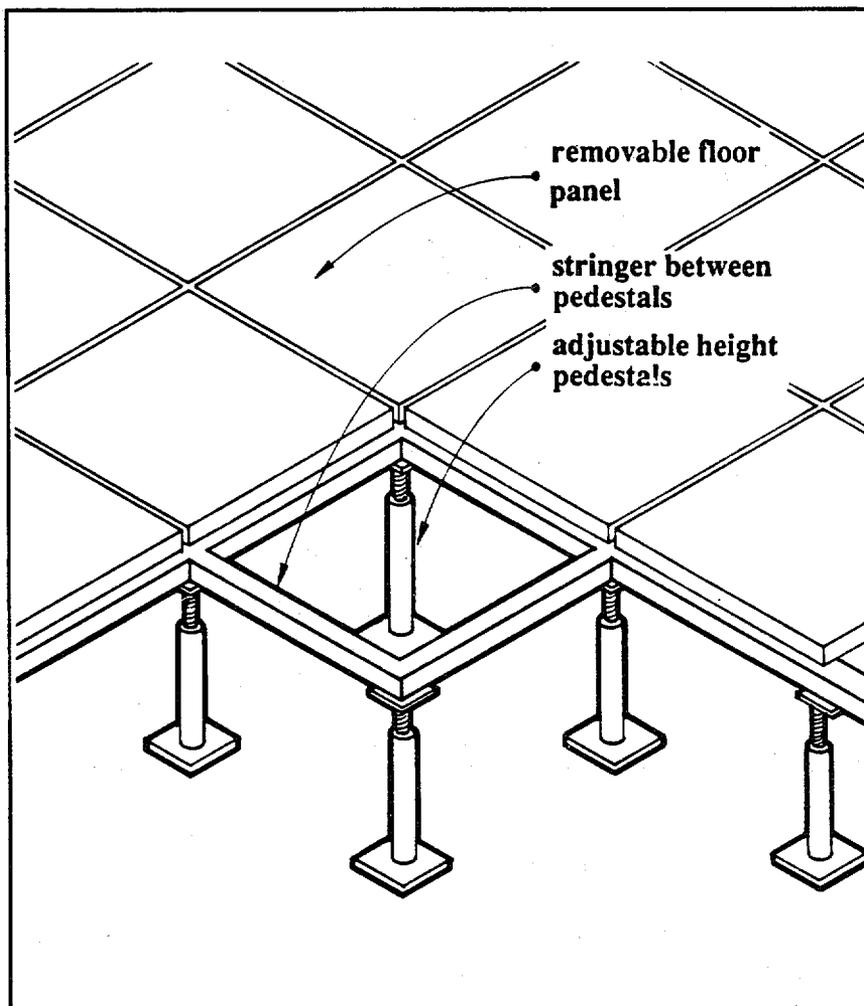


FIGURE 5.8a Access floor pedestals.

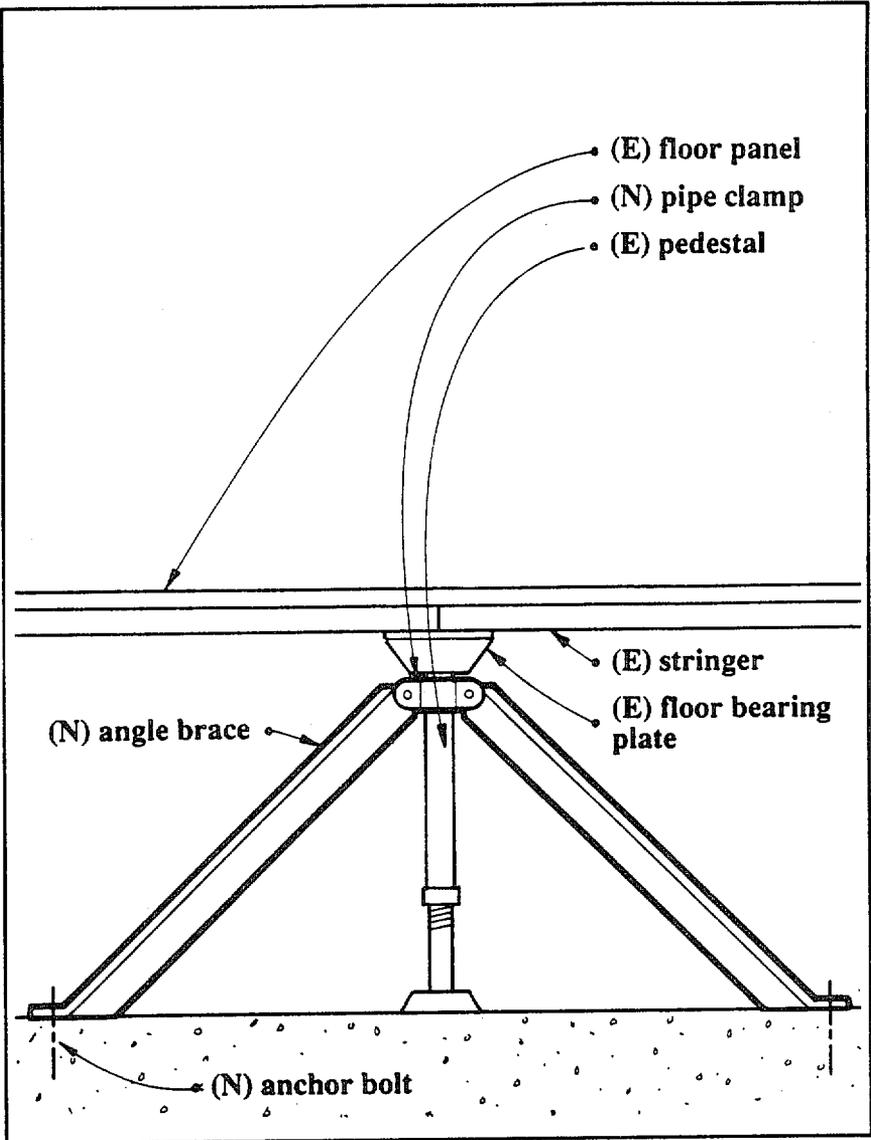


FIGURE 5.8b Strengthening of access floor pedestals.

REHABILITATION OF NONSTRUCTURAL MECHANICAL AND ELECTRICAL COMPONENTS

6.0 INTRODUCTION

Nonstructural mechanical and electrical components are often vulnerable to seismic damage in moderate to large earthquakes. Damage to mechanical and electrical components can impair building functions that may be essential to life safety. This chapter presents common techniques for mitigating seismic damage of the following typical mechanical and electrical components:

- Mechanical and electrical equipment
- Ductwork and piping
- Elevators
- Emergency power systems
- Hazardous material storage systems
- Communication systems
- Computer equipment

6.1 MECHANICAL AND ELECTRICAL EQUIPMENT

Large equipment that is unanchored or inadequately anchored can slide during an earthquake and damage utility connections. Tall, narrow units may also be vulnerable to overturning. Positive mechanical anchorages (Figure 6.1a) will prevent seismic damage.

Electrical equipment frequently is tall and narrow and may overturn and slide, causing damage to internal instruments and utility connections. This type of equipment can be secured against sliding or rocking in many ways depending on the location of the units relative to adjacent walls, ceilings, and floors (Figure 6.1b). In all cases, the capacity of the wall to resist the seismic loads imposed by the connected equipment must be verified.

Mechanical or electrical equipment located on vibration isolators may be particularly vulnerable to being shaken off the isolator supports. Rehabilitation to mitigate the potential for damage involves either replacing the vibration isolation units or installing rigid stops. Vibration isolation units that also provide lateral seismic resistance are available from isolator manufacturers and these units (Figure 6.1c) can be installed in place of the existing isolators. Alternatively, rigid stops designed to prevent excessive lateral movement of the equipment can be installed on the existing foundation (Figure 6.1d and e). A sufficient gap needs to be provided between the stop and the equipment to prevent the transmission of vibrations through the stops. Where equipment is tall relative to its width, stops in the vertical direction are required to prevent overturning. The equipment itself, its attachments to the isolators or support rails, and the rails themselves can be points of weakness that need to be assessed and strengthened where required.

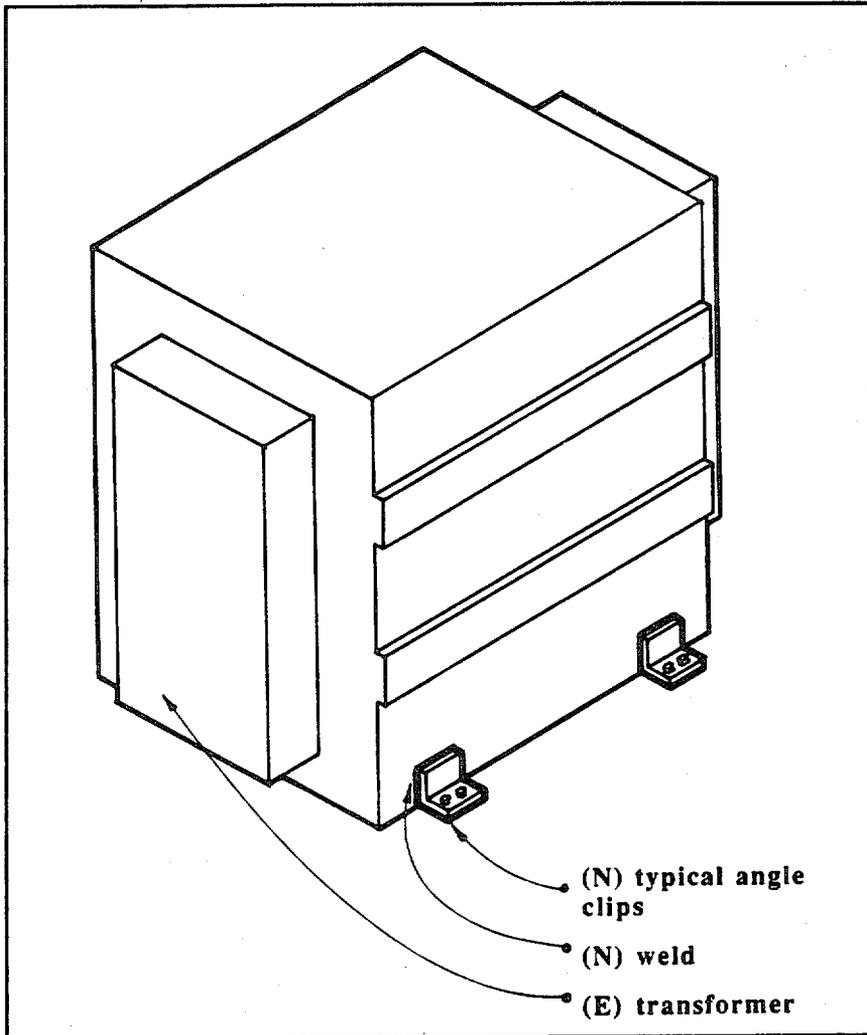


FIGURE 6.1a Typical detail of equipment anchorage.

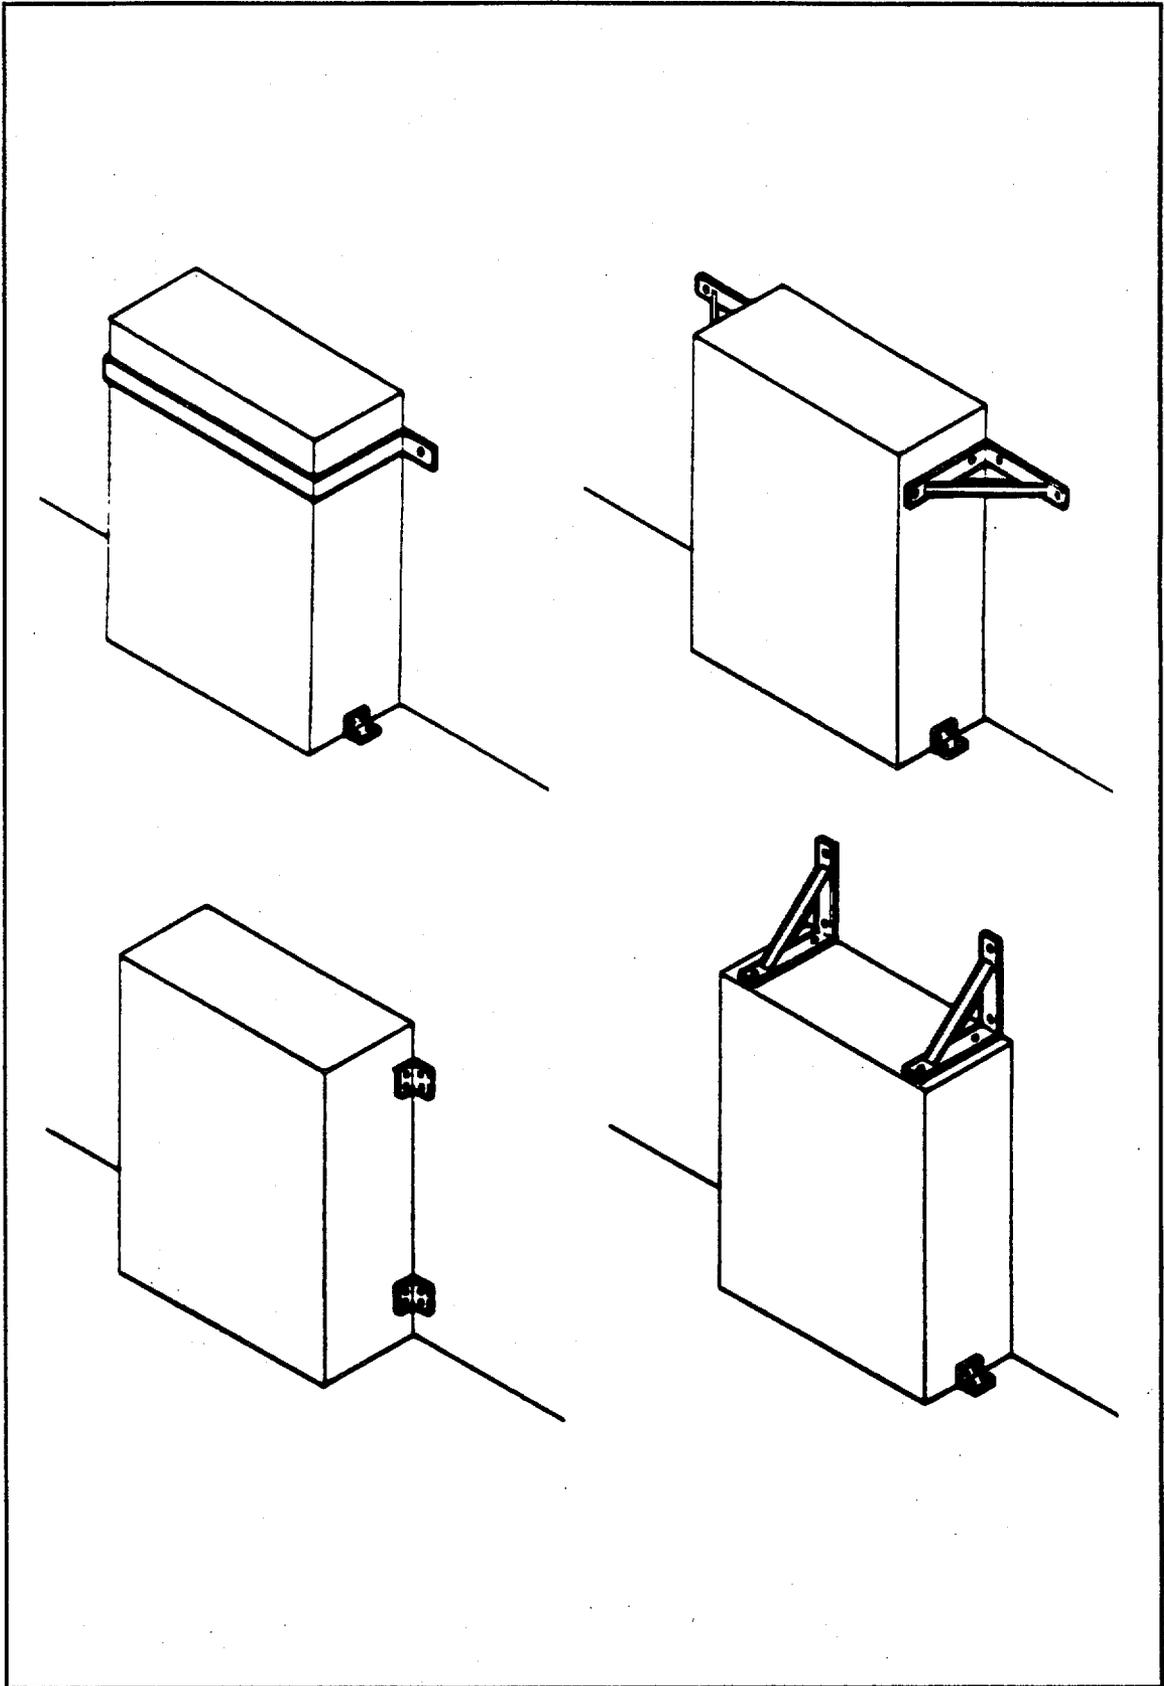


FIGURE 6.1b Alternate details for anchoring equipment.

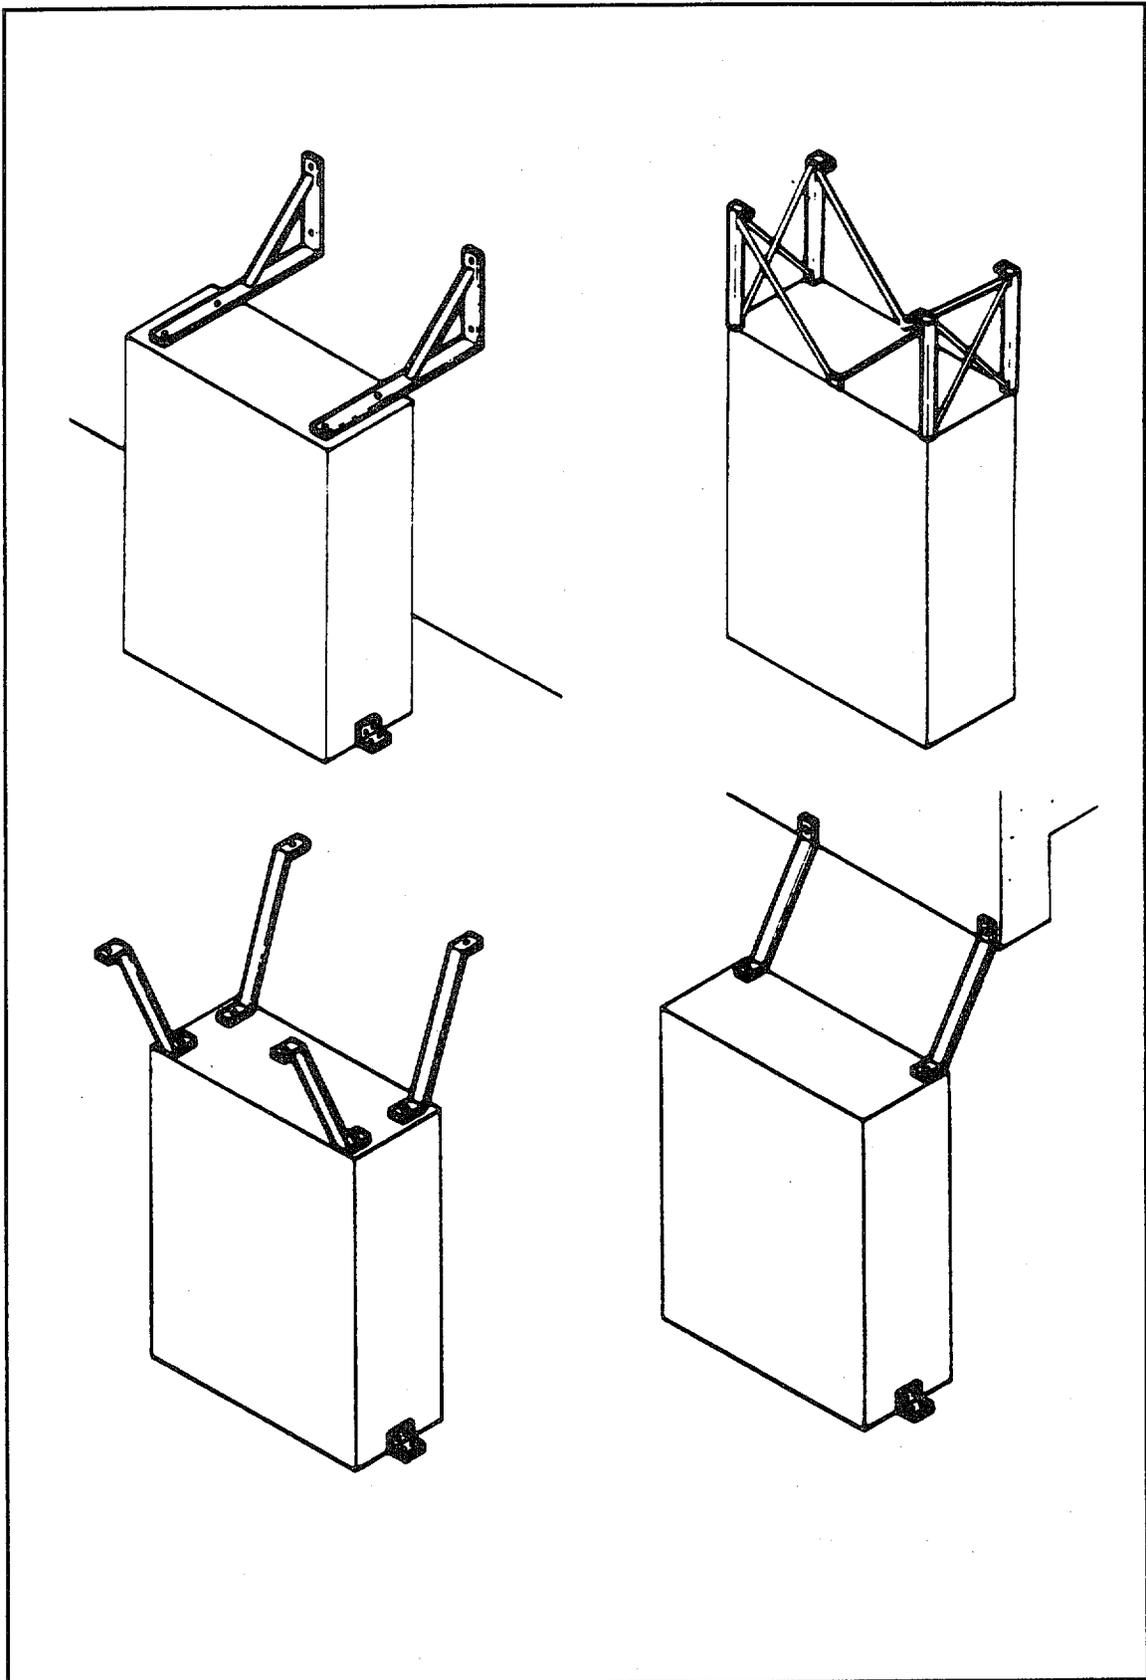


FIGURE 6.1b continued.

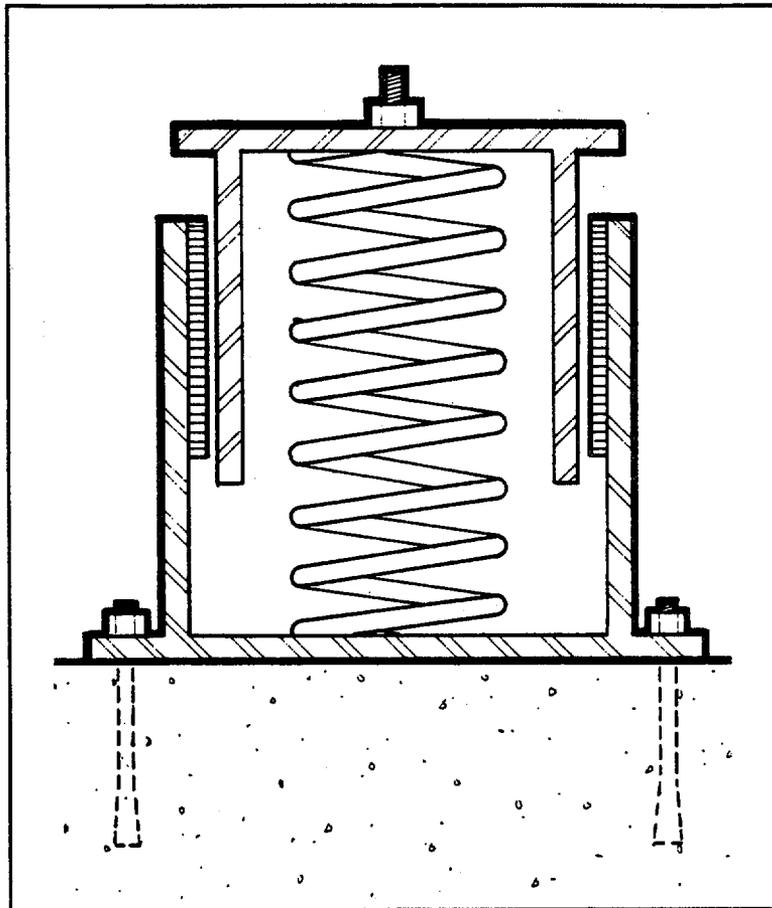


FIGURE 6.1c Prefabricated vibration isolation assembly with lateral seismic stops.

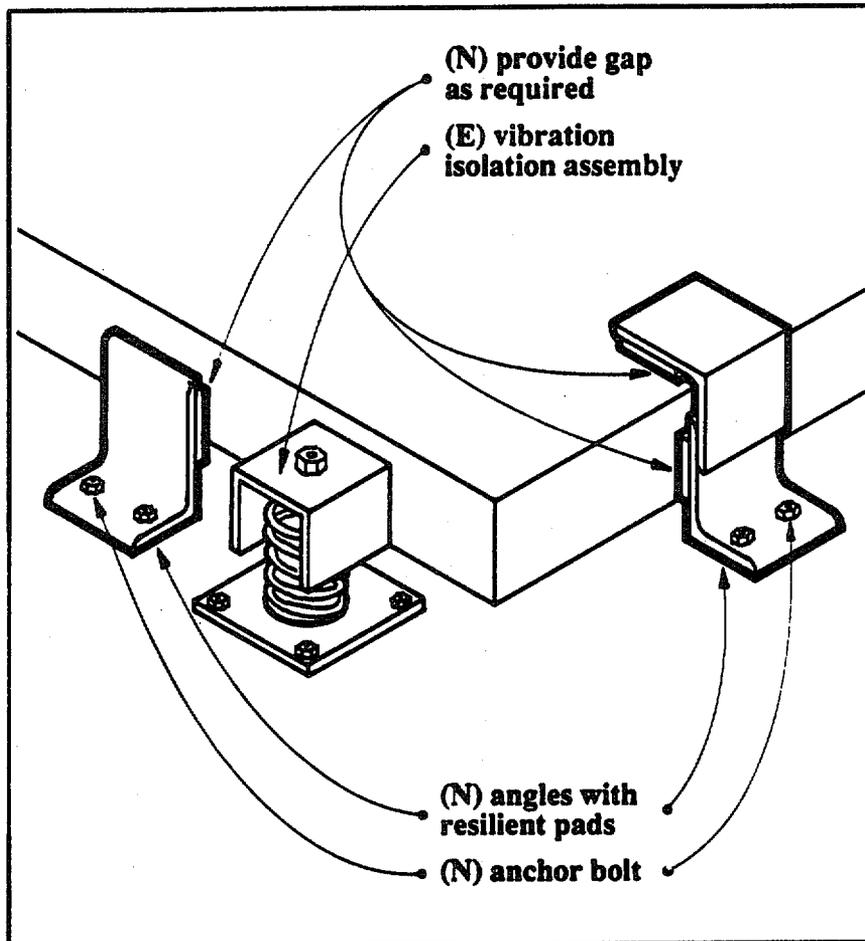


FIGURE 6.1d Seismic restraints added to existing equipment with vibration isolation.

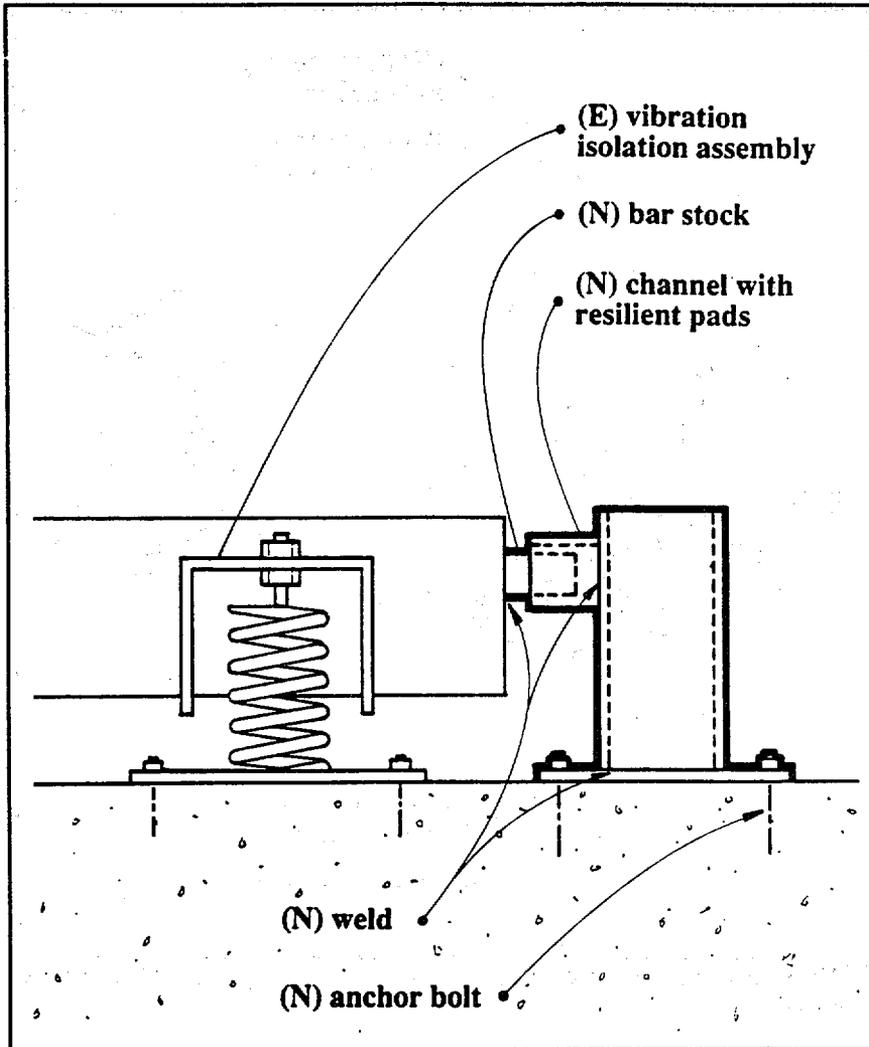


FIGURE 6.1e Multidirectional seismic restraint.

Suspended mechanical or electrical equipment may sway during an earthquake, damaging utility connections and the vertical support components. This equipment should be braced to prevent swaying (Figure 6.1f).

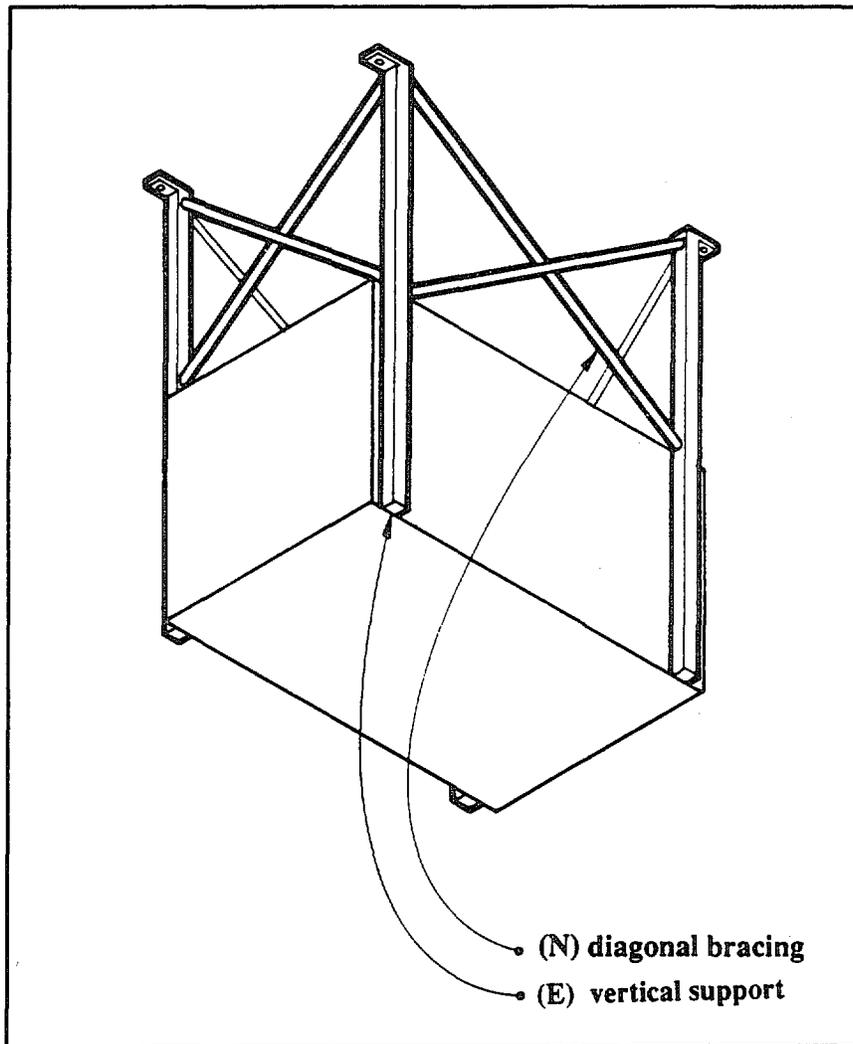


FIGURE 6.1f Typical bracing for suspended equipment.

Water heaters are tall, heavy, narrow components that, if unanchored, are vulnerable to damage in an earthquake. Sliding or overturning of water heaters may result in broken water and gas lines. Water heaters should be anchored as shown in Figure 6.1g, and flexible gas lines should be installed with a sufficient loop to allow the heater some movement without stressing the gas lines.

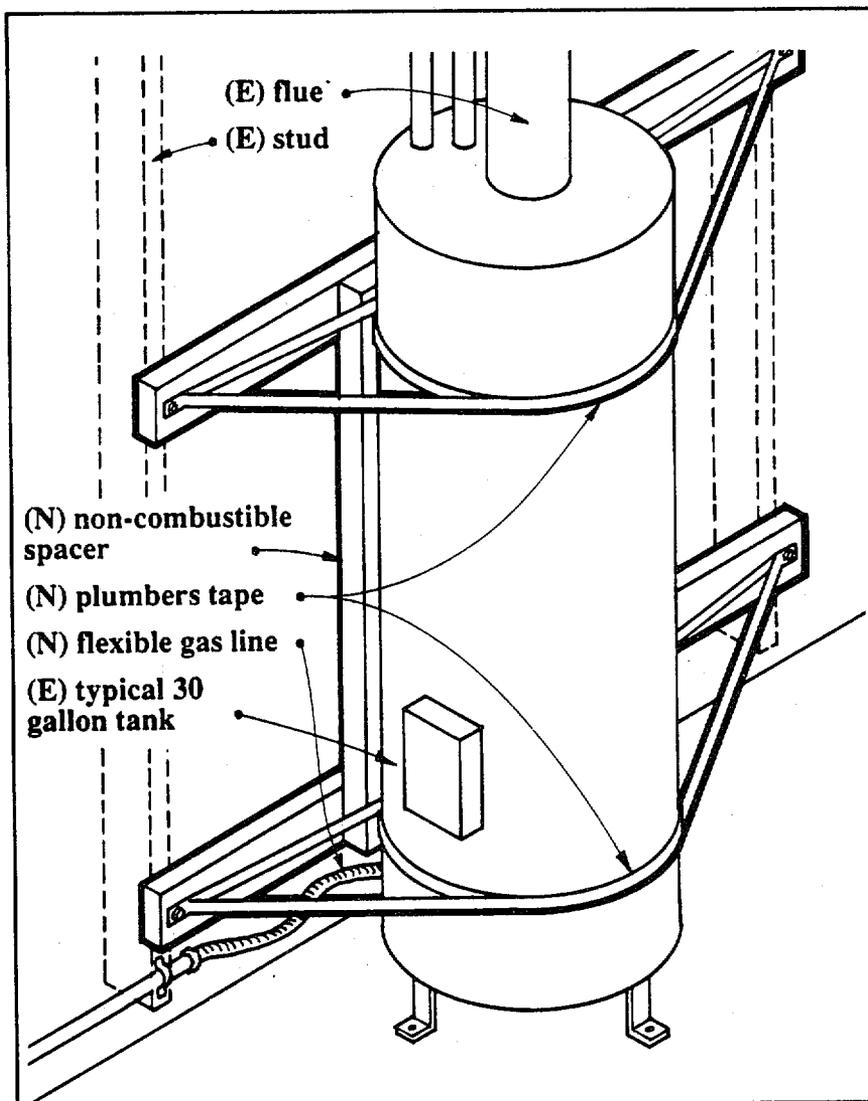


FIGURE 6.1g Strapping of domestic water heater.

6.2 DUCTWORK AND PIPING

Seismic retrofit of ductwork and piping primarily consists of providing lateral sway braces. The Sheet Metal and Air-Conditioning Contractors National Association (SMACNA) has published guidelines for the design of seismic restraints of new mechanical systems and plumbing piping systems (September 1982) that can also be used for rehabilitation of existing systems. These guidelines were developed for use in areas of relatively high seismicity and engineering judgment should be utilized in their application elsewhere. The SMACNA guidelines for seismic bracing of ductwork recommend that:

1. All rectangular ducts 6 square feet in area and greater and round ducts 28 inches in diameter and larger should be seismically braced.
2. Transverse braces should be installed at a maximum of 30 feet on center, at each duct turn, and at each end of a duct run.
3. Longitudinal braces should be installed at a maximum of 60 feet on center.
4. No bracing is required if the top of a duct is suspended 12 inches or less from the supporting structural member and the suspension straps are attached to the top of the duct.

The SMACNA guidelines for seismic bracing of piping recommend that:

1. Braces for all pipes 2-1/2 inches in diameter and larger (and also for smaller piping used for fuel gas, oil, medical gas, and compressed air and smaller piping located in boiler rooms, mechanical equipment rooms, and refrigeration machinery rooms).
2. Transverse braces should be installed at a maximum of 40 feet on center.
3. Longitudinal braces should be installed at a maximum of 80 feet on center.
4. Thermal expansion and contraction forces, where present, must be considered in the layout of transverse and longitudinal braces.
5. Flexibility should be provided where pipes pass through seismic or expansion joints.

Figures 6.2a through 6.2c show typical seismic brace details for ducting. Duct diffusers also should be positively attached with mechanical anchors to rigid ducts or secured with wires to the floor above when connected to flexible ducts. Figures 6.2d through 6.2g show typical details for installing seismic braces for piping.

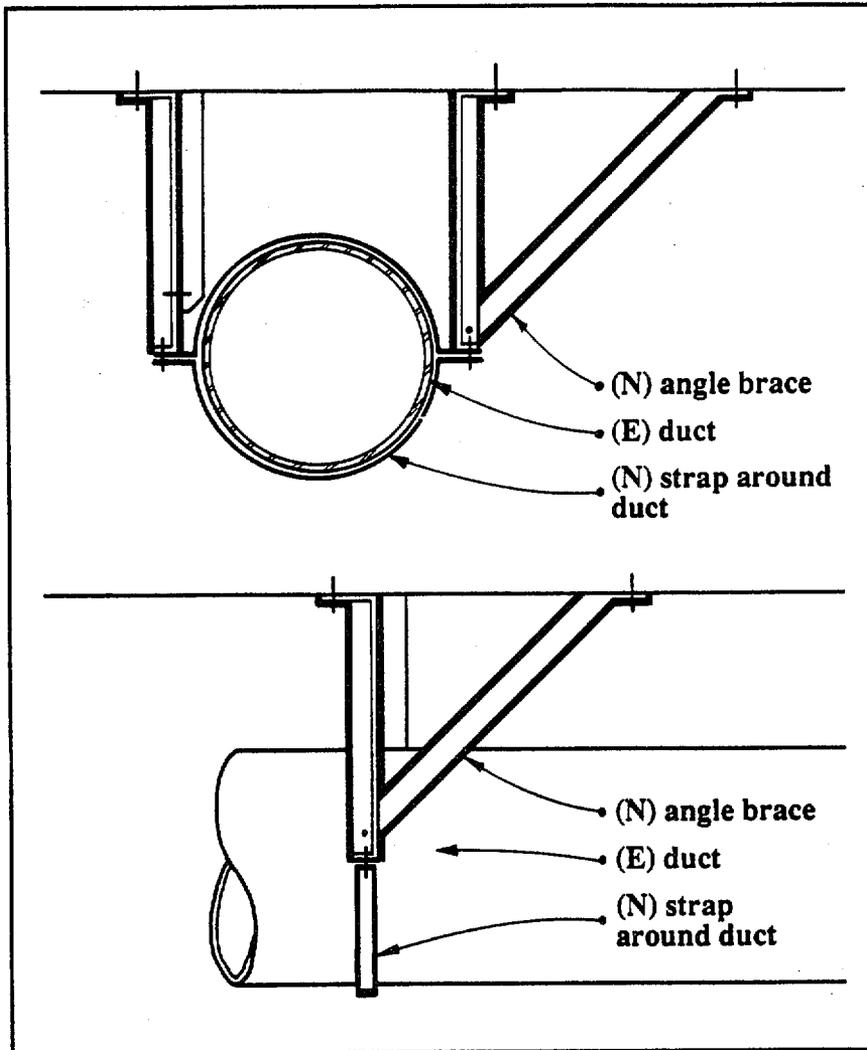


FIGURE 6.2a Lateral and longitudinal braces for large-diameter ducting.

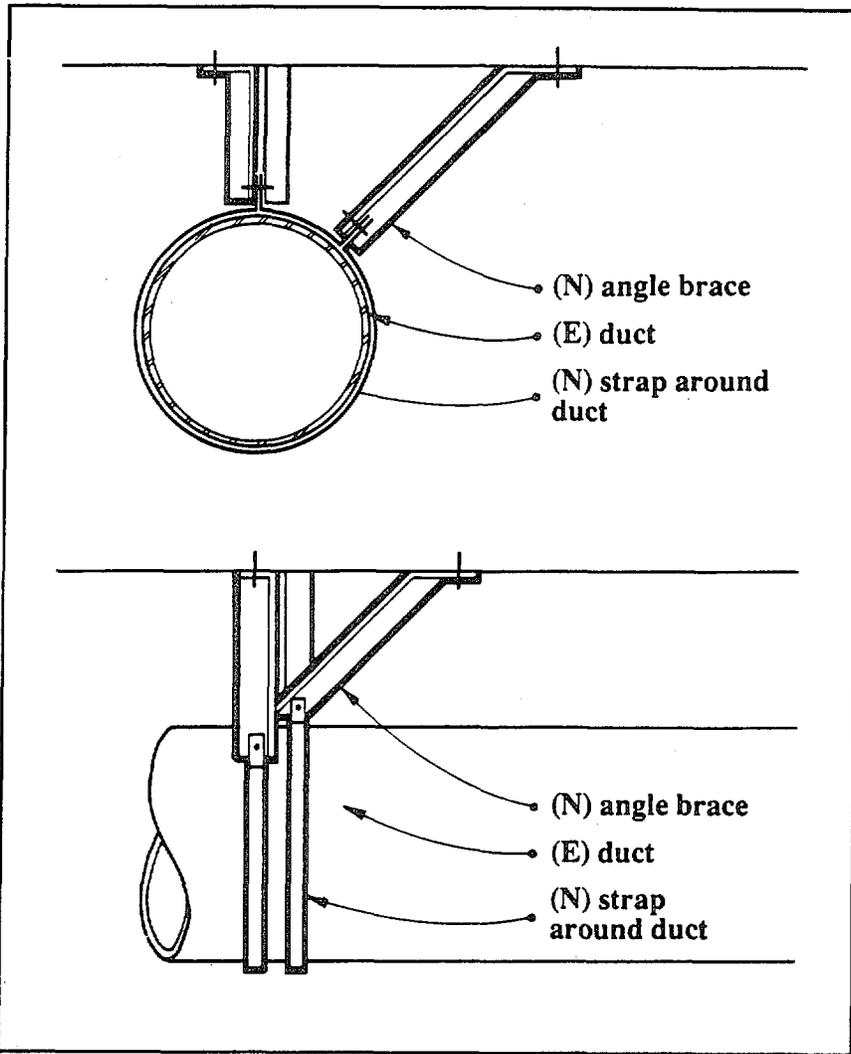


FIGURE 6.2b Lateral and longitudinal braces for small-diameter ducting.

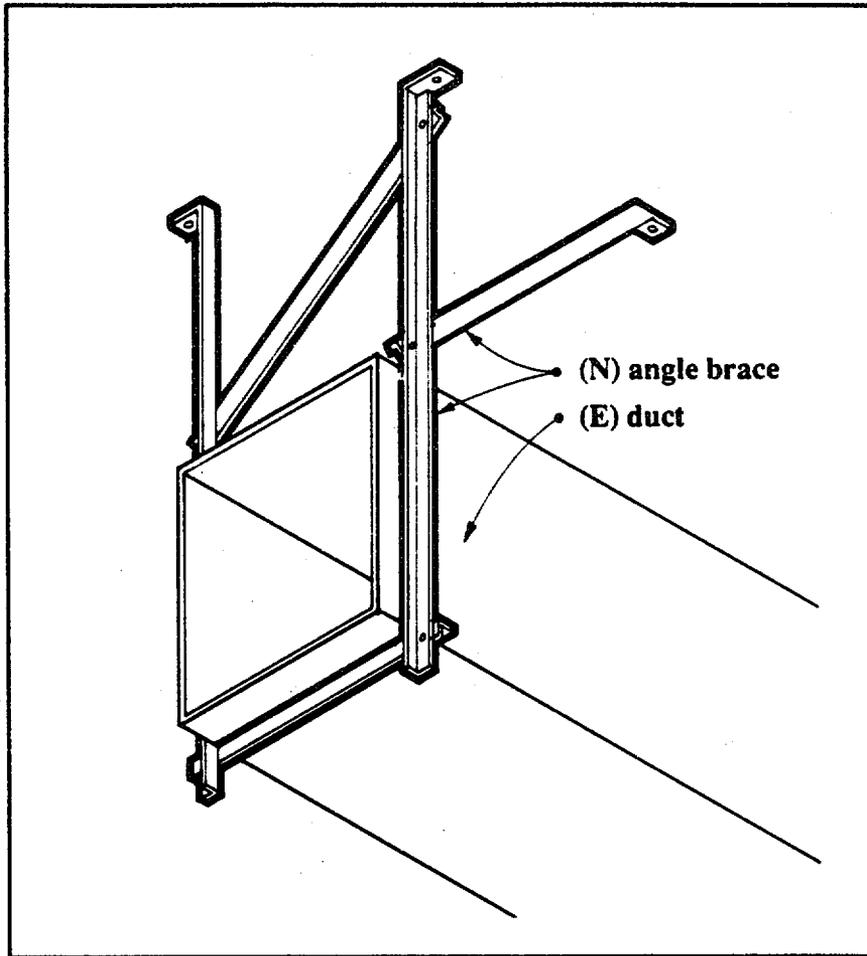


FIGURE 6.2c Lateral and longitudinal braces for rectangular ducting.

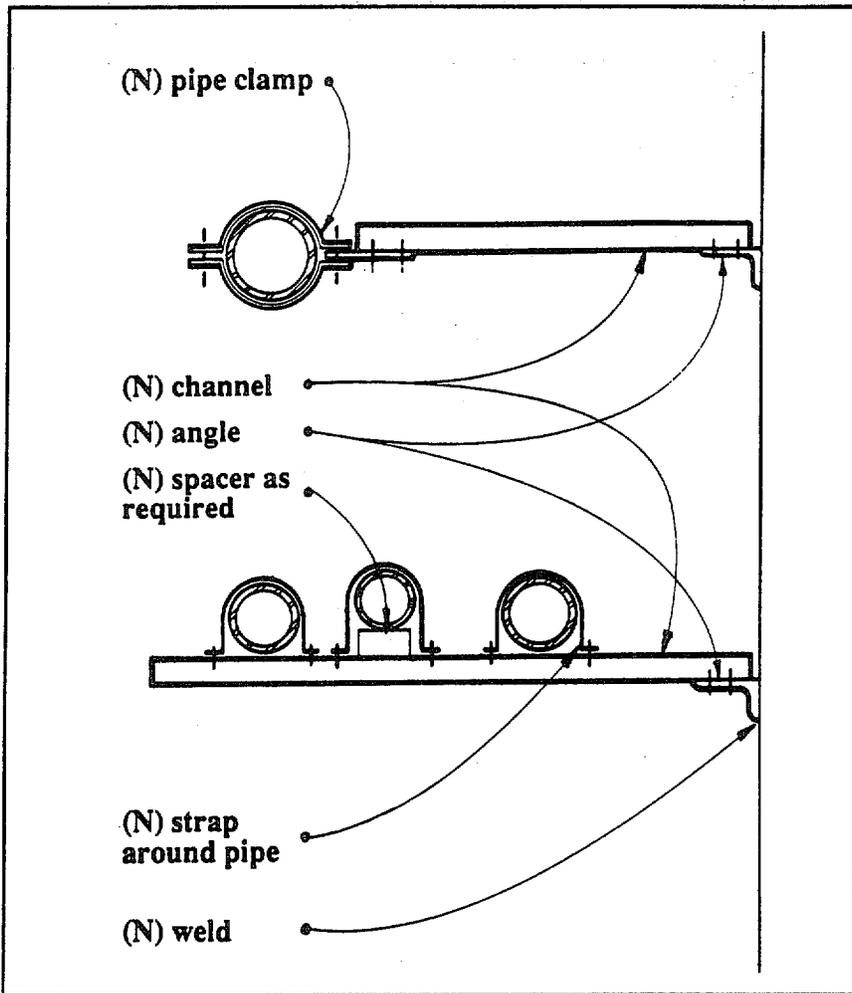


FIGURE 6.2d Lateral braces for piping.

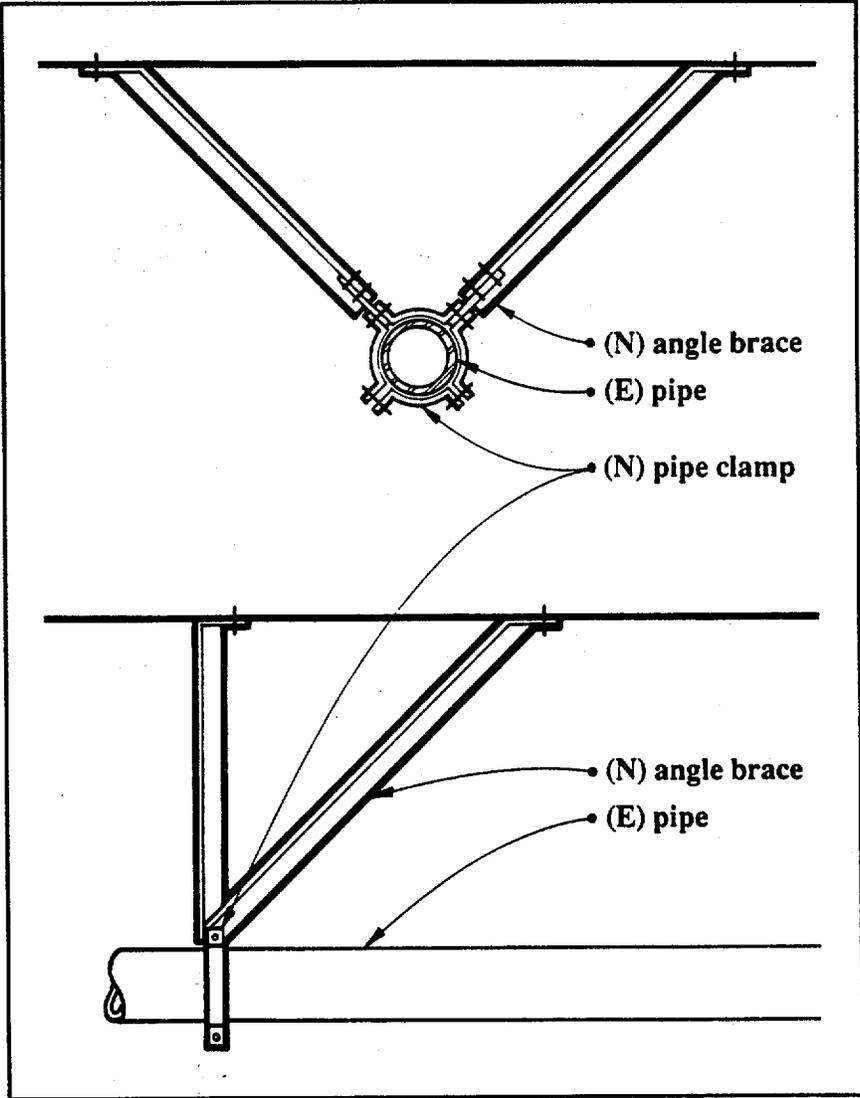


FIGURE 6.2e Longitudinal pipe brace.

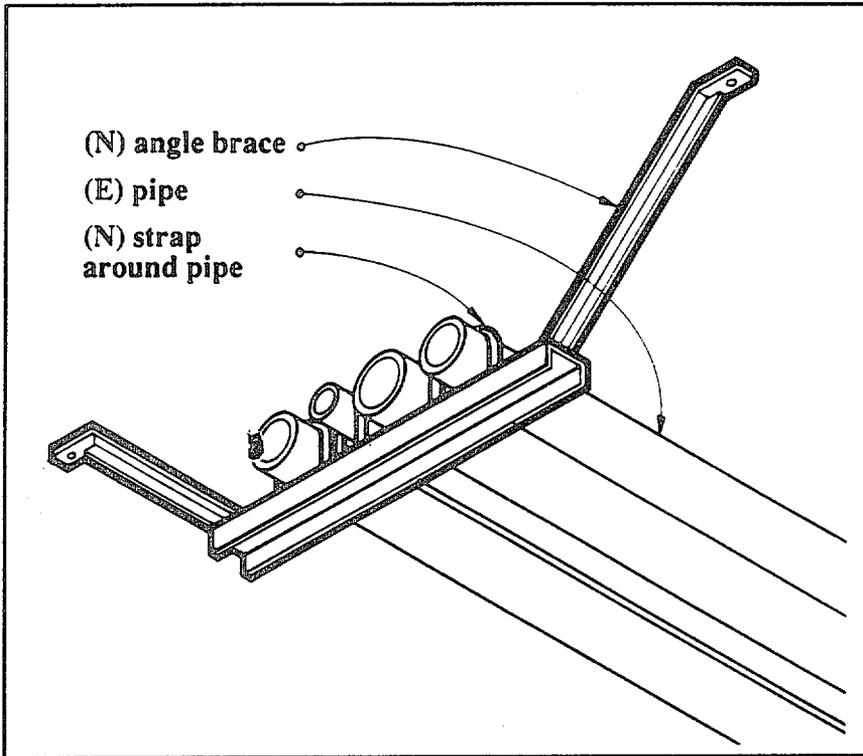


FIGURE 6.2f Lateral brace for multiple pipes.

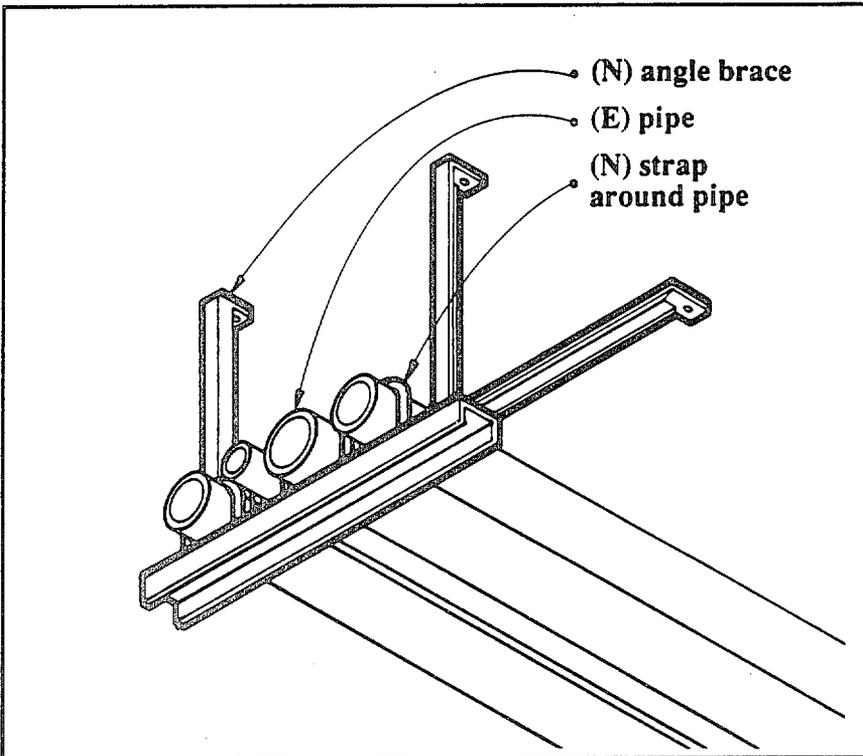


FIGURE 6.2g Longitudinal brace for multiple pipes.

6.3 ELEVATORS

Elevator machinery and controller units should be anchored like other mechanical and electrical equipment to prevent the units from sliding or toppling. Rope retainer guards should be provided on sheaves to inhibit displacement of wire ropes. Snag points created by rail brackets should be provided with guards so that compensating ropes or chains, governor ropes, suspension ropes, and traveling cables will not snag. Retainer plates should be added to the top and bottom of the cars and counterweights to prevent them from becoming dislodged from the rails. Seismic switches should be installed to provide an electrical alert or command for the safe automatic emergency operation of the elevator system and to detect lateral motion of the counterweight. For more information on the requirements for elevator seismic safety refer to ANSI 17.1, *Safety Codes for Elevators and Escalators*.

6.4 EMERGENCY POWER SYSTEMS

Although emergency power systems typically containing batteries, motor generators, fuel tanks, transformers, switchgear, and control panels are designed to be activated in the event of an emergency, many are inadequately protected from earthquake forces.

Batteries are frequently stored in racks as shown in Figure 6.4a, and structural members should be installed

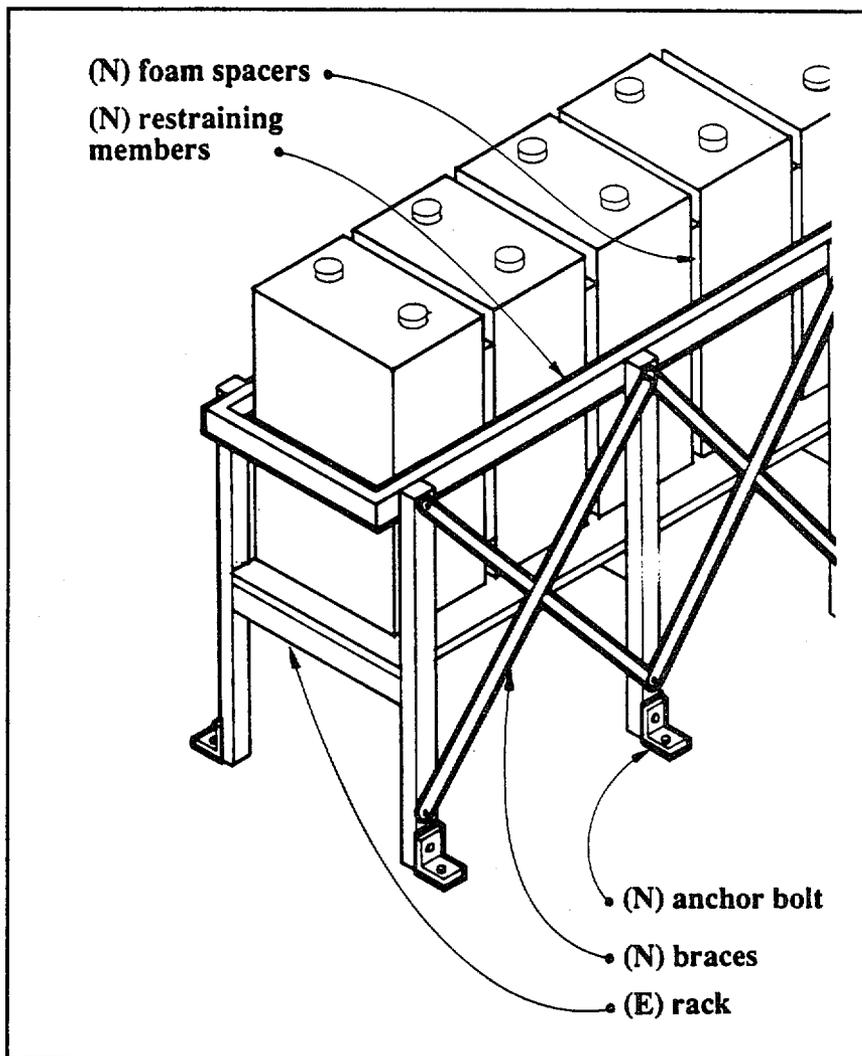


FIGURE 6.4a Bracing of existing battery racks.

to restrain the batteries to the racks, the racks should be braced, and adequate anchorages should be provided to carry the lateral loads. Foam spacers also should be fitted snugly between the batteries to prevent them from impacting each other.

Motor generators typically are mounted on vibration isolators, and these units should have seismic stops installed as shown in Figures 6.1d or 6.1e. Fuel tanks frequently are mounted on legs to facilitate gravity feed of the fuel, and these tanks should be braced as shown in Figure 6.4b and provided with adequate anchorage. Flexible fuel piping with adequate loops also should be installed both at the fuel tank and at the motor generator, transformers, switchgear, and control panels should be anchored as shown in Figure 6.1b.

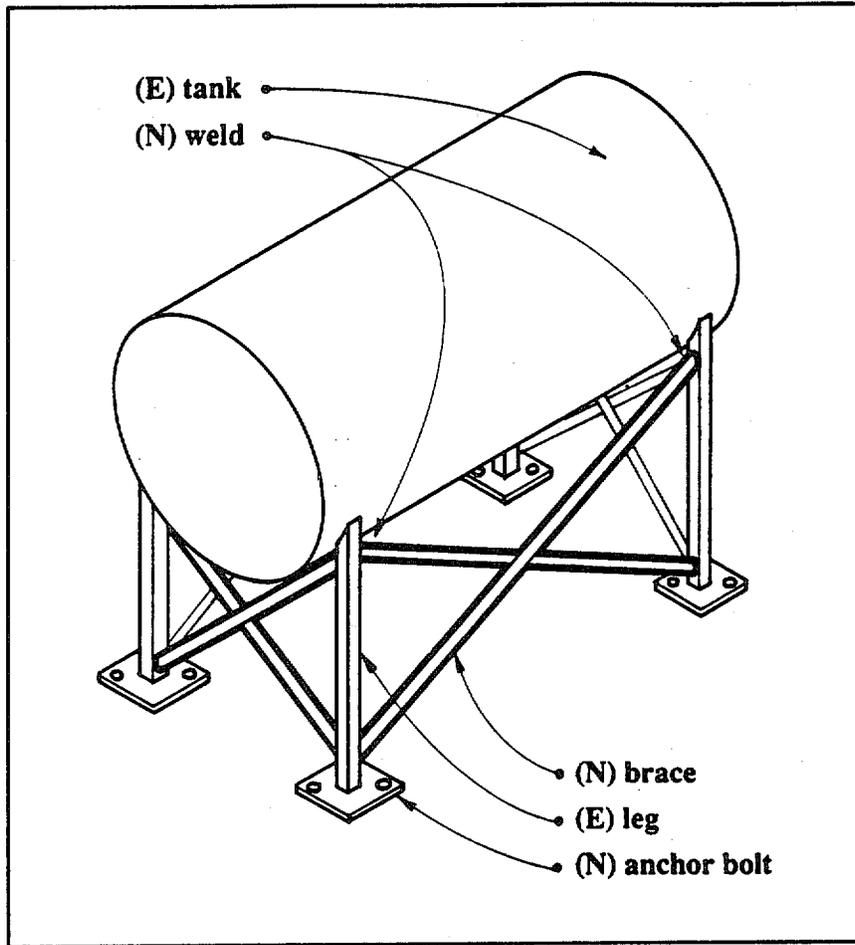


FIGURE 6.4b Bracing of horizontal tank.

6.5 HAZARDOUS MATERIAL STORAGE SYSTEMS

Seismic-activated shutoff valves should be installed on hazardous materials supply lines. These lines also should be adequately braced as shown in Figures 6.2e and 6.2f and should be provided with flexible connections at storage tanks. Bottles of laboratory chemicals should be prevented from falling by using elastic straps or shelf lips as shown in Figure 6.5a. Liquid oxygen and similar pressurized tanks also should be restrained as indicated in Figure 6.5b.

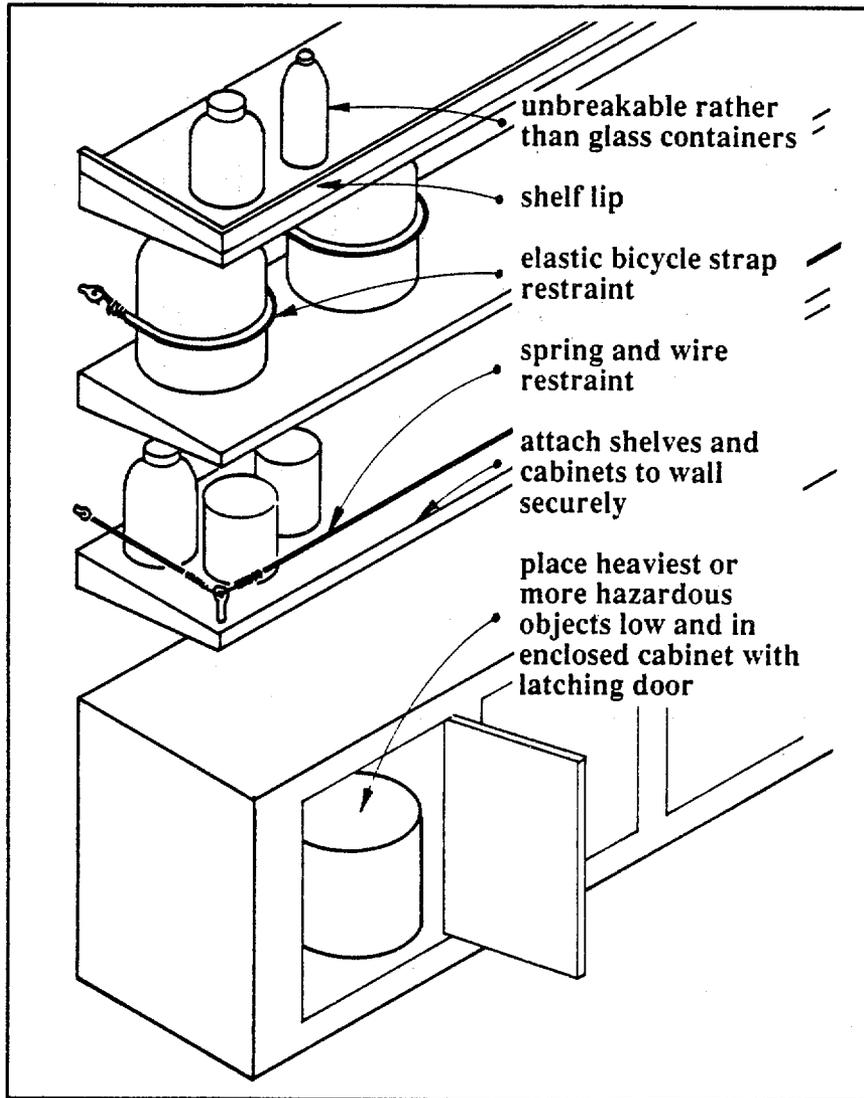


FIGURE 6.5a Protective measures for hazardous materials.

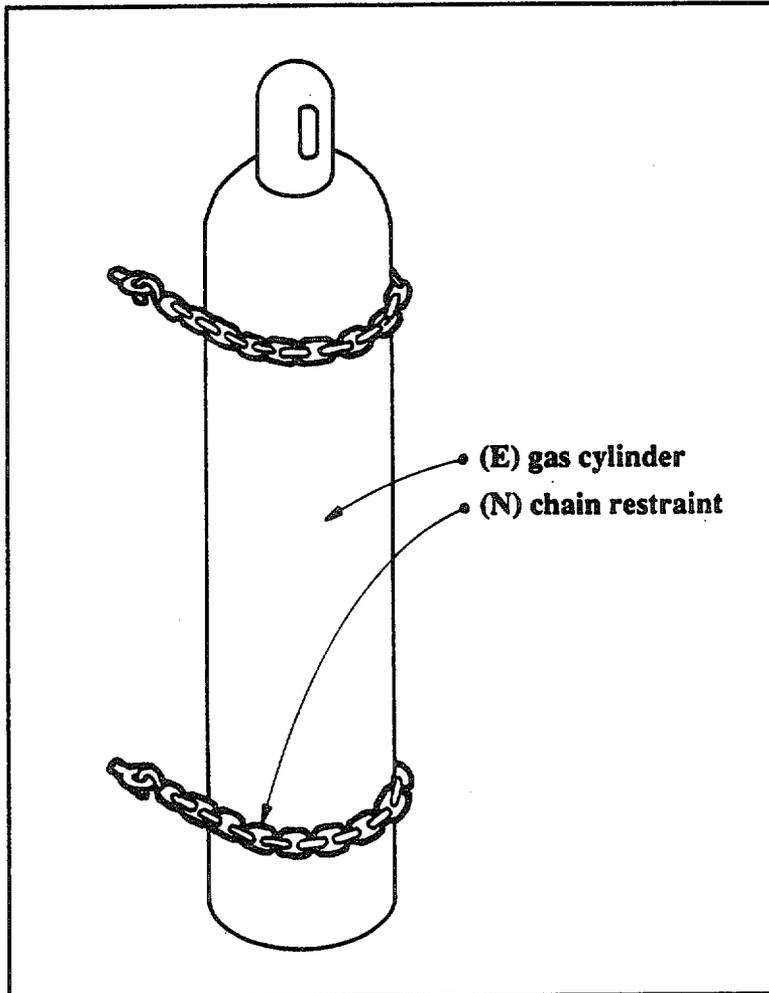


FIGURE 6.5b Anchorage detail for pressurized tanks.

6.6 COMMUNICATIONS SYSTEMS

The operation of communication systems following an earthquake is of vital importance to individuals, communities, federal agencies, and private businesses that depend on them to aid in assessing damage and responding to problems.

Telephone communications equipment consists of input and output data processing units, disk drives, central computers, and remote regional and central switching units, much of which is located on raised access floors; this computer type equipment is discussed in Sec. 6.7. Remote switching units not located on raised floors should be secured like other mechanical and electrical equipment as discussed in Sec. 6.1.

Essential facilities such as hospitals and fire and police stations that must have communication capabilities in the event of an earthquake should have backup external and internal communication systems. Radio equipment should be secured to prevent sliding or toppling. Desk top equipment also should be secured or tethered to prevent falling.

6.7 COMPUTER EQUIPMENT

Computer equipment vulnerable to seismic damage includes electronic data processing equipment such as mainframes, peripherals, telecommunications cabinets, and tape and disk storage units. Seismic rehabilitation to protect computer equipment is different from that required for other mechanical and electrical equipment for several reasons: (1) computer equipment typically is located on raised access floors that complicate traditional anchorage techniques and may amplify seismic loads, (2) computer equipment design is rapidly evolving and advancing, units frequently are replaced or rearranged, and (3) some computer equipment may be sensitive to high-frequency vibrations such as those that may be caused by ground shaking.

The remainder of this section briefly identifies rehabilitation techniques for data processing equipment and tape and disk storage racks. For more information on the subject, refer to *Data Processing Facilities: Guidelines for Earthquake Hazard Mitigation* (Olson, 1987), which provides detailed seismic design recommendations for new computer facilities and the rehabilitation of existing facilities.

Electronic data processing (EDP) equipment typically is located on raised access floors; hence, the traditional techniques of anchoring electrical equipment to the floor are complicated by the fact that the anchorage needs to pass through the access floor to the subfloor. This reduces the access to the space beneath the raised floor and greatly reduces the flexibility to rearrange and replace equipment. Some dynamic tests of EDP equipment also have shown that certain vibration-sensitive equipment may be more prone to seismic damage if it is rigidly anchored to the building and is subjected to high-frequency seismic ground motions than if the equipment is free to slide on the access floor. However, if EDP units are unrestrained, they may slide into structural walls or adjacent equipment or their support feet may slide into an access floor penetration, and the unit will topple.

Two general solutions may be used to reduce the potential for seismic damage of EDP equipment: rigidly restraining the equipment or allowing the equipment to slide. Rigid restraints (Figure 6.7a) may be appropriate for equipment that is not vibration-sensitive, is not likely to be relocated, or is tall and narrow (and, hence, susceptible to toppling). Air-handling units, modem cabinets, and power distribution units fall into this category. Tall, flexible equipment such as modem cabinets may require stiffening or bracing near the top. If anchored only at the base, the seismic motions at the top of the units may be significantly amplified and may result in equipment damage. Figure 6.7b shows a detail that will prevent toppling but does not transmit high-frequency ground shaking to the unit.

Equipment that is vibration sensitive or is likely to require frequent relocation can be isolated to reduce the potential for seismic damage. Some of the considerations necessary for isolating equipment include protecting the equipment from sliding to prevent a supporting foot or caster from falling into an opening in the access floor (provided for cable penetrations). This can be prevented by tethering the equipment to the subfloor (Figure 6.7c) so that the equipment cannot slide far enough to impact other equipment or walls or to fall into a penetration. Precautions should be considered for tall equipment restrained with a tether to prevent the equipment from reaching the end of the tether, which may cause the equipment to overturn. Floor penetrations also can be provided with guards (Figure 6.7c) that will prevent the equipment feet from entering. Adjacent

equipment either should be separated by about 1 foot to prevent potential pounding or should be strapped together (Figure 6.7d) so that the separate pieces move as a unit.

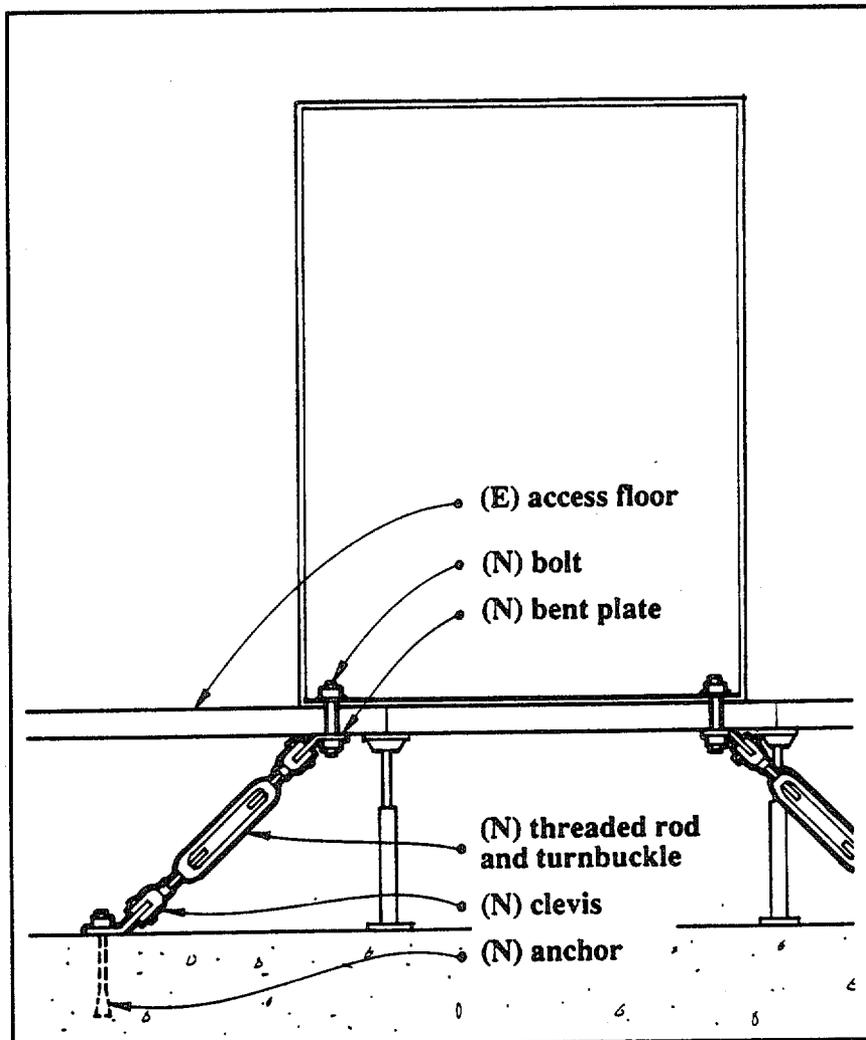


FIGURE 6.7a Rigid anchorage of computer equipment.

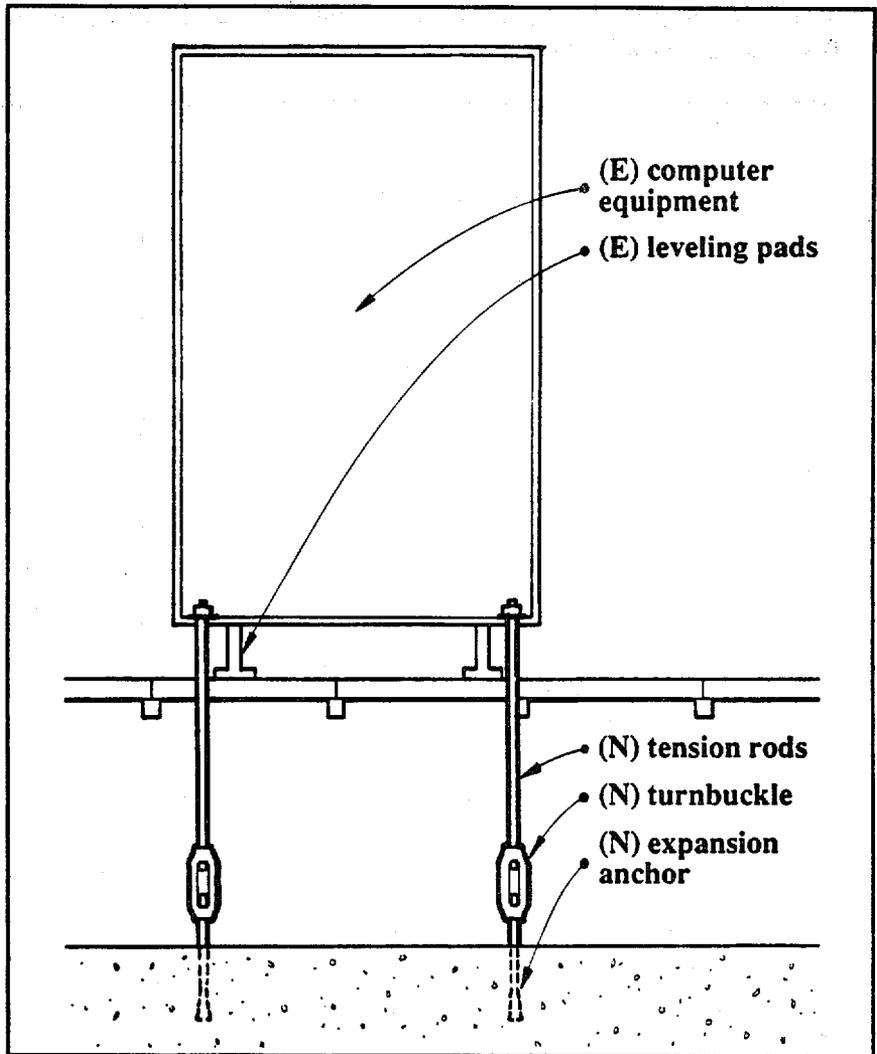


FIGURE 6.7b Flexible anchorage of computer equipment.

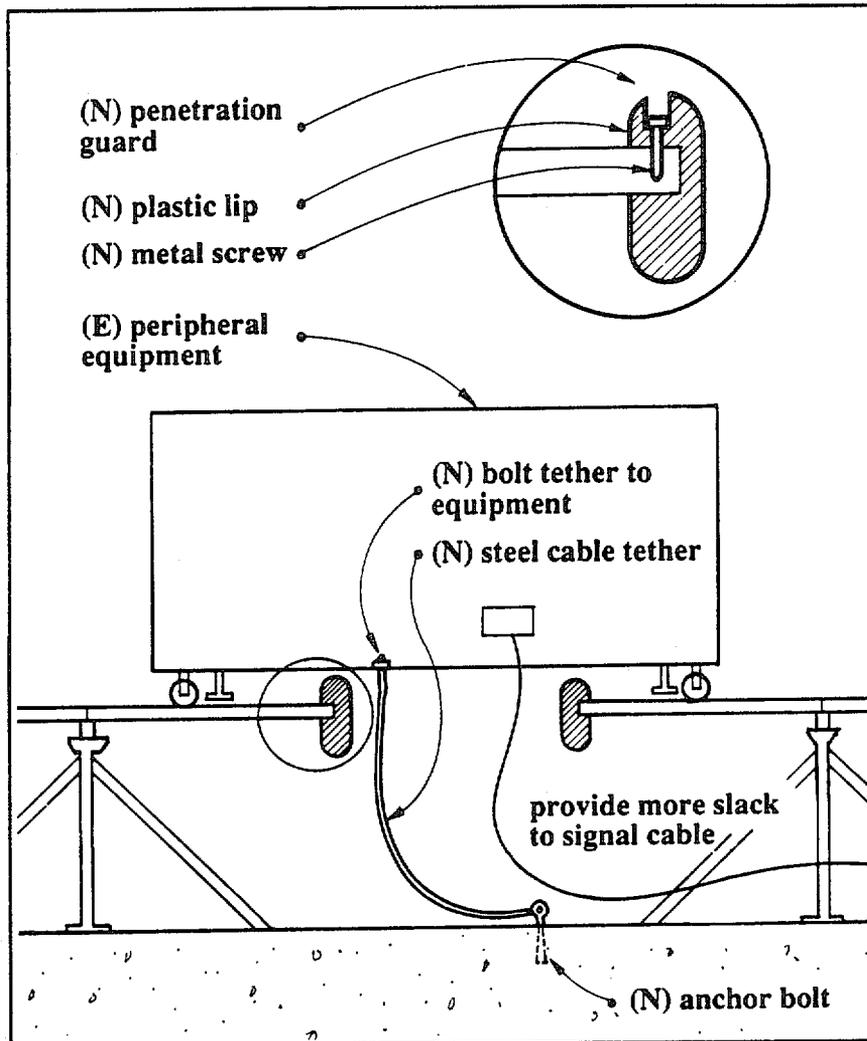


FIGURE 6.7c Tether and opening guards for protection of computer equipment.

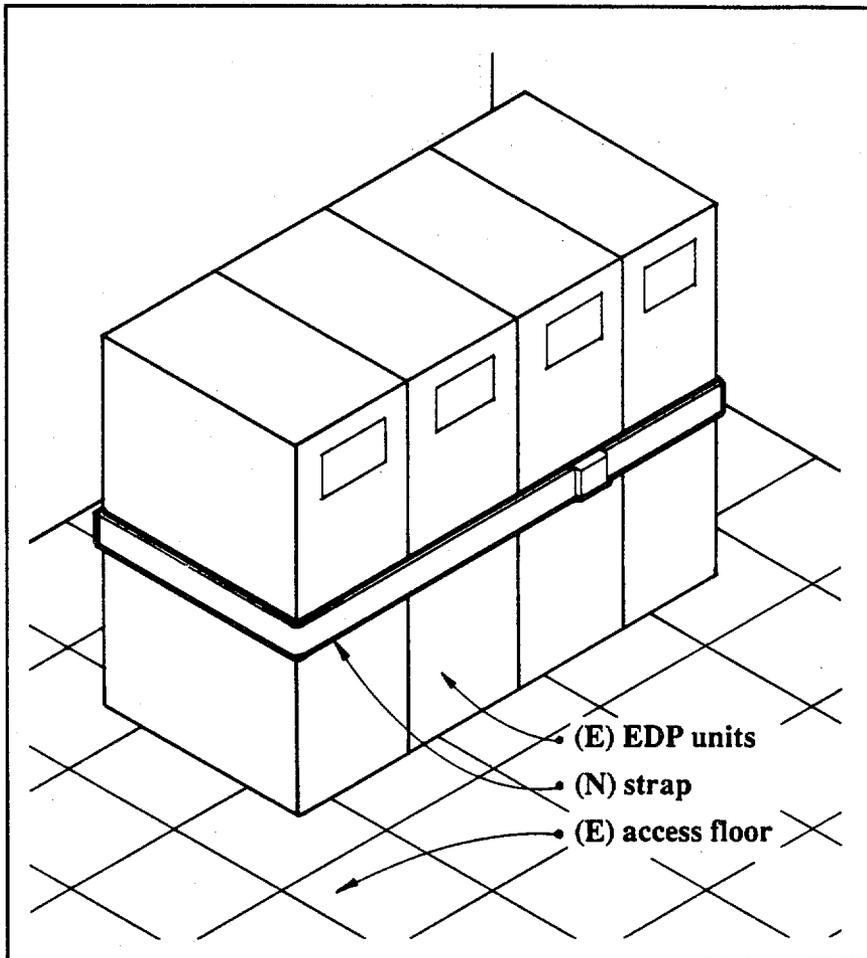


FIGURE 6.7d Strapping of electronic data processing units.

BIBLIOGRAPHY

- ABK. 1981. *Methodology for Mitigation of Seismic Hazards in Existing Unreinforced Masonry Buildings: Categorization of Buildings*. Washington, D.C.: National Science Foundation.
- American National Standards Institute. 1987. *Safety Code for Elevators*, "Appendix F - Recommended Elevator Safety Requirements for Seismic Risk Zone 3 or Greater," ANSI 17.1.
- Applied Technology Council. 1986. *Base Isolation and Passive Energy Dissipation: Proceedings of a Seminar and Workshop*, ATC-17. Redwood City, California: Applied Technology Council.
- Applied Technology Council. 1987. *Evaluating the Seismic Resistance of Existing Buildings*, ATC-14. Redwood City, California: ATC.
- Applied Technology Council. 1988. *Rapid Visual Screening of Buildings for Potential Seismic Hazards*, ATC-21. Redwood City, California: ATC.
- Applied Technology Council. 1989. *Seismic Evaluation of Existing Buildings: (Preliminary)*, ATC-22, FEMA 178. Washington, D.C.: FEMA.
- Applied Technology Council. 1989. *Seismic Evaluation of Existing Buildings: Supporting Documentation*, ATC-22-1, FEMA 175. Washington, D.C.: FEMA.
- Arioclu, Ersin, K. Anadol, E. Gunol, E. Akar, and A. Candogan. 1978. "Aseismic Design and Construction of a Precast Concrete Industrial Center with Some Test Results." In the *Proceedings of the Sixth European Conference on Earthquake Engineering*.
- Arnold, Christopher, and Robert Reitherman. 1982. *Building Configuration and Seismic Design*. New York: John Wiley and Sons, 1982.
- Ayres, J. Marx, and Tseng-Yao Sun. 1972. *Earthquake Resistive Construction for Mechanical Systems, Light Fixtures and Ceilings, Report of the Los Angeles Unified School District*. Los Angeles, California, Los Angeles Unified School District.
- Batthey, Jr., George E. 1982. "Materials Evaluation," in *FIX'EM: Identification and Correction of Deficiencies in Earthquake Resistance of Existing Buildings, Earthquake Engineering Research Institute Seminar*. Oakland, California: Earthquake Engineering Research Institute.
- Benedetti, D., and E. Vitiello. 1978. "Strengthening of Masonry Buildings." In *Proceedings of the Seminar on Constructions in Seismic Zones, Bergamo-Udine, Italy, International Association for Bridge and Structural Engineering*.
- Boardman, P., B. Wood, and A. Carr. 1986. "Union House--A Cross Braced Structure with Energy Dissipators." In *Proceedings of a Seminar and Workshop on Base Isolation and Passive Energy Dissipation*, ATC-17. Redwood City, California: Applied Technology Council.
- Bolong, Zhu, Jiang Zhixian, and Wu Mingshun. 1982. "A Study on Aseismic Capacity of Brick Masonry Buildings Strengthened with Reinforced Concrete Columns and Tie Bars." In *Proceedings of U.S. -- People's Republic of China Bilateral Workshop on Earthquake Engineering*, Vol. 1.

Breiholz, David C. 1987. "Centercore Strengthening System for Seismic Hazard Reduction of Unreinforced Masonry Bearing Wall Buildings." Paper prepared for the Structural Engineering Association of California 56th Annual Convention.

Building Seismic Safety Council. 1988 and 1991. *NEHRP Recommended Provisions for the Development of Seismic Regulations for New Buildings*, 2 vols. and maps. Washington, D.C.: Federal Emergency Management Agency.

Building Seismic Safety Council. 1992. *NEHRP Handbook for the Seismic Evaluation of Existing Buildings*. Washington, D.C.: Federal Emergency Management Agency.

Cagley, James R. 1978. *Seismic Hardening of Unreinforced Masonry Walls through a Surface Treatment*. Washington, D.C.: National Science Foundation.

Clark, W. D., and O. A. Glogau. 1979. "Suspended Ceilings: The Seismic Hazard and Damage Problem and Some Practical Solutions." In *Proceedings of the South Pacific Regional Conference on Earthquake Engineering*, Vol. 3.

Clough, R., and J. Penzien. 1975. *Dynamics of Structures*. New York: McGraw-Hill.

Davis, Harold A. 1978. "The Center for Educational Development, a Medium Scale Seismic Upgrading." In *Proceedings of the North American Masonry Conference*.

Departments of the Army, the Navy and the Air Force. 1982. *Seismic Design for Buildings*, Army TM 5-809-10, Navy NAVFAC P-355, AFM 88-3, Chap. 13. Washington, D.C.: U.S. Government Printing Office.

Departments of the Army, the Navy, and the Air Force. 1988. *Seismic Design Guidelines for Upgrading Existing Buildings*, Army TM 5-809-10-2, Navy NAVFAC P-355.2, AFM 88-3, Chap. 13, Sec. B. Washington, D.C.: U.S. Government Printing Office.

Departments of the Army, the Air Force, and the Navy. 1986. *Seismic Design Guidelines for Essential Buildings*, Army TM 5-809-10.1, Navy NAVFAC P355.1, AFM 88-3, Chap. 13.1. Washington, D.C.: U.S. Government Printing Office.

Dynamic Isolation Systems. 1988. *Seismic Isolation of Buildings, Workshop Proceedings*. Berkeley, California: Dynamic Isolation Systems, Inc.

Earthquake Engineering Research Institute. 1984. *Nonstructural Issues of Seismic Design and Construction, Technical Evaluation Based on a Workshop of the National Science Foundation*. Oakland, California: Earthquake Engineering Research Institute.

ED2 International. 1985. *Suspended Ceiling System Survey and Seismic Bracing Recommendations*. Survey of the Lawrence Livermore National Laboratory.

Endo, T., A. Okifuji, S. Sugano, T. Hayashi, T. Shimizu, K. Takahara, H. Saito, and Y. Yoneyama. 1984. "Practices of Seismic Retrofit of Existing Concrete Structures in Japan." In *Proceedings of the Eighth World Conference on Earthquake Engineering*.

Forell, Nicholas F. 1983. "Structural Engineering Considerations." In *Workshop Proceedings of the Earthquake Damage Mitigation for Computer Systems for the Finance, Insurance and Monetary Services Committee, California*.

Gates, William E., and Charles Scawthorn. 1983. "Mitigation of Earthquake Effects on Data Processing and Telecommunications Equipment." In *Workshop Proceedings of the Earthquake Damage Mitigation for Computer Systems for the Finance, Insurance and Monetary Services Committee, California*.

- Georgescu, Emil Saver. 1982. "Seismic Risk Mitigation of Rural Houses Using Performance Coefficients Selections." In *Proceedings of the Seventh European Conference on Earthquake Engineering, Athens, Greece*.
- Giuliani, Hugo. 1980. "Supporting, Recovery, and Strengthening of Southeastern Block of School, "ENET No. 2" Affected by Cauce Earthquake of November 1977." *Bulletin of the International Institute of Seismology and Earthquake Engineering* 18.
- Goodno, B. J., J. I. Craig, M. Mayyappa, and H. Palsson. 1983. *Cladding-Structure Interaction in Highrise Buildings*, Report of the National Science Foundation Civil and Environmental Engineering Earthquake Hazards Mitigation. Washington, D.C.: National Science Foundation.
- Graff, Edward D., and Edwin G. Zacher. 1979. "Sand to Sandstone: Foundation Strengthening with Chemical Grout." *Civil Engineering* (January).
- Hanson, R. 1988. "Energy Dissipation Systems." In *Proceedings of the 1988 Structural Engineers Association of California Convention, Kona, Hawaii*.
- Hanson, Robert D. 1977. "Repair, Strengthening, and Rehabilitation of Buildings." In *Workshop Proceedings*, National Science Foundation Report. Washington, D.C.: National Science Foundation.
- Hawkins, Neil M., and J. F. Stanton. 1982. "Building Rehabilitation Strategies in Seattle, Washington." In *Proceedings of U.S.-People's Republic of China Bilateral Workshop on Earthquake Engineering*, Vol. 1.
- Higashi, Yoichi, and Seiji Kokusho. 1975. "The Strengthening Methods of Existing Reinforced Concrete Buildings." In *Proceedings of the U.S.-Japan Cooperative Research Program*.
- Holmes, William T. 1979. "The Rehabilitation of History Corner of the Stanford University Main Quad." In *Proceedings of the 2nd U.S. National Conference on Earthquake Engineering*.
- Holmes, William T. 1982. "Nonstructural Components." In *FIX'EM: Identification and Correction of Deficiencies in Earthquake Resistance of Existing Buildings*, Earthquake Engineering Research Institute Seminar. Oakland, California: Earthquake Engineering Research Institute.
- Hom, Stephen, Raymond Kincaid, and Peter I. Yanev. 1986. *Practical Equipment Seismic Upgrade and Strengthening Guidelines*, Report of Lawrence Livermore National Laboratory.
- Hopkins, David C. 1987. "Recommendations for Strengthening Earthquake Risk Buildings in New Zealand." In *Proceedings of the Pacific Conference on Earthquake Engineering, New Zealand*.
- Iwan, Wilfred D. 1983. "Mitigating Seismic Losses to Computer Facilities." In *Workshop Proceedings of the Earthquake Damage Mitigation for Computer Systems for the Finance, Insurance and Monetary Services Committee, California*.
- Jacobsen, L. 1930. "Steady State Forced Vibration as Influenced by Damping." *Transactions, ASME*, Vol. 52, Part 1, pp. APM 169-181.
- Jordan, Carl H. 1977. "Seismic Restraint of Mechanical and Electrical Equipment in Buildings." In *Report from the American Society of Civil Engineers Meeting in San Francisco*.
- Kariotis, Kesler, and Allies. 1978. "Mitigation of Seismic Hazards in Existing Unreinforced Masonry Wall Buildings: Performance of Undesigned and Modified Elements. Evaluation of Modification Method." *Bulletin of The New Zealand National Society for Earthquake Engineering* 11(4).

Kawamata, Shigeya, Mamoru Yoneda, and Yasuhiko Hangai. 1973. *Development of a Vibration Control System for Structures by Means of "Mass Pumps,"* Bulletin No. 7 of the Earthquake Resistance Structure Research Center.

Kay, Donald R. 1982. "Correction of Deficiencies in Reinforced Concrete Buildings." In *FIX'EM: Identification and Correction of Deficiencies in Earthquake Resistance of Existing Buildings, Earthquake Engineering Research Institute Seminar*. Oakland, California: Earthquake Engineering Research Institute.

Kelly, James M. and Douglas Way. 1982. "The Seismic Rehabilitation of Existing Buildings Using Natural Rubber Bearings." In *Proceedings of the 51st Annual Convention of the Structural Engineers Association of California*.

Kelly, James M. 1979. "Aseismic Base Isolation: A Review." In *Proceedings of the 2nd U.S. National Conference on Earthquake Engineering*.

Knoll, Franz. 1983. "Upgrading Seismic Resistance of Buildings for Moderate Earthquake Risk." *The Journal of Earthquake Wind and Ocean Engineering, Eng. Struc.* 5(2).

Korenev, B. G., and V. S. Poliakov. 1978. "Reduction of Seismic Structural Response Using the Vibration Absorber." In *Proceedings of the Sixth European Conference on Earthquake Engineering*.

Lagorio, Henry J., Howard Friedman, and Kit M. Wong. 1986. *Issues for Seismic Strengthening of Existing Buildings: A Practical Guide for Architects*. Berkeley: University of California Center for Environmental Design Research.

Lybas, J. M. 1978. *Methods for Seismic Strengthening of Buildings,* Report M249 of the Construction Engineering Research Laboratory.

Marinakis, Kleon. 1978. "A Way to Increase the Resistance of Supporting Structures that are Already Built Against Seismic Forces." Paper for the Hellenic Institute for the Application of Science, Athens, Greece, Seminar on Constructions in Seismic Zones, Bergamo-Udine, Italy, International Association for Bridge and Structural Engineering, May.

Martin, Ignacio. 1987. "Seismic Rehabilitation: Why, When, and How." In *Mexico Earthquakes--1985, Proceedings of the International Conference*. New York: American Society of Civil Engineers.

McGavin, Gary L. 1981. *Earthquake Protection of Essential Building Equipment: Design Engineering, Installation*. New York: John Wiley & Sons.

Mihlailescu, M, I. Olariu, and N. Poienar. 1990. "Strengthen By Prestressing of a Multistory Frame Building." In *Proceedings of the Symposia on Partial Prestressing and Practical Construction in Prestressed and Reinforced Concrete*.

Mullins, Peter J., and Colin O'Connor. 1987. "Reinforcement of Brick Walls Spanning Vertically." *Journal of Structural Engineering* 113(2).

New Zealand National Society for Earthquake Engineering. 1985. *Recommendations and Guidelines for Classifying, Interim Securing and Strengthening Earthquake Risk Buildings*.

Newmark, N., and W. Hall. 1982. *Earthquake Spectra and Design*. Oakland, California: Earthquake Engineering Research Institute.

Niu, Zezhen. 1982. "Calculating Methods of Strengthened and Repaired Brick Masonry Structures for Earthquake Resistance." In *Proceedings of U.S.-People's Republic of China Bilateral Workshop on Earthquake Engineering, Vol. 1*.

Okada, T., M. Murakami, M. Seki, and A. Ando. 1983. "Repair and Strengthening of Reinforced Concrete Buildings." In *Proceedings of the International Association for Bridge and Structural Engineering Symposium, Vienna*, Vol. 46.

Oliveira, Carlos S., and Artur Ravara. 1978. "Methodology for Strengthened Existing Structures Built without the Required Earthquake Resistance." In *Proceedings of the Sixth European Conference on Earthquake Engineering*.

Olson, R.A. 1987. *Data Processing Facilities: Guidelines for Earthquake Hazard Mitigation*. California: Financial Insurance and Monetary Services Committee.

Ozmen, Gunay. 1982. "Redesign Considerations." In *Proceedings of the Ninth Regional Seminar on Earthquake Engineering*, Vol. 1, Turkish National Committee for Earthquake Engineering Publication 2.

Plecnik, Joseph, Thomas Cousins, and Edward O'Conner. 1986. "Strengthening of Unreinforced Masonry Buildings." *Journal of Structural Engineering* 112 (5).

Popov, E., and M. Engelhardt. 1987. "Seismic Eccentrically Braced Frames." *Journal of Constructional Steel Research* (United Kingdom).

Prawal, S. P., and A. M. Reinhorn. 1985. "Seismic Retrofit of Structural Masonry Using a Ferrocement Overlay." In *Proceedings of the Third North American Masonry Conference*.

Rea, D. 1968. Discussion on "Equivalent Viscous Damping for Yielding Structures." *Journal of the Structural Division* 94(EM6).

Reitherman, R. 1985. *Reducing the Risks of Nonstructural Earthquake Damage: A Practical Guide*. Oakland, California: Bay Area Regional Earthquake Preparedness Project.

San Bernadino County Department of Economic and Community Development. 1987. *Seismic Strengthening, Final Report and Handbooks*. San Bernadino, California: County Department of Economic and Community Development.

Scalzi, John B. 1983 "Strengthening of Masonry Buildings in the United States." In *Proceedings of the LABSE Symposium, Vienna*, Vol. 46.

Schmid, Ben L. 1982. "Special Problems Related to Masonry Structures." In *FIX'EM: Identification and Correction of Deficiencies in Earthquake Resistance of Existing Buildings, Earthquake Engineering Research Institute Seminar*. Oakland, California: Earthquake Engineering Research Institute.

Scholl, R. E. In press. Earthquake Resistant Design Using Added Damping and Stiffness Elements.

Shapiro, Okino, Hom and Associates for the Applied Technology Council. 1980. *The Home Builder's Guide for Earthquake Design*. Prepared for the Department of Housing and Urban Development, Office of Policy Development and Research. Washington, D.C.: U.S. Government Printing Office.

Sheet Metal and Air Conditioning Contractors National Association. 1982. *Guidelines for Seismic Restraints of Mechanical Systems and Plumbing Piping Systems*. Place: Sheet Metal and Air Conditioning Contractors National Association.

Stone, Marraccini and Patterson. 1976. *Study to Establish Seismic Protection Provisions for Furniture, Equipment and Supplies for VA Hospitals*. Washington, D.C.: Veterans Administration.

Structural Engineers Association of California. 1986. "Earthquake Hazard Mitigation of Unreinforced Pre-1933 Masonry Buildings." In *Technical Manual Containing Papers on the Use of the Proposed Rule of General Application and Alternate Design Approach to the Reduction of Earthquake Hazards Seminar, Structural Engineers Association of Southern California*.

Sugano, Shunsuke. 1982. "An Overview of the State-of-the-Art In Seismic Strengthening of Existing Reinforced Concrete Buildings in Japan." In *Proceedings of the Third Seminar of Repair and Retrofit of Structures*.

Sugano, S. 1981. "Guideline for Seismic Retrofitting (Strengthening, Toughening and/or Stiffening) Design of Existing Reinforced Concrete Building." In *Proceedings of the Second Seminar of Repair and Retrofit of Structures*.

Thomson, W. 1972. *Theory of Vibration*. Englewood Cliffs, New Jersey: Prentice-Hall.

United Nations Industrial Development Organization. 1983. *Building Construction Under Seismic Conditions in the Balkan Region*, Vol. 5.

URS/John A. Blume and Associates. 1989. *Techniques for Seismically Rehabilitating Existing Buildings (Preliminary)*. Washington, D.C.: FEMA.

Warner, James. 1980. "Repair and Retrofit of Buildings Overview of U.S. Experiences -- Current Practice and Weaknesses." In *Proceedings of the First Seminar of Repair and Retrofit of Structures*.

Warner, James. 1976. "Ventura City Hall Restoration." *Journal of the Construction Division* 102(March).

Wong, Kit M. 1987. *Seismic Strengthening of Unreinforced Masonry Buildings*. Berkeley, California: Center for Environmental Design Research.

Woodhead, Roger, and D. R. Morgan. 1983. "Block 15 Heritage Redevelopment Seismic Upgrading." In *Proceedings Fourth Canadian Conference on Earthquake Engineering, Vancouver*.

Wyllie, Jr., Loring A. 1983. "Seismic Strengthening Procedures for Existing Structures." In *Proceedings of the International Association of Bridge and Structural Engineering Symposium, Vienna*, Vol. 46.

Wyllie, Jr., Loring A. 1981. "Strengthening Existing Concrete and Masonry Buildings for Seismic Resistance." In *Proceedings of the Second Seminar of Repair and Retrofit of Structures*, Structural Engineers Association of Northern California.

Yanev, Peter I. 1983. "Earthquake Risk-Reduction and Control for Computer Systems." In *Proceedings of the Workshop on Earthquake Damage Mitigation for Computer Systems for the Finance, Insurance and Monetary Services Committee*.

Yongsong, Gong. 1982. "Aseismic Evaluation of Brick Structures." In *Proceedings of U.S. -- People's Republic of China Bilateral Workshop on Earthquake Engineering*, Vol. 1.

Zarnic, Roko, Miha Tomazevic, and Tomaz Velechovsky. 1986. "Experimental Study of Methods for Repair and Strengthening of Masonry Infilled Reinforced Concrete Frames." In *Proceedings of the 8th European Conference on Earthquake Engineering*.

Zarnic, Roko, and Miha Tomazevic. 1986. "Aseismic Strengthening of an Historical XVII-Century Urban Building--A Case Study." In *Proceedings of the 8th European Conference on Earthquake Engineering*.

APPENDIX A

SEISMIC-FORCE-RESISTING ELEMENTS IN BUILDINGS

This handbook discusses techniques for rehabilitating the seismic resistance of the following 15 common building types:

1. Wood Light Frame
2. Wood, Commercial and Industrial
3. Steel Moment Frame
4. Steel Braced Frame
5. Steel Light Frame
6. Steel Frame with Concrete Shear Walls
7. Steel with Infill Masonry Shear Walls
8. Concrete Moment Frame
9. Concrete Shear Walls
10. Concrete Frame with Infill Walls
11. Precast/Tilt-Up Concrete Walls with Lightweight Flexible Diaphragm
12. Precast Concrete Frames with Concrete Shear Walls
13. Reinforced Masonry Bearing Walls with Wood/Metal Deck Diaphragms
14. Reinforced Masonry Bearing Walls with Precast Concrete Diaphragms
15. Unreinforced Masonry Bearing Wall Buildings

The lateral-force-resisting elements of buildings can be categorized into the following subsystems: vertical elements resisting lateral forces, diaphragms, foundations, and the connections between the subsystems. The 15 common building types considered in this report can be composed of various subsystem types. The construction of each subsystem can vary. For example, diaphragms can be constructed of timber, steel or concrete. The technique to rehabilitate a deficient subsystem and hence a deficient building depends upon the type of construction of that subsystem. The following tables present common construction of the lateral-force-resisting subsystems for the 15 common building types. These tables are provided to aid the reader in determining the types of subsystems likely to be present in a building of a given type. With an understanding of the subsystem construction and the subsystem deficiencies, the techniques presented in Chapter 3 can be investigated to determine effective ways to rehabilitate the seismic resistance of a given existing building.

TABLE A1
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 1--WOOD, LIGHT FRAME

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing.</p>	<p>Wood stud walls with let-in or cut-in timber bracing or plywood, straight-laid, or diagonal sheathing.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Nailing and blocking for direct shear transfer from horizontal diaphragms to shear walls or vertical bracing.</p> <p>Drag struts to collect shear from horizontal diaphragms for transfer to shear walls or vertical bracing.</p> <p>Bolting of shear walls and vertical bracing to concrete slabs or foundation walls.</p> <p>Tension ties or hold-downs for shear walls and vertical bracing.</p> <p>Nailing or bolting of vertical bracing.</p>

TABLE A2
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 2--WOOD, COMMERCIAL AND INDUSTRIAL

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing. (Floor or roof decking may be 2-inch material).</p>	<p>Wood stud walls with let-in or cut-in timber bracing or plywood, straight-laid, or diagonal sheathing.</p> <p>Knee bracing or diagonal bracing of timber columns.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Nailing and blocking for direct shear transfer from horizontal diaphragms to shear walls or vertical bracing.</p> <p>Drag struts to collect shear from horizontal diaphragms for transfer to shear walls or vertical bracing.</p> <p>Bolting of shear walls and vertical bracing to concrete slabs or foundation walls.</p> <p>Tension ties or hold-downs for shear walls and vertical bracing.</p> <p>Nailing or bolting of vertical bracing.</p>

**TABLE A3
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 3--STEEL MOMENT FRAME**

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing.</p> <p>Reinforced concrete slab supported on structural steel floor framing members.</p> <p>Steel decking with or without concrete fill.</p>	<p>Moment resisting structural steel frames.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Nailing and blocking for direct shear transfer from horizontal diaphragms to shear walls or vertical bracing.</p> <p>Drag struts to collect shear from horizontal diaphragms for transfer to shear walls or vertical bracing.</p> <p>Shear studs or other connections of concrete diaphragm to steel chord members.</p> <p>Welding, shear studs, or other connections of steel deck diaphragms to structural steel framing.</p> <p>Splice detail of steel chord members.</p> <p>Beam/column connections.</p> <p>Beam/column panel joint details.</p> <p>Column splice details.</p> <p>Column base details.</p>

TABLE A4
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 4--STEEL BRACED FRAME

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing.</p> <p>Reinforced concrete slab supported on structural steel floor framing members.</p> <p>Steel decking with or without concrete fill.</p>	<p>Concentric steel bracing in diagonal, X, K, or chevron configuration.</p> <p>May also have moment resisting structural steel frames.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Nailing and blocking for direct shear transfer from horizontal diaphragms to shear walls or vertical bracing.</p> <p>Drag struts to collect shear from horizontal diaphragms for transfer to shear walls or vertical bracing.</p> <p>Shear studs or other connections of concrete diaphragm to steel chord members.</p> <p>Welding, shear studs, or other connections of steel deck diaphragms to structural steel framing.</p> <p>Splice detail of steel chord members.</p> <p>Beam/column connections.</p> <p>Beam/column panel joint details.</p> <p>Column splice details.</p> <p>Column base details.</p> <p>Bolted or welded bracing connections.</p>

TABLE A5
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 5--STEEL, LIGHT FRAME

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing.</p> <p>Reinforced concrete slab supported on structural steel floor framing members.</p> <p>Steel decking with or without concrete fill.</p>	<p>Moment resisting structural steel frames.</p> <p>Concentric light steel bracing in diagonal or X configuration.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Nailing and blocking for direct shear transfer from horizontal diaphragms to shear walls or vertical bracing.</p> <p>Drag struts to collect shear from horizontal diaphragms for transfer to shear walls or vertical bracing.</p> <p>Shear studs or other connections of concrete diaphragm to steel chord members.</p> <p>Welding, shear studs, or other connections of steel deck diaphragms to structural steel framing.</p> <p>Splice detail of steel chord members.</p> <p>Beam/column connections.</p> <p>Beam/column panel joint details.</p> <p>Column splice details.</p> <p>Column base details.</p> <p>Bolted or welded bracing connections.</p>

**TABLE A6
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 6--STEEL FRAME WITH CONCRETE
SHEAR WALLS**

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Reinforced concrete slab supported on structural steel floor framing members.</p> <p>Steel decking with or without concrete fill.</p>	<p>Nonmoment-resisting steel frames.</p> <p>Reinforced concrete shear walls.</p> <p>May also have moment resisting structural steel frames.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Shear studs or other connections of concrete diaphragm to steel chord members.</p> <p>Welding, shear studs, or other connections of steel deck diaphragms to structural steel framing.</p> <p>Splice detail of steel chord members.</p> <p>Beam/column connections.</p> <p>Beam/column panel joint details.</p> <p>Column splice details.</p> <p>Column base details.</p> <p>Connection of concrete shear walls to floor or roof diaphragms.</p> <p>Development of boundary members for concrete shear walls.</p>

TABLE A7
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 7--STEEL WITH INFILL MASONRY
SHEAR WALLS

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing.</p> <p>Reinforced concrete slab supported on structural steel floor framing members.</p> <p>Steel decking with or without concrete fill.</p>	<p>Nonmoment-resisting steel frames.</p> <p>Unreinforced masonry walls.</p> <p>May also have moment resisting structural steel frames.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Nailing and blocking for direct shear transfer from horizontal diaphragms to shear walls or vertical bracing.</p> <p>Drag struts to collect shear from horizontal diaphragms for transfer to shear walls or vertical bracing.</p> <p>Shear studs or other connections of concrete diaphragm to steel chord members.</p> <p>Welding, shear studs, or other connections of steel deck diaphragms to structural steel framing.</p> <p>Splice detail of steel chord members.</p> <p>Beam/column connections.</p> <p>Beam/column panel joint details.</p> <p>Column splice details.</p> <p>Column base details.</p> <p>Connection of masonry walls to steel framing.</p>

TABLE A8
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 8--CONCRETE MOMENT FRAME

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
Reinforced concrete slab monolithic with reinforced concrete beams and girders.	Reinforced concrete frames.	Spread footings, piles, or drilled piers.	Diagonal wire or strut bracing of ceilings from floor or roof diaphragms. Bracing or lateral support of walls and partitions from ceilings or diaphragms. Beam/column panel joint details. Column shear reinforcement and confinement.

**TABLE A9
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 9--CONCRETE SHEAR WALLS**

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Reinforced concrete slab monolithic with reinforced concrete beams and girders.</p>	<p>Reinforced concrete shear walls.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Connection of concrete shear walls to floor or roof diaphragms.</p> <p>Development of boundary members for concrete shear walls.</p> <p>Concrete diaphragm chord details.</p>

TABLE A10
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 10--CONCRETE FRAME
WITH INFILL WALLS

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing.</p> <p>Reinforced concrete slab monolithic with reinforced concrete beams and girders.</p>	<p>Reinforced concrete frames.</p> <p>Unreinforced masonry walls.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Connection of timber floor or roof diaphragms to concrete frames.</p> <p>Connection of concrete floor or roof diaphragms to concrete frames.</p> <p>Connection of masonry walls to concrete frames.</p> <p>Beam/column joint details.</p> <p>Column shear reinforcement and confinement.</p>

**TABLE A11
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 11--PRECAST/TILT-UP CONCRETE
WALLS WITH LIGHTWEIGHT FLEXIBLE DIAPHRAGM**

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing.</p> <p>Reinforced concrete slab monolithic with reinforced concrete beams and girders.</p> <p>Steel decking with or without concrete fill.</p>	<p>Precast concrete walls.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Welding, shear studs, or other connections of steel deck diaphragms to structural steel framing.</p> <p>Connection of timber floor or roof diaphragms and precast walls.</p> <p>Connection of concrete floor or roof diaphragms to precast walls.</p> <p>Connection of steel deck floor or roof diaphragms to precast walls.</p> <p>Vertical precast panel connections.</p> <p>Tension ties or hold-down connections for precast panels.</p> <p>Diaphragm chord details for timber, steel decking, and concrete diaphragm.</p> <p>Base detail for precast panels.</p>

TABLE A12
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 12--PRECAST CONCRETE FRAMES
WITH CONCRETE SHEAR WALLS

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Reinforced concrete slab monolithic with reinforced concrete beams and girders.</p>	<p>Precast concrete frames.</p> <p>Reinforced concrete shear walls.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Connection of concrete floor or roof diaphragms to precast frames or shear walls.</p> <p>Development of boundary members for concrete shear walls.</p> <p>Beam/column joint details.</p> <p>Column shear reinforcement and confinement.</p> <p>Concrete frame splice details.</p>

TABLE A13
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 13--REINFORCED MASONRY WALLS
WITH WOOD/METAL DECK

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing.</p> <p>Steel decking with or without concrete fill.</p>	<p>Unreinforced masonry bearing walls.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Welding, shear studs, or other connections of steel deck diaphragms to structural steel framing.</p> <p>Connection of timber or steel decking floor or roof diaphragms to masonry walls.</p> <p>Tension ties or hold-downs for masonry walls.</p>

TABLE A14
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 14--REINFORCED MASONRY WALLS
WITH PRECAST CONCRETE DECK

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
Precast concrete units (planks, cored slabs, tees, etc.)	Reinforced masonry walls.	Spread footings, piles, or drilled piers.	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Connection of precast floor or roof units to shear walls.</p> <p>Connections between adjacent precast floor or roof units.</p> <p>Tension ties or hold-downs for masonry walls.</p>

TABLE A15
STRUCTURAL ELEMENTS OF COMMON BUILDING TYPE 15--UNREINFORCED
MASONRY BEARING WALLS

Floor or Roof Diaphragm	Vertical-Resisting Elements	Foundations	Connections
<p>Timber framing with plywood, straight-laid, or diagonal sheathing.</p> <p>Reinforced concrete slab supported on structural steel floor framing members.</p> <p>Reinforced concrete slab monolithic with reinforced concrete beams and girders.</p>	<p>Unreinforced masonry walls.</p>	<p>Spread footings, piles, or drilled piers.</p>	<p>Diagonal wire or strut bracing of ceilings from floor or roof diaphragms.</p> <p>Bracing or lateral support of walls and partitions from ceilings or diaphragms.</p> <p>Connection of timber or concrete floor or roof diaphragms to masonry walls.</p> <p>Development of diaphragm chords in timber or concrete floor or roof diaphragms.</p> <p>Tension ties or hold-downs for masonry walls.</p>

APPENDIX B

SUMMARY OF STRENGTHENING TECHNIQUES

The deficiencies and alternative strengthening techniques discussed in Chapter 3 are summarized here as follows:

Table B1	Moment Resisting Systems Steel Moment Frames Concrete Moment Frames Moment Frames with Infill Walls Precast Concrete Moment Frames
Table B2	Shear Walls Reinforced Concrete or Reinforced Masonry Precast Concrete Unreinforced Masonry Shear Walls in Wood Frame Buildings
Table B3	Braced Frames
Table B4	Diaphragms
Table B5	Foundations
Table B6	Diaphragm to Vertical Element Connections
Table B7	Vertical Element to Foundation Connections

**TABLE B1
MOMENT RESISTING SYSTEMS**

STEEL MOMENT FRAMES	
Deficiency	Strengthening Techniques
Inadequate moment/shear capacity of beams, columns, or their connections	<ol style="list-style-type: none"> 1. Increasing the moment capacity of the members and connections by adding cover plates or other steel sections to the flanges Or by boxing members. 2. Increasing the moment and shear capacity of the members and connections by providing steel gusset plates or knee braces. 3. Reducing the stresses in the existing frames by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4. 4. Providing lateral bracing of unsupported flanges to increase capacity limited by tendency for lateral/torsional buckling. 5. Encasing the columns in concrete.
Inadequate beam/column panel zone capacity	<ol style="list-style-type: none"> 1. Providing welded continuity plates between the column flanges. 2. Providing stiffener plates welded to the column flanges and web. 3. Providing web doubler plates at the column web. 4. Reducing the stresses in the panel zone by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4.
Excessive drift	<ol style="list-style-type: none"> 1. Increasing the capacity and, hence, the stiffness of the existing moment frame by cover plates or boxing. 2. Increasing the stiffness of the beams and columns at their connections by providing steel gusset plates to form haunches. 3. Reducing the drift by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4. 4. Increasing the stiffness by encasing columns in reinforced concrete. 5. Reducing the drift by adding supplemental damping as discussed in Sec. 4.
CONCRETE MOMENT FRAMES	
Inadequate ductile bending or shear capacity in the beams or columns and lack of confinement, frequently in the joints	<ol style="list-style-type: none"> 1. Increasing the ductility and capacity by jacketing the beam and column joints or increasing the beam or column capacities. 2. Reducing the seismic stresses in the existing frames by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4. 3. Changing the system to a shear wall system by infilling the reinforced concrete frames with reinforced concrete.

TABLE B1--continued

MOMENT FRAMES WITH INFILL WALLS	
Crushing of the infill at the upper and lower corners due to the diagonal compression strut type action of the infill wall	<ol style="list-style-type: none"> 1. Eliminating the hazardous effects of the infill by providing a gap between the infill and the frame and providing out-of-plane support. 2. Treating the infill frame as a shear wall and correcting the deficiencies as described in Sec. 3.2.
Shear failure of the beam/column connection in the steel frames or direct shear transfer failure of the beam or column in concrete frames	
Tensile failure of the columns or their connections due to the uplift forces resulting from the braced frame action induced by the infill	
Splitting of the infill due to the orthogonal tensile stresses developed in the diagonal compressive strut	
Loss of infill by out-of-plane forces due to loss of anchorage or excessive slenderness of the infill wall	
PRECAST CONCRETE MOMENT FRAMES	
Inadequate capacity and/or ductility of the joints between the precast units	<ol style="list-style-type: none"> 1. Removing existing concrete in the precast elements to expose the existing reinforcing steel, providing additional reinforcing steel welded to the existing steel (or drilled and grouted), and replacing the removed concrete with cast-in-place concrete. 2. Reducing the forces on the connections by providing supplemental vertical-resisting elements (i.e., additional moment frames, braces, or shear walls) as discussed in Sec. 3.4.

**TABLE B2
SHEAR WALLS**

REINFORCED CONCRETE OR REINFORCED MASONRY SHEAR WALLS	
Deficiency	Strengthening Techniques
Inadequate shear capacity	<ol style="list-style-type: none"> 1. Increasing the effectiveness of the existing walls by filling in door or window openings with reinforced concrete or masonry. 2. Providing additional thickness to the existing walls with a poured-in-place or pneumatically applied (i.e., shotcrete) reinforced concrete overlay anchored to the inside or outside face of the existing walls. 3. Reducing the shear or flexural stresses in the existing walls by providing supplemental vertical-resisting elements (i.e., shear walls, braces, or external buttresses) as discussed in Sec. 3.4.
Inadequate flexural capacity	<ol style="list-style-type: none"> 1. Increasing the effectiveness of the existing walls by filling in door or window openings with reinforced concrete or masonry. 2. Providing additional thickness to the existing walls with a poured-in-place or pneumatically applied (i.e., shotcrete) reinforced concrete overlay anchored to the inside or outside face of the existing walls. 3. Reducing the shear or flexural stresses in the existing walls by providing supplemental vertical-resisting elements (i.e., shear walls, braces, or external buttresses) as discussed in Sec. 3.4.
Inadequate shear or flexural capacity in the coupling beams between shear walls or piers	<ol style="list-style-type: none"> 1. Eliminating the coupling beams by filling in openings with reinforced concrete. 2. Removing the existing beams and replacing with new stronger reinforced beams. 3. Adding reinforced concrete to one or both faces of the wall and providing an additional thickness to the existing wall. 4. Reducing the shear or flexural stresses in the connecting beams by providing additional vertical-resisting elements (i.e., shear walls, braces, or external buttresses) as discussed in Sec. 3.4.
PRECAST CONCRETE SHEAR WALLS	
Inadequate shear or flexural capacity in the wall panels	<ol style="list-style-type: none"> 1. Increasing the shear and flexural capacity of walls with significant openings for doors or windows by infilling the existing openings with reinforced concrete. 2. Increasing the shear or flexural capacity by adding reinforced concrete (poured-in-place or shotcrete) at the inside or outside face of the existing walls. 3. Adding interior shear walls to reduce the flexural or shear stress in the existing precast panels.

TABLE B2--continued

PRECAST CONCRETE SHEAR WALLS--continued	
<p>Inadequate interpanel shear or flexural capacity</p>	<ol style="list-style-type: none"> 1. Making each panel act as a cantilever to resist in-plane forces (by adding or strengthening tie-downs, edge reinforcement, footings). 2. Providing a continuous wall by exposing the reinforcing steel in the edges of adjacent units, adding ties, and repairing with concrete.
<p>Inadequate out-of-plane flexural capacity</p>	<ol style="list-style-type: none"> 1. Providing pilasters at and/or between the interpanel joints. 2. Adding horizontal beams between the columns or pilasters at mid-height of the wall.
<p>Inadequate shear or flexural capacity in coupling beams</p>	<ol style="list-style-type: none"> 1. Eliminating the coupling beams by filling in openings with reinforced concrete. 2. Removing the existing beams and replacing with new stronger reinforced beams. 3. Adding reinforced concrete to one or both faces of the wall and providing an additional thickness to the existing wall. 4. Reducing the shear or flexural stresses in the connecting beams by providing additional vertical-resisting elements (i.e., shear walls, braces, or external buttresses) as discussed in Sec. 3.4.2
UNREINFORCED MASONRY SHEAR WALLS	
<p>Inadequate in-plane shear and out-of-plane flexural capacity of the walls</p>	<ol style="list-style-type: none"> 1. Providing additional shear capacity by placing reinforcing steel on the inside or outside face of the wall and applying new reinforced concrete. 2. Providing additional capacity for out-of-plane lateral forces by adding reinforcing steel to the wall utilizing the center coring technique. 3. Providing additional capacity for out-of-plane lateral forces by adding thin surface treatments (e.g., plaster with wire mesh and portland cement mortar) at the inside and outside faces of existing walls. 4. Filling in existing window or door openings with reinforced concrete. 5. Providing additional shear walls at the interior or perimeter of the building or providing external buttresses.
<p>Inadequate shear capacity of the coupling beam</p>	<ol style="list-style-type: none"> 1. Filling in openings with reinforced concrete. 2. Removing existing connecting beams and replacing them with properly designed new reinforced concrete beams. 3. Providing additional shear walls at interior or perimeter of building or external buttresses.

TABLE B2--continued

SHEAR WALLS IN WOOD FRAME BUILDINGS	
Inadequate shear capacity of the wall	<ol style="list-style-type: none">1. Increasing the shear capacity by providing additional nailing to the existing finish material.2. Increasing the shear capacity by adding plywood sheathing to one or both sides of the wall.3. Reducing the loads on the wall by providing supplemental shear walls to the interior or perimeter of the building.
Inadequate uplift or hold-down capacity of the wall	<ol style="list-style-type: none">1. Increasing the tensile capacity of the connections at the edge of the shear walls by providing metal connectors.2. Reducing the overturning moments by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.

**TABLE B3
BRACED FRAMES**

STEEL CONCENTRICALLY BRACED FRAMES (including chevron or K-bracing)	
Deficiency	Strengthening Techniques
Inadequate lateral force capacity of the bracing system governed by buckling of the compression brace	<ol style="list-style-type: none"> 1. Increasing the capacity of the braces by adding new members thus increasing the area and reducing the radius of gyration of the braces. 2. Increasing the capacity of the member by reducing the unbraced length of the existing member by providing secondary braces. 3. Providing greater capacity by removing and replacing the existing members with new members of greater capacity. 4. Reducing the loads on the braces by providing supplemental vertical-resisting elements (i.e., shear walls, braces, or eccentric bracing) as discussed in Sec. 3.4.
Inadequate capacity of the brace connection	<ol style="list-style-type: none"> 1. Increasing the capacity of the connections by additional bolting or welding. 2. Increasing the capacity of the connections by removing and replacing the connection with members of greater capacity. 3. Reducing the loads on the braces and their connections by providing supplemental vertical-resisting elements (i.e., shear walls, braces, or eccentric bracing) as discussed in Sec. 3.4.
Inadequate axial load capacity in the columns or beams of the bracing system	<ol style="list-style-type: none"> 1. Providing additional axial load capacity by adding cover plates to the member flanges or by boxing the flanges. 2. Providing additional axial load capacity by jacketing the existing members with reinforced concrete. 3. Reducing the loads on the beams and columns by providing supplemental vertical-resisting elements (i.e., shear walls, braces, or eccentric bracing) as discussed in Sec. 3.4.

TABLE B3--continued

ROD OR OTHER TENSION BRACING	
<p>Inadequate tension capacity of the rod, tensile member, or its connection</p>	<ol style="list-style-type: none"> 1. Increasing the capacity by strengthening the existing tension members. 2. Increasing the capacity by removing the existing tension members and replacing with new members of greater capacity. 3. Increasing the capacity by removing the existing tension member and replacing it with diagonal or X-bracing capable of resisting compression as well as tension forces. 4. Reducing the forces on the existing tension members by providing supplemental vertical-resisting elements (i.e., additional tension rods) as discussed in Sec. 3.4.
<p>Inadequate axial capacity of the beams or columns in the bracing system</p>	<ol style="list-style-type: none"> 1. Increasing the axial capacity by adding cover plates to the existing flanges or by boxing the existing flanges. 2. Reducing the forces on the existing columns or beams by providing supplemental vertical-resisting elements (i.e., braced frames or shear walls) as discussed in Sec. 3.4.
ECCENTRIC BRACING	
<p>Nonconformance with current design standards</p>	<ol style="list-style-type: none"> 1. Ensuring that the system is balanced (i.e., there is a link beam at one end of each brace), the brace and the connections are designed to develop shear or flexural yielding in the link, the connection is a full moment connection, where the link beam has an end at a column, and lateral bracing is provided to prevent out-of-plane beam displacements that would compromise the intended action. 2. Providing supplemental vertical-resisting elements such as additional eccentric braced frames.

**TABLE B4
DIAPHRAGMS**

TIMBER DIAPHRAGMS (straight-laid or diagonal sheathing or plywood)	
Deficiency	Strengthening Techniques
Inadequate shear capacity of the diaphragm	<ol style="list-style-type: none"> 1. Increasing the capacity of the existing timber diaphragm by providing additional nails or staples with due regard for wood splitting problems. 2. Increasing the capacity of the existing timber diaphragm by means of a new plywood overlay. 3. Reducing the diaphragm span through the addition of supplemental vertical-resisting elements (i.e., shear wall or braced frames) as discussed in Sec. 3.4.
Inadequate chord capacity of the diaphragm	<ol style="list-style-type: none"> 1. Providing adequate nailed or bolted continuity splices along joists or fascia parallel to the chord. 2. Providing a new continuous steel chord member along the top of the diaphragm. 3. Reducing the stresses on the existing chords by reducing the diaphragms, span through the addition of new shear walls or braced frames as discussed in Sec. 3.4.
Excessive shear stresses at diaphragm openings or at plan irregularities	<ol style="list-style-type: none"> 1. Reducing the local stresses by distributing the forces along the diaphragm by means of drag struts. 2. Increasing the capacity of the diaphragm by overlaying the existing diaphragm with plywood and nailing the plywood through the sheathing at the perimeter of the sheets adjacent to the opening or irregularity. 3. Reducing the diaphragm stresses by reducing the diaphragm spans through the addition of supplemental shear walls or braced frames as discussed in Sec. 3.4.
Inadequate stiffness of the diaphragm resulting in excessive diaphragm deformations	<ol style="list-style-type: none"> 1. Increasing the stiffness of the diaphragm by the addition of a new plywood overlay. 2. Reducing the diaphragm span and hence reducing the displacements by providing new supplemental vertical-resisting elements such as shear walls or braced frames as discussed in Sec. 3.4.
CONCRETE DIAPHRAGMS (monolithic concrete diaphragms--i.e., reinforced concrete or post-tensioned concrete)	
Inadequate in-plane shear capacity of the concrete diaphragm	<ol style="list-style-type: none"> 1. Increasing the shear capacity by overlaying the existing concrete diaphragm with a new reinforced concrete topping slab. 2. Reducing the shear in the existing concrete diaphragm by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

TABLE B4--continued

<p>Inadequate diaphragm chord capacity</p>	<ol style="list-style-type: none"> 1. Increasing the flexural capacity by removing the edge of the diaphragm slab and casting a new chord member integral with the slab. 2. Adding a new chord member by providing a new reinforced concrete or steel member above or below the slab and connecting the new member to the existing slab with drilled and grouted dowels or bolts as discussed in Sec. 3.5.4.3. 3. Reducing the existing flexural stresses by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.
<p>Excessive shear stresses at the diaphragm openings or plan irregularities</p>	<ol style="list-style-type: none"> 1. Reducing the local stresses by distributing the forces along the diaphragm by means of structural steel or reinforced concrete elements cast beneath the slab and made integral through the use of drilled and grouted dowels. 2. Increasing the capacity of the concrete by providing a new concrete topping slab in the vicinity of the opening and reinforcing with trim bars. 3. Removing the stress concentration by filling in the diaphragm opening with reinforced concrete. 4. Reducing the shear stresses at the location of the openings by adding supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

TABLE B4--continued

POURED GYPSUM DIAPHRAGMS	
<p>Inadequate in-plane shear capacity of the concrete diaphragm</p>	<ol style="list-style-type: none"> 1. Increasing the shear capacity by overlaying the existing concrete diaphragm with a new reinforced concrete topping slab. 2. Reducing the shear in the existing concrete diaphragm by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4. 3. Increasing the flexural capacity by removing the edge of the diaphragm slab and casting a new chord member integral with the slab. 4. Adding a new chord member by providing a new reinforced concrete or steel member above or below the slab and connecting the new member to the existing slab with drilled and grouted dowels or bolts as discussed in Sec. 3.5.4.3.
<p>Inadequate diaphragm chord capacity</p>	<ol style="list-style-type: none"> 5. Reducing the existing flexural stresses by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4. 6. Reducing the local stresses by distributing the forces along the diaphragm by means of structural steel or reinforced concrete elements cast beneath the slab and made integral through the use of drilled and grouted dowels.
<p>Excessive shear stresses at the diaphragm openings or plan irregularities</p>	<ol style="list-style-type: none"> 7. Increasing the capacity of the concrete by providing a new concrete topping slab in the vicinity of the opening and reinforcing with trim bars. 8. Removing the stress concentration by filling in the diaphragm opening with reinforced concrete. 9. Reducing the shear stresses at the location of the openings by adding supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4. 10. Adding a new horizontal bracing system may be the most effective strengthening alternative.
PRECAST CONCRETE DIAPHRAGMS (precast or post-tensioned concrete planks, tees, or cored slabs)	
<p>Inadequate in-plane shear capacity of the connections between the adjacent units</p>	<ol style="list-style-type: none"> 1. Replacing and increasing the capacity of the existing connections by overlaying the existing diaphragm with a new reinforced concrete topping slab. 2. Reducing the shear forces on the diaphragm by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.
<p>Inadequate diaphragm chord capacity</p>	<ol style="list-style-type: none"> 1. Providing a new continuous steel member above or below the steel slab and connecting the new member to the existing slab with bolts. 2. Removing the edge of the diaphragm and casting a new chord member integral with the slab. 3. Reducing the diaphragm chord forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

TABLE B4--continued

PRECAST CONCRETE DIAPHRAGMS--continued	
Excessive in-plane shear stresses at diaphragm openings or plan irregularities	<ol style="list-style-type: none"> 1. Reducing the local stresses by distributing the forces along the diaphragm by means of concrete drag struts cast beneath the slab and made integral with the existing slab with drilled and grouted dowels. 2. Increasing the capacity by overlaying the existing slab with a new reinforced concrete topping slab with reinforcing trim bars in the vicinity of the opening. 3. Removing the stress concentration by filling in the diaphragm opening with reinforced concrete. 4. Reducing the shear stresses at the location of the openings by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.
STEEL DECK DIAPHRAGMS (steel decking on steel framing)	
Inadequate in-plane shear capacity which may be governed by the capacity of the welding to the supports or the capacity of the seam welds between the deck units	<ol style="list-style-type: none"> 1. Increasing the steel deck shear capacity by providing additional welding. 2. Increasing the deck shear capacity of unfilled steel decks by adding a reinforced concrete fill or overlaying with concrete filled steel decks a new topping slab. 3. Increasing the diaphragm shear capacity by providing a new horizontal steel bracing system under the existing diaphragm. 4. Reducing the diaphragm shear stresses by providing supplemental vertical-resisting elements to reduce the diaphragm span as discussed in Sec. 3.4.
Inadequate diaphragm chord capacity	<ol style="list-style-type: none"> 1. Increasing the chord capacity by providing welded or bolted continuity splices in the perimeter chord steel framing members. 2. Increasing the chord capacity by providing a new continuous steel member on top or bottom of the diaphragm. 3. Reducing the diaphragm chord stresses by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) such that the diaphragm span is reduced as discussed in Sec. 3.4.
Excessive in-plane shear stresses at diaphragm openings or plan irregularities	<ol style="list-style-type: none"> 1. Reducing the local stress concentrations by distributing the forces into the diaphragm by means of steel drag struts. 2. Increasing the capacity of the diaphragm by reinforcing the edge of the opening with a steel angle frame welded to the decking. 3. Reducing the diaphragm stresses by providing supplemental vertical-resisting elements (i.e., shear walls, braced frames or new moment frames) such that the diaphragm span is reduced as discussed in Sec. 3.4.

TABLE B4--continued

HORIZONTAL STEEL BRACING	
Inadequate force capacity of the members (i.e., bracing and floor or roof beams) and/or the connections	<ol style="list-style-type: none">1. Increasing the capacity of the existing bracing members or removing and replacing them with new members and connections of greater capacity.2. Increasing the capacity of the existing members by reducing unbraced lengths.3. Increasing the capacity of the bracing system by adding new horizontal bracing members to previously unbraced panels (if feasible).4. Increasing the capacity of the bracing system by adding a steel deck diaphragm to the floor system above the steel bracing.5. Reducing the stresses in the horizontal bracing system by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.

**TABLE B5
FOUNDATIONS**

CONTINUOUS OR STRIP WALL FOOTINGS	
Deficiency	Strengthening Techniques
Excessive soil bearing pressure due to overturning forces	<ol style="list-style-type: none"> 1. Increasing the bearing capacity of the footing by underpinning the footing ends and providing additional footing area. 2. Increasing the vertical capacity of the footing by adding new drilled piers adjacent and connected to the existing footing. 3. Increasing the soil bearing capacity by modifying the existing soil properties. 4. Reducing the overturning forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.
Excessive uplift conditions due to overturning forces	<ol style="list-style-type: none"> 1. Increasing the uplift capacity of the existing footing by adding drilled piers or soil anchors. 2. Increasing the size of the existing footing by underpinning to mobilize additional foundation and reduce soil pressures. 3. Reducing the uplift forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames) as discussed in Sec. 3.4.
INDIVIDUAL PIER OR COLUMN FOOTINGS	
Excessive soil bearing pressure due to overturning forces	<ol style="list-style-type: none"> 1. Increasing the bearing capacity of the footing by underpinning the footing ends and providing additional footing area. 2. Increasing the vertical capacity of the footing by adding new drilled piers adjacent and connected to the existing footing. 3. Reducing the bearing pressure on the existing footings by connecting adjacent footings with deep reinforced concrete tie beams. 4. Increasing the soil bearing capacity by modifying the existing soil properties. 5. Reducing the overturning forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames).
Excessive uplift conditions due to overturning forces	<ol style="list-style-type: none"> 1. Increasing the uplift capacity of the existing footing by adding drilled piers or soil anchors. 2. Increasing the size of the existing footing by underpinning to mobilize additional foundation and soil weight. 3. Increasing the uplift capacity by providing a new deep reinforced concrete beam to mobilize the dead load on an adjacent footing. 4. Reducing the uplift forces by providing supplemental vertical-resisting elements (i.e., shear walls or braced frames).

TABLE B5--continued

INDIVIDUAL PIER OR COLUMN FOOTINGS--continued	
<p>Inadequate passive soil pressure to resist lateral loads</p>	<ol style="list-style-type: none"> 1. Providing an increase in bearing area by underpinning and enlarging the footing. 2. Providing an increase in bearing area by adding new tie beams between existing footings. 3. Improving the existing soil conditions adjacent to the footing to increase the allowable passive pressure. 4. Reducing the bearing pressure at overstressed locations by providing supplemental vertical-resisting elements such as shear walls or braced frames as discussed in Sec. 3.4.
PILES OR DRILLED PIERS	
<p>Excessive tensile or compressive loads on the piles or piers due to the seismic forces combined with the gravity loads</p>	<ol style="list-style-type: none"> 1. Increasing the capacity of the foundation by removing the existing pile cap, driving additional piles and providing new pile caps of larger size. 2. Reducing the loads on overstressed pile caps by adding tie beams to adjacent pile caps and distributing the loads.
<p>Inadequate lateral force capacity to transfer the seismic shears from the pile caps and the piles to the soil</p>	<ol style="list-style-type: none"> 1. Reducing the loads on overstressed pile caps by adding tie beams to adjacent pile caps and distributing the loads. 2. Increasing the allowable passive pressure of the soil by improving the soil adjacent to the pile cap. 3. Increasing the capacity of the foundation by removing the existing pile cap, driving additional piles, and providing new pile caps of larger size. 4. Reducing loads on the piles or piers by providing supplemental vertical-resisting elements (i.e., braced frames or shear walls) and transferring forces to other foundation members with reserve capacity as discussed in Sec. 3.4.
MAT	
<p>Inadequate moment capacity to resist combined gravity plus seismic overturning forces</p>	<ol style="list-style-type: none"> 1. Increasing the mat capacity locally by providing additional reinforced concrete (i.e., an inverted column capital) doweled and bonded to the existing mat to act as a monolithic section. 2. Providing new shear walls above the mat to distribute the overturning loads and also to locally increase the section modulus of the mat.
<p>Inadequate passive soil pressure to resist sliding</p>	<ol style="list-style-type: none"> 1. Constructing properly spaced shear keys at the mat perimeter.

**TABLE B6
DIAPHRAGM TO VERTICAL ELEMENT CONNECTIONS**

CONNECTIONS OF TIMBER DIAPHRAGMS	
Deficiency	Strengthening Techniques
<p>Inadequate capacity to transfer in-plane shear at the connection of the diaphragm to interior shear walls or vertical bracing</p>	<ol style="list-style-type: none"> 1. Increasing the shear transfer capacity of the diaphragm local to the connection by providing additional nailing to existing or new blocking. 2. Reducing the local shear transfer stresses by distributing the forces from the diaphragm by providing a collector member to transfer the diaphragm forces to the shear wall. 3. Reducing the shear transfer stress in the existing connection by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.
<p>Inadequate capacity to transfer in-plane shear at the connection of the diaphragm to exterior shear walls or vertical bracing</p>	<ol style="list-style-type: none"> 1. Increasing the capacity of existing connections by providing additional nailing and/or bolting. 2. Reducing the local shear transfer stresses by distributing the forces from the diaphragm by providing chords or collector members to collect and distribute shear from the diaphragm to the shear wall or bracing. 3. Reducing the shear stress in the existing connection by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.
<p>Inadequate out-of-plane anchorage at the connection of the diaphragm to exterior concrete or masonry walls</p>	<ol style="list-style-type: none"> 1. Increasing the capacity of the connection by providing steel straps connected to the wall (using drilled and grouted bolts or through bolts for masonry walls) and bolted or lagged to the diaphragm or roof or floor joists. 2. Increasing the capacity of the connections by providing a steel anchor to connect the roof or floor joists to the walls. 3. Increasing the redundancy of the connection by providing continuity ties into the diaphragm.
<p>Inadequate tensile capacity between floors due to overturning moments</p>	<ol style="list-style-type: none"> 1. Increasing the tensile capacity of the connections at the edge of the shear walls by providing metal connectors. 2. Reducing the overturning moments by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.

TABLE B6--continued

CONNECTIONS OF CONCRETE DIAPHRAGMS	
Inadequate in-plane shear transfer capacity	<ol style="list-style-type: none"> 1. Reducing the local stresses at the diaphragm-to-wall interface by providing collector members or drag struts under the diaphragm and connecting them to the diaphragm and the wall. 2. Increasing the capacity of the existing diaphragm-to-wall connection by providing additional dowels grouted into drilled holes. 3. Reducing the shear stresses in the existing connection by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.
Inadequate anchorage capacity for out-of-plane forces in the connecting walls	<ol style="list-style-type: none"> 1. Increasing the capacity of the connection by providing additional dowels grouted into drilled holes. 2. Increasing the capacity of the connection by providing a new member above or below the slab connected to the slab with drilled and grouted bolts similar to that for providing a new diaphragm chord.

CONNECTIONS OF POURED GYPSUM DIAPHRAGMS

Inadequate in-plane shear transfer	<ol style="list-style-type: none"> 1. Providing new dowels from the diaphragm into the shear wall. 2. Removing the gypsum diaphragm and replacing it with steel decking. 3. Adding a new horizontal bracing system designed to resist all of the seismic forces.
Inadequate anchorage capacity for out-of-plane forces in the connecting walls	

CONNECTIONS OF PRECAST CONCRETE DIAPHRAGMS

Inadequate in-plane shear transfer capacity	<ol style="list-style-type: none"> 1. Increasing the capacity of the connection by providing additional welded inserts or dowels placed in drilled or grouted holes. 2. Increasing the capacity of the connection by providing a reinforced concrete overlay that is bonded to the precast units and anchored to the wall with additional dowels placed in drilled and grouted holes. 3. Reducing the forces at the connection by providing supplemental vertical-resisting elements as discussed in Sec. 3.4.
Inadequate anchorage capacity at the exterior walls for out-of-plane forces	

TABLE B6--continued

CONNECTIONS OF STEEL DECK DIAPHRAGMS WITHOUT CONCRETE FILL	
<p>Inadequate in-plane shear capacity or anchorage capacity for out-of-plane forces in walls</p>	<ol style="list-style-type: none"> 1. Increasing the capacity of the connection by providing additional welding at the vertical element. 2. Increasing the capacity of the connection by providing additional anchor bolts. 3. Increasing the capacity of the connection by providing concrete fill over the deck with dowels grouted into holes drilled into the wall. 4. Increasing the capacity of the connection by providing new steel members to effect a direct transfer of diaphragm shears to a shear wall. 5. Reducing the local stresses by providing additional vertical-resisting elements such as shear walls, braced frames, or moment frames as discussed in Sec. 3.4.
CONNECTIONS OF STEEL DECK DIAPHRAGMS WITH CONCRETE FILL	
<p>Inadequate in-plane shear capacity or anchorage capacity for out-of-plane forces in walls</p>	<ol style="list-style-type: none"> 1. Increasing the shear capacity by drilling holes through the concrete fill, and providing additional shear studs welded to the vertical elements through the decking. 2. Increasing the capacity of the connection by providing additional anchor bolts (drilled and grouted) connecting the steel support to the wall. 3. Increasing the capacity of the connection by placing dowels between the existing wall and diaphragm slab. 4. Reducing the local stresses by providing additional vertical-resisting elements such as shear walls, braced frames, or moment frames as discussed in Sec. 3.4.
CONNECTIONS OF HORIZONTAL STEEL BRACING	
<p>Inadequate in-plane shear transfer capacity</p>	<ol style="list-style-type: none"> 1. Increasing the capacity by providing larger or more bolts or by welding. 2. Reducing the stresses by providing supplemental vertical-resisting elements such as shear walls or braced frames as discussed in Sec. 3.4.
<p>Inadequate anchorage capacity when supporting concrete or masonry walls for out-of-plane forces</p>	<ol style="list-style-type: none"> 1. Increasing the capacity of the connection by providing additional anchor bolts grouted in drilled holes and by providing more bolts or welding to the bracing members.

**TABLE B7
VERTICAL ELEMENT TO FOUNDATION CONNECTIONS**

CONNECTIONS OF WOOD STUD SHEAR WALLS	
Deficiency	Strengthening Techniques
Inadequate shear capacity of the anchorage	<ol style="list-style-type: none"> 1. Increasing the shear capacity by providing new or additional anchor bolts between the sill plate and the foundation. 2. Increasing the shear capacity by providing steel angles or plates with anchor bolts connecting them to the foundation and bolts or lag screws connecting them to the sill plate or wall.
Inadequate shear capacity of cripple stud walls	<ol style="list-style-type: none"> 1. Adding plywood sheathing over the cripple studs (usually on the inside) by nailing into the floor framing and the sill plate. Anchorage of the sill plate to the foundation also must be provided.
Inadequate uplift capacity	<ol style="list-style-type: none"> 1. Increasing the capacity by providing steel hold-downs bolted to the wall and anchored to the concrete. 2. Reducing the uplift requirement by providing supplemental shear walls as discussed in Sec. 3.4.
CONNECTIONS OF METAL STUD SHEAR WALLS	
Inadequate shear capacity of the anchorage	<ol style="list-style-type: none"> 1. Provide anchor bolts, grouted in drilled holes, through sill plate of wall. 2. Provide steel angles with anchor bolts to concrete and bolts or screws to wall.
Inadequate shear capacity of cripple stud walls	<ol style="list-style-type: none"> 1. Provide plywood sheathing, nailing into cripple studs, sill plate, and first floor framing; anchor sill plate to foundation.
Inadequate uplift capacity	<ol style="list-style-type: none"> 1. Provide steel hold-down with bolts or screws to wall and anchor bolts to concrete at ends of shear wall. 2. Provide additional shear walls or vertical bracing.
CONNECTIONS OF PRECAST CONCRETE SHEAR WALLS	
Inadequate capacity to resist in-plane or out-of-plane shear forces	<ol style="list-style-type: none"> 1. Increasing the capacity of the connection by providing a new steel member connecting the wall to the foundation or the ground floor slab. 2. Increasing the capacity of the connection by adding a new thickness of concrete (either cast-in-place or shotcrete) placed against the precast wall doweling into the existing foundation or ground floor slab.

TABLE B7--continued

CONNECTIONS OF PRECAST CONCRETE SHEAR WALLS--continued	
Inadequate hold-down capacity to resist seismic overturning forces	<ol style="list-style-type: none"> 1. Increase the hold-down capacity by removing concrete at the edge of the precast unit to expose the reinforcement provide, new drilled and grouted dowels into the foundation, and pour a new concrete pilaster. 2. Reduce the uplift forces by providing supplemental vertical-resisting elements such as shear walls or braced frames as discussed in Sec. 3.4.
CONNECTIONS OF BRACED FRAMES	
Inadequate shear capacity	<ol style="list-style-type: none"> 1. Increasing the capacity by providing new steel members welded to the braced frame base plates and anchored to the slab or foundation with drilled and grouted anchor bolts. 2. Reducing the shear loads by providing supplemental steel braced frames as discussed in Sec. 3.4.
Inadequate uplift resistance	<ol style="list-style-type: none"> 1. Increasing the capacity by providing new steel members welded to the base plate and anchored to the existing foundation. 2. Reducing the uplift loads by providing supplemental steel braced frames as discussed in Sec. 3.4.
CONNECTIONS OF STEEL MOMENT FRAMES	
Inadequate shear capacity	<ol style="list-style-type: none"> 1. Increasing the shear capacity by providing steel shear lugs welded to the base plate and embedded in the foundation. 2. Increasing the shear and tensile capacity by installing additional anchor bolts into the foundation. 3. Increasing the shear capacity by embedding the column in a reinforced concrete pedestal that is bonded or embedded into the existing slab or foundation.
Inadequate flexural capacity	
Inadequate uplift capacity	

APPENDIX C

REHABILITATION EXAMPLES*

Two examples are included in this appendix to demonstrate the process of selecting appropriate seismic rehabilitation techniques: a two-story steel frame building and a two story unreinforced masonry building. Both buildings were evaluated to determine their seismic deficiencies in accordance with the *NEHRP Handbook for the Seismic Evaluation of Existing Buildings* (which includes the evaluations as Examples D1 and D6 in Appendix D).

C1 TWO-STORY STEEL FRAME BUILDING EXAMPLE

C1.1 DESCRIPTION OF BUILDING

The building is 200 ft by 340 ft in plan with 20 ft by 20 ft bays. The girders in the transverse direction are connected to the column flanges with top and bottom clip angles. The beams in the longitudinal direction are connected to the column webs with beam web connections. The floor and roof diaphragms consists of steel decking with concrete fill.

C1.2 DEFICIENCIES

Inadequate moment capacity in both directions.

C1.3 STRENGTHENING ALTERNATIVES

This building could be strengthened by providing adequate moment capacity to the existing frames, by providing new diagonal bracing, and/or by providing new shear walls

C1.3.1 Providing Adequate Moment Capacity

Assuming that the first story shear of 2,970 kips can be equally distributed to all columns, it is calculated that there is excess capacity for the columns in the transverse direction (i.e., the strong axis of the columns) but grossly inadequate capacity for the columns in the longitudinal direction (i.e., the weak axis of the columns). This indicates that it is not feasible to develop adequate frame action to resist the seismic forces in the longitudinal direction, but it is feasible in the transverse direction. The structural modifications (Figure C1.3.1) required to develop moment frame action will involve:

1. Removal of the concrete fill and steel decking over the ends of the transverse girders at the columns. (It is assumed that the steel decking is supported on secondary floor beams that frame into the transverse frame girders so that there are no adverse effects associated with removal of the decking over top flanges of these girders adjacent to the columns.)

*The American Iron and Steel Institute has written a minority opinion concerning this appendix; see page 193.

2. Addition of new vertical shear connections between the girder webs and the column flanges.
3. Removal of existing clip angles at the top and bottom flanges of the girders.
4. Addition of new moment plates welded at the top and bottom flanges of the girders.

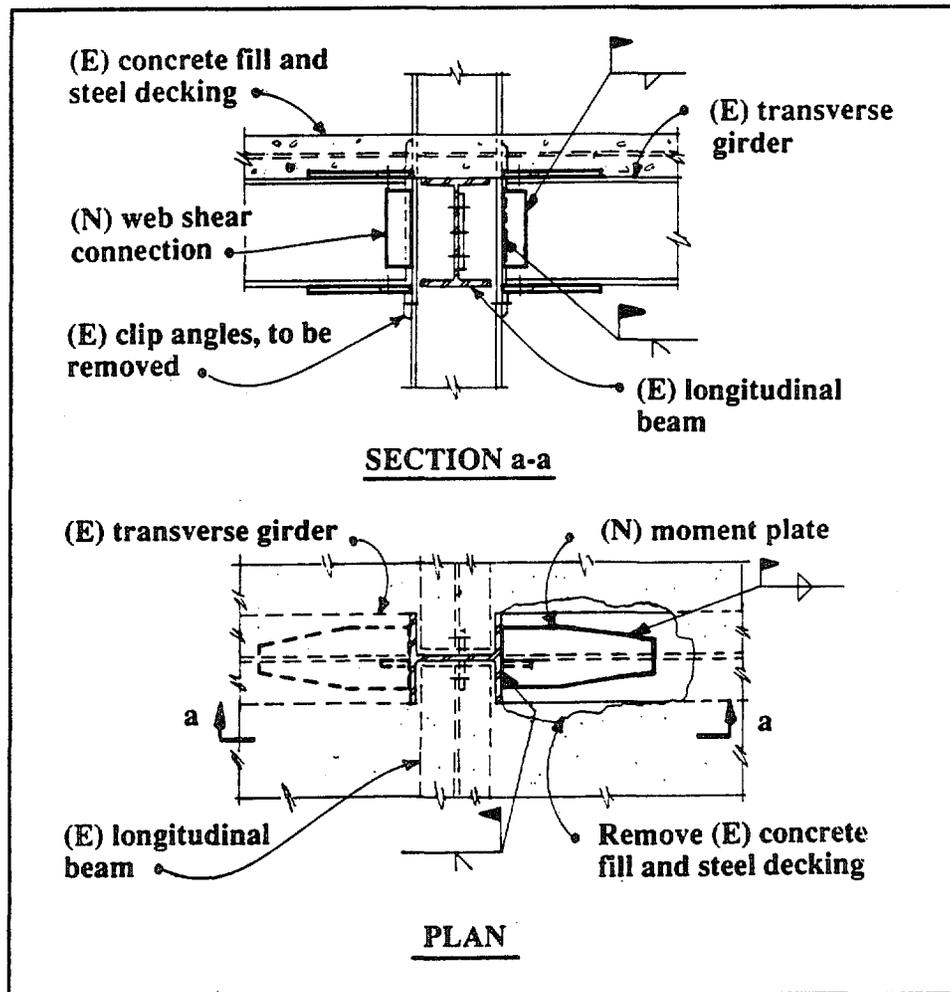


FIGURE C1.3.1 Providing moment capacity to an existing steel frame.

The design of these modifications should provide moment plates that are sized so as to yield prior to inducing yield stress in the columns. The new girder web shear connections should be sized for the gravity load shears (i.e., dead and live load) plus the shears associated with the formation of yield hinges in the moment plates. The column section of the new frame joint must be checked to determine the possible need for horizontal stiffeners opposite the girder flanges. The column web also should be checked to determine the need for doubler plates. Stiffeners probably can be fitted above or below the existing longitudinal beams at the column, but if doubler plates are required, this alternative may not be feasible because of interference with the existing longitudinal beam connection.

C1.3.2 Providing New Diagonal Bracing

Assume that diagonal bracing is to be considered for the longitudinal direction of the building. If the existing diaphragms have adequate capacity, the new bracing can be located in the exterior walls to avoid possible interference with the internal circulation within the building. If the diaphragm has inadequate capacity to transfer

the seismic shears to the exterior longitudinal walls, it probably would be more cost-effective to brace one or more of the interior longitudinal frames rather than to strengthen the diaphragm.

In the design of the vertical bracing, X-bracing will be more effective than diagonal or chevron bracing for most braced bays because the tension diagonal will provide lateral support for the compression diagonal. Many designers assume that the effective length of the compression diagonal for X-bracing may be taken as one-half of the diagonal length for the in-plane direction and two-thirds of the diagonal length for the out-of-plane direction. Since the greater L/r will govern the capacity of the brace, this leads to the use of brace members with different radii of gyration, r , about each axis.

The number of braced bays must be adequate to resist the story shears; however, in this building the story shears are not severe and can easily be resisted with only a fraction of the number of bays available in the exterior longitudinal frames. Next, the existing columns and foundations must be investigated for the overturning loads in the bracing. If it is assumed that all braces are equally loaded, it should be noted that with multiple contiguous bays of X-bracing there are no additional vertical forces in the columns and foundations except at the extreme ends of the braced bays. Therefore, if the existing columns or foundations do not have adequate capacity for the calculated overturning loads in the bracing, the engineer may be able to reduce these loads to acceptable limits by using smaller brace members and increasing the number of braced bays. The required structural modifications (Figure C1.3.2) involve:

1. Removal of the existing concrete fill and steel decking at second floor and roof levels to permit welding of gusset plate to beam flange. Since the gusset is to be welded along the center of the beam flange, only a narrow section of decking needs to be removed. Care must be taken that adequate bearing remains for the decking.
2. Welding of gusset plates to the beam/column joints and to the column/base plate joints.
3. Welding of new diagonal braces to the gusset plates.

The design of the new bracing system must include a structural investigation of the capacity of the existing columns, beams, and foundations to resist the additional forces associated with the new bracing. It should be noted that the floor beams in the braced frames are required to function as collector members to "collect" the diaphragm shears and distribute them to the braced bays. The beam-to-column connection must therefore be capable of transferring tensile or compressive forces as well as resisting the vertical reaction of the floor beams.

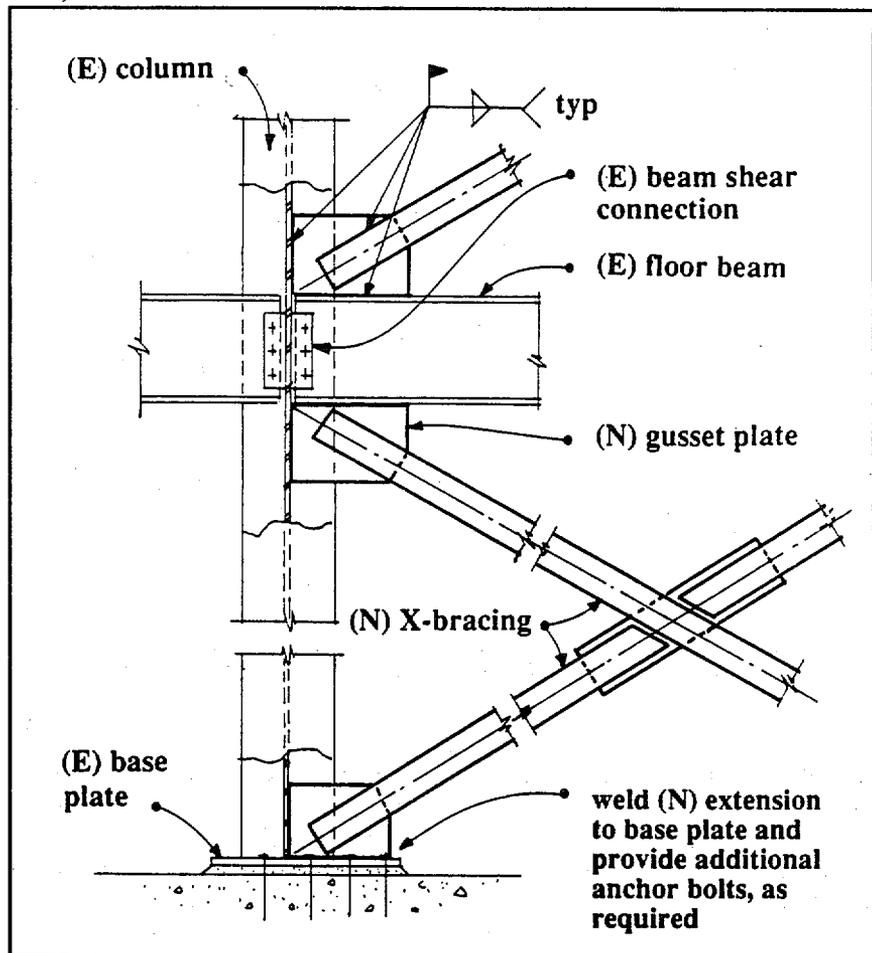


FIGURE C1.3.2 Providing new diagonal bracing to an existing steel frame.

C1.3.3 Providing New Shear Walls

New shear walls of reinforced concrete or reinforced masonry may be provided in lieu of bracing or frame action in either direction of the building. If shear walls are provided, they should be infilled bays on a column line and preferably in a location where window or door openings are not required. With infill walls, the columns can function as boundary members for overturning loads and the beams or girders as collector members for the shear walls. The shear walls probably will require new foundations and also will add significantly to the building mass, which will increase the seismic story shears.

C1.4 RELATIVE MERITS OF THE ALTERNATIVE STRENGTHENING TECHNIQUES

As indicated above, the frame columns have inadequate capacity to resist the seismic story shears in the longitudinal direction; therefore, new vertical bracing or shear walls are the available options. It appears that the bracing could be installed in the exterior longitudinal frames without strengthening the columns or the foundations whereas the shear walls probably would need new foundations and be more disruptive as well as requiring more time for construction.

In the transverse direction, providing moment capacity to the existing frames (Figure C1.3.1) appears to be feasible. It appears that this would be required for about two-thirds of the frames in the transverse direction at the second floor level and only about one-half of the frames at the roof level.

Preliminary design of the structural strengthening concepts should be performed to define the location and extent of the modifications and to size the new structural members. Relative costs for the various alternatives also should be developed and attention should be given to the other considerations described at the beginning of Chapter 3. With this information, the most appropriate seismic strengthening technique for the building can be selected.

C2 UNREINFORCED MASONRY BUILDING EXAMPLE

C2.1 DESCRIPTION OF BUILDING

This building is a two-story structure, 30 ft by 100 ft in plan. The first level has an open front at the east end and a longitudinal bearing wall on the centerline of the building. There are no crosswalls in the first level, but the second level contains apartments with many crosswalls. The roof diaphragm is constructed of diagonal timber sheathing. The floor contains finished wood flooring over timber diagonal sheathing. The existing conditions are shown in Figure C2.1.

C2.2 DEFICIENCIES

The building's deficiencies involve:

1. Torsion--The east end of the building has negligible resistance to lateral loads at the first level and constitutes a severe seismic hazard.
2. Adjacent Building--The adjacent building on the south side is not separated from the south wall and would act as a buttress for the diaphragms of the subject building. This could result in damage to both buildings.
3. Wall Stability--The gabled east and west walls at the second level are too slender (i.e., 9 in.) for the calculated out-of-plane seismic response imparted by the roof diaphragm.
4. Wall Anchorage--There is a serious inadequacy in the anchorage of all walls to the floor and roof diaphragms.

5. **In-Plane Shear Strength of Walls**--In addition to the obvious deficiency in the open east wall at the first level, there also are potential deficiencies in the remaining east and west walls at both levels.
6. **Parapet**--The 9-in. unreinforced masonry walls in the second level terminate in an unsupported 18-in. high parapet above the roof level that may be a hazard to life safety in a severe earthquake.

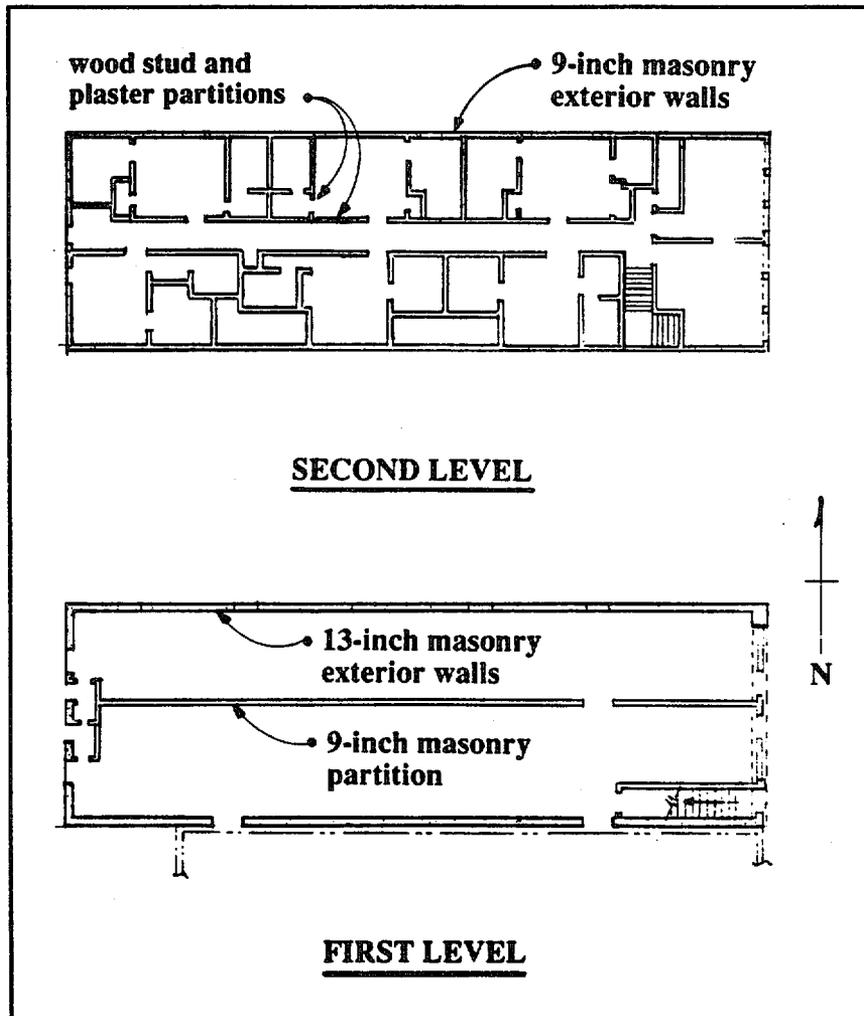


FIGURE C2.1 Existing two-story unreinforced masonry building.

C2.3 STRENGTHENING TECHNIQUES

The structural evaluation of this building was conducted using the ABK Methodology for unreinforced masonry bracing wall buildings with wood diaphragms. The recommended strengthening techniques (Figure C2.3) also follow that methodology.

C2.3.1 Torsion

The east wall of the building is deficient in both strength and stiffness. In addition, extensive wall anchors are required at both the first and second levels. Although the open front condition at the first level could be improved with either a concrete or steel moment frame, the extensive additional work required for this wall and its foundation combine to make replacement an attractive alternative.

Replacement of the existing east wall with a two-story reinforced concrete frame is the recommended strengthening alternative. Since the roof and second floor joists are supported on the longitudinal walls, shoring will not be required as the east wall is removed. Temporary lateral bracing in the north-south direction should

be utilized during the replacement of the east wall. The new second level wall would be a metal stud wall with window openings similar to the existing ones and with brick veneer to match the other brick walls, if desired.

C2.3.2 Adjacent Building

The proposed solution to the problem with the adjacent building is to provide a new reinforced concrete shear wall in the first level of the subject building. The wall would be in line with the west wall of the adjacent building. In addition to the new shear wall, three new timber cross walls will be provided in the first level (Figure C2.3) to reduce the diaphragm deflection. The shear wall, the cross walls, and their connections to the floor diaphragm will be designed in accordance with the ABK Methodology. This strengthening may not completely solve the adjacent building problem, but the new shear wall and the cross walls will significantly reduce the inertia forces transmitted to the adjacent building.

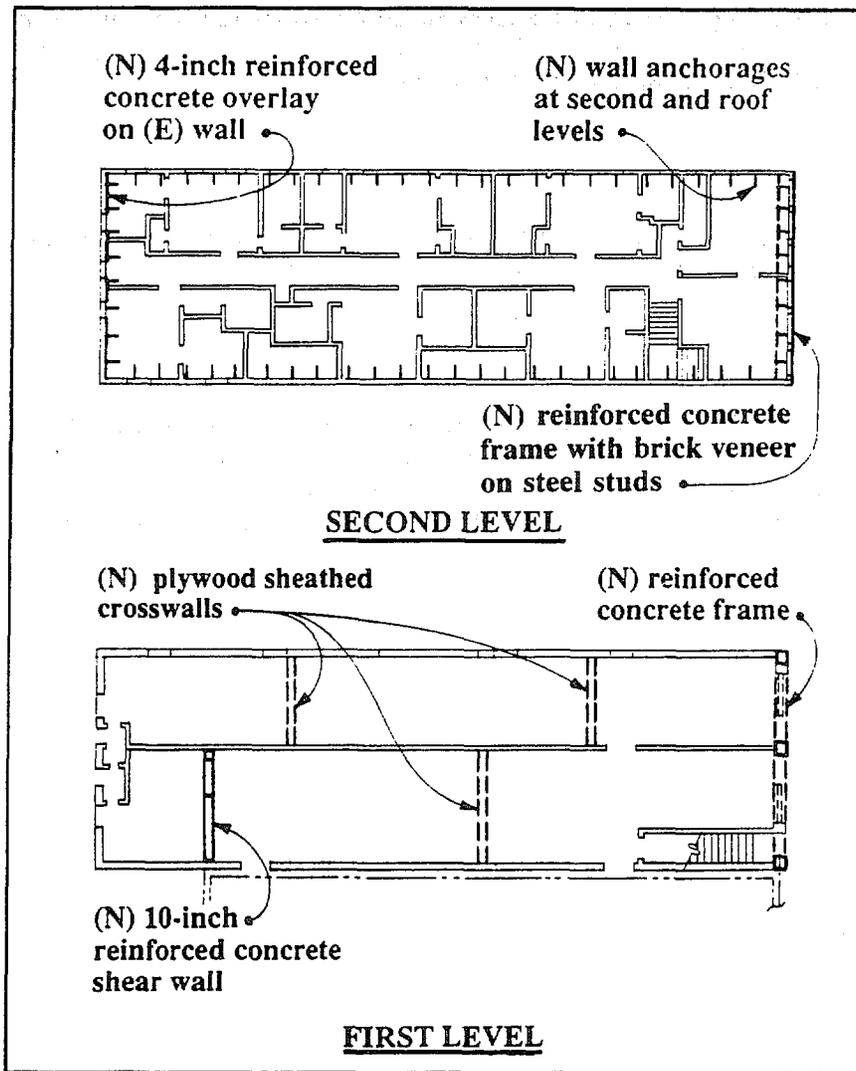


FIGURE C2.3 Proposed structural modifications.

C2.3.3 Wall Stability

The height to thickness ratio, h/t , of an unreinforced masonry wall is used as an index of the stability of the wall for the out-of-plane seismic response induced by the diaphragm. The east wall is to be replaced with a reinforced concrete wall so that the west wall in the second level is the only remaining wall with an excessive h/t ratio. The deficiency can be corrected by providing anchors at the ceiling level and bracing this anchorage up to the wood diaphragm or by designing vertical wall braces that span from the floor to the roof anchorage level.

C2.3.4 Wall Anchorage

All anchorages of masonry walls to diaphragms were found to be inadequate at both levels of the building. Supplementary anchors must be provided for the calculated anchorage. The anchors should be similar to those indicated in Figure 3.7.1.4a or b. Significantly greater allowable loads are permitted for anchors that extend through the masonry wall with a large metal washer on the outside of the wall. This type of anchor should be used in all locations where access is available to the outside face of the wall.

C2.3.5 In-Plane Shear Stress

The new reinforced concrete frame at the east wall, the new shear wall, and the new concrete overlay for the west wall at second level have eliminated the calculated in-plane overstress in the east and west walls.

C2.3.6 Parapet

The unreinforced and unbraced parapet is a life safety hazard because of its h/t ratio. It is recommended that the parapet be reduced in height by the removal of several courses of brick (i.e., 8 to 10 in.). This should be preceded by a horizontal saw cut at a mortar joint on both sides of the wall to avoid damage to the remaining brickwork. The top of the reduced parapet then should be sealed with a mortar cap to prevent intrusions of moisture into the wall.

MINORITY OPINIONS

The comments concerning this handbook presented below are included at the request of the representative of the American Iron and Steel Institute.

- Concerning Chapter 1, Sec. 1.4:

It is questioned if rehabilitation techniques need to be fully consistent with the *NEHRP Recommended Provisions* for new buildings. The *NEHRP Recommended Provisions* were developed with modern buildings as the underlying basis. Force fitting detailing provisions developed for modern structures onto older structures may overlook adequate details built into many older buildings which can provide adequate toughness.

- Concerning Chapter 3, Sec. 3.0.4:

In the 5th line of the first paragraph the word "tested" should be changed. A test implies that a structural system has been subjected to known loading conditions which is typically not the case with existing buildings.

- Concerning Chapter 3, Sec. 3.1:

We strongly object to the organization of this section. Typically when several subjects are presented the most significant is placed first. Since we are dealing with techniques of rehabilitating seismically deficient structures this section should be organized with the most significant (deficient) structures first. The scope of the section should then explain the reason for the organization of the section. For whatever reason this section has been organized with steel moment frames placed first. Steel moment frames have been observed to be one of the most reliable seismic resisting systems worldwide, the majority of which were not designed to modern seismic detailing practices.

- Concerning Chapter 4, Sec. 4.1:

Additional techniques such as reducing the weight by eliminating hollow clay tile partitions and substituting with lightweight partitions should be included.

- Concerning Appendix C:

Where a limited number of examples are to be presented they should be based upon the highest risk structural systems. Certainly steel moment frames do not fall into that category. The two most common types of seismically deficient structural systems observed in past earthquakes are unreinforced masonry and poorly detailed concrete frames. The inclusion of steel moment frames as one of two examples does not serve justice to the potential risk of the various structural systems.

The comments concerning this handbook presented below are included at the request of the representative of the American Institute of Steel Construction:

- Concerning Chapter 3:

In Sec. 3.1.1.1, modify the first sentence to read: "The principal deficiencies of ordinary steel moment frames in high seismic areas are:"

In Sec. 3.3.1.1, modify the first sentence to read: "The principal deficiencies of steel concentrically braced frames in high seismic areas are:"

Users of this document may not read the Introduction and/or Sec. 3.0.4 for a proper orientation on seismic zonation. Thus, explicit reminders in the actual design chapters are needed.

BUILDING SEISMIC SAFETY COUNCIL BOARD OF DIRECTION -- 1992

- Chairman** Gerald H. Jones, Director of Codes Administration, Kansas City, Missouri
- Vice Chairman** Allan Porush, Dames and Moore, Los Angeles, California (representing Structural Engineers Association of California)
- Secretary** Harry W. Martin, American Iron and Steel Institute, Newcastle, California
- Ex-Officio** Warner Howe, Gardner and Howe, Memphis, Tennessee
- Members**
- John C. Canestro, PE, City of Orinda, Pleasanton, California (representing the National Institute of Building Sciences)
- S. K. Ghosh, Portland Cement Association, Skokie, Illinois
- Mark B. Hogan, National Concrete Masonry Association, Herndon, Virginia
- Nestor Iwankiw, American Institute of Steel Construction, Chicago, Illinois
- H. S. "Pete" Kellam, Graham and Kellam, San Francisco, California (representing the American Society of Civil Engineers)
- Les Murphy, International Association of Fire Fighters, (representing AFL/CIO Building and Construction Trades Department)
- F. Robert Preece, Preece/Goudie & Associates, San Francisco, California, (representing Earthquake Engineering Research Institute)
- Blair Tulloch, Tulloch Construction, Inc., Oakland, California (representing the Associated General Contractors of America)
- David Tyree, National Forest Products Association, Georgetown, California
- Martin Walsh, City of St. Louis, Missouri (representing the Building Officials and Code Administrators International)
- Richard Wright, National Institute of Standards and Technology, Gaithersburg, Maryland (representing the Interagency Committee for Seismic Safety in Construction)
- Staff**
- James R. Smith, Executive Director
O. Allen Israelsen, Project Manager
Claret M. Heider, Technical Writer-Editor
Karen E. Smith, Administrative Assistant

BSSC MEMBER ORGANIZATIONS

AFL-CIO Building and Construction Trades
Department
AISC Marketing, Inc.
American Concrete Institute
American Consulting Engineers Council
American Institute of Architects
American Institute of Steel Construction
American Insurance Services Group, Inc.
American Iron and Steel Institute
American Plywood Association
American Society of Civil Engineers
Applied Technology Council
Associated General Contractors of America
Association of Engineering Geologists
Association of Major City Building Officials
Bay Area Structural, Inc.*
Brick Institute of America
Building Officials and Code Administrators
International
Building Owners and Managers Association
International
Building Technology, Incorporated*
California Geotechnical Engineers Association
Canadian National Committee on Earthquake
Engineering
Concrete Masonry Association of California and
Nevada
Concrete Reinforcing Steel Institute
Earthquake Engineering Research Institute
General Reinsurance Corporation*
Interagency Committee on Seismic Safety in
Construction
International Conference of Building Officials
Masonry Institute of America
Metal Building Manufacturers Association

National Association of Home Builders
National Concrete Masonry Association
National Conference of States on Building Codes and
Standards
National Elevator Industry, Inc.
National Fire Sprinkler Association
National Forest Products Association
National Institute of Building Sciences
National Ready Mixed Concrete Association
Permanent Commission for Structural Safety of
Buildings*
Portland Cement Association
Precast/Prestressed Concrete Institute
Rack Manufacturers Institute
Seismic Safety Commission (California)
Southern Building Code Congress International
Steel Deck Institute, Inc.
Steel Joist Institute*
Steven Winter Associates, Inc.*
Structural Engineers Association of Arizona
Structural Engineers Association of California
Structural Engineers Association of Central
California
Structural Engineers Association of Illinois
Structural Engineers Association of Northern California
Structural Engineers Association of Oregon
Structural Engineers Association of San Diego
Structural Engineers Association of Southern California
Structural Engineers Association of Utah
Structural Engineers Association of Washington
The Masonry Society
Western States Clay Products Association
Western States Council Structural Engineers
Association
Westinghouse Electric Corporation*

* Affiliate (non-voting) members.